



HOT POT CARE, USE AND SAFETY INSTRUCTIONS



TO CONSUMER: Keep this manual for future reference.

This instruction manual contains important information necessary for safe use of this product.

Read and follow all warnings and instructions before using this pot.

DO NOT DISCARD THIS INSTRUCTION MANUAL.

For outdoor use only.

Model HWP20A

LAURA'S BEST HOT CHOCOLATE

1 Box of Powdered Milk That Makes 8 Qts. 1 16 Oz Hershey Chocolate Milk Mix

1 16 Oz Dairy Creamer 1 Cup Of Powdered Sugar

In a large bowl blend mix together as a dry mix. Fill mug or cup 1/3 full with dry mix. Add hot water and stir. Add more dry mix for a richer flavor.


CLEANING AND MAINTENANCE

Clean with soap and water. Clean regularly as determined by the amount of use. Cleaning should be done where detergents won't harm patio, lawn, or the like.


CAUTION

DO NOT allow the flame to extend beyond the bottom of the pot. DO NOT heat empty pot.

Assembly of Valve and Pot

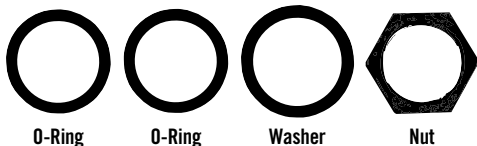

Inside of Pot

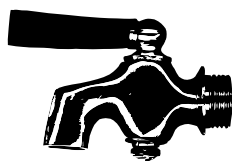

CAUTION

DO NOT OVER TIGHTEN. Tighten the nut using a wrench and holding the valve with the other hand. If overtightened the o-ring gasket may slip out causing a leak. If this happens loosen the nut, reset the o-ring gasket, and tighten.

LIMITED WARRANTY

Camp Chef No-Hassle Warranty

Here at Camp Chef we stand by our products and take pride in our customer service. Because of this, your new Camp Chef product comes with a No-Hassle Warranty. What does that mean? It means that if we did something wrong, we will make it right. We guarantee our products to be free from defect in all materials and workmanship (excluding paint and finish). We will replace defective parts so you can get back to enjoying your product as soon as possible.

Required Maintenance:

Clean your product after each use to maintain its finish and prolong its lifespan. Wipe away all grease and ashes. Keep metal products free of moisture, salts, acids and harsh fluctuations in temperature. Unfortunately, product paint and other finishes are not covered by this warranty. The exterior finish of the product will wear down over time.

Coverage Details:

Warranty does not cover normal wear of parts or damage caused by misuse, abuse, overheating and alteration. No alterations are covered in this warranty. Camp Chef is not responsible for any loss due to neglectful operation. Furthermore, this warranty does not cover items purchased from a 3rd party company, unauthorized dealers, or damages caused by natural disasters such as earthquakes, hurricanes, tornadoes, floods, lightning, fires, etc.

Upon the expiration of this warranty, all such liability will terminate. No other warranties are expressed or implied.

Please keep all original sales receipts from the authorized dealer. Proof of purchase is required to obtain warranty services. Any parts or products returned without written authorization will be discarded without notice.

To obtain warranty services submit a warranty request at <http://www.campchef.com/warranty-information>, email warranty@campchef.com, or call 1.800.650.2433. Our Product Specialists are happy to help.

Warranty applies to the contiguous U.S. states only.

WARRANTY COVERAGE PERIODS

Pellet Grills & Stoves	1 year from purchase date
Fire Pits	1 year from purchase date
Water Heaters	1 year from purchase date
Movie Screens	1 year from purchase date
All other items & accessories	90 days from purchase date

Extended warranty available on select models