


Tommy Bahama®

OUTDOOR LIVING

ASSEMBLY INSTRUCTIONS

3401-959 Screen

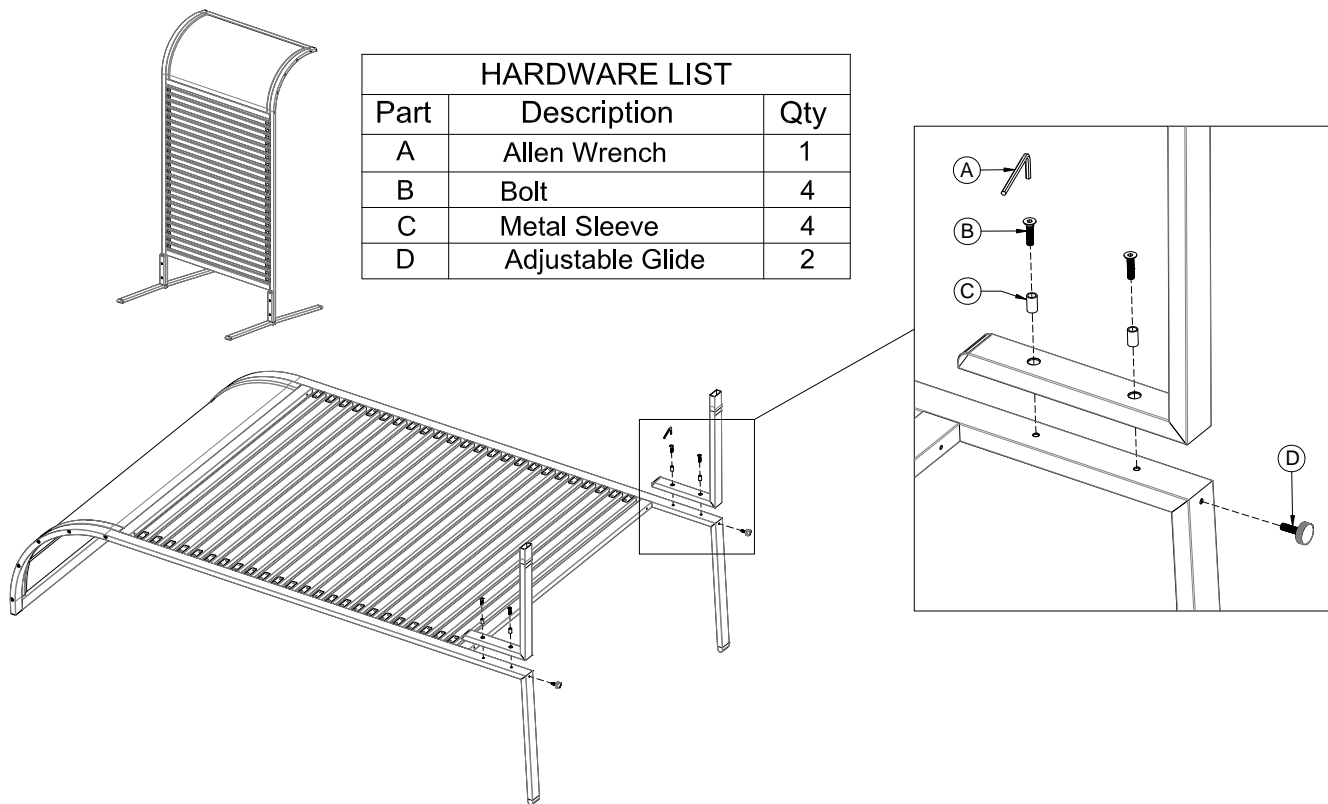

1. Position one foot so that holes on foot align with holes on base of screen.
2. Slide (2) metal sleeves (C) through holes in foot and into holes in base.
3. Use Allen wrench (A) to attach foot to base with (2) bolts (B). Fully tighten bolts.
4. Insert adjustable glide (D) into hole in bottom of base. Twist glide to tighten into place.
5. Repeat steps 1-4 for other foot on other end of screen base.
6. Return screen to its upright position and place in desired location.
7. To level screen, lean base forward to access adjustable glides. Twist glides clockwise to lower and counter-clockwise to raise screen until level.

For additional consumer assistance please contact your Tommy Bahama Outdoor Living dealer or call our Consumer Services Department at 1-336-474-5444, Monday-Friday, 8-5 Eastern