



Napa Valley Fire Pit Table

Installation Instructions



Contents

Contents.....	2
Required Tools.....	3
Placing and Assembling the Table.....	4
Gas Connection.....	5
Igniter Installation.....	6

Required Tools



- **Utility Knife**

To cut and remove packaging



- **2 Open Ended Wrenches**

To make gas connections



- **Leather Gloves**

To protect hands from rough edges found on the coffee table.




- **One (1) AAA Battery (not included)**

Required for piezoelectric igniter installation.


Included:



Tabletop frame

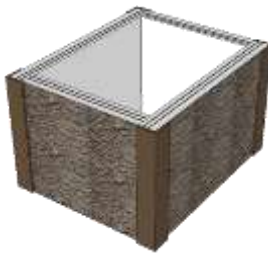

Base

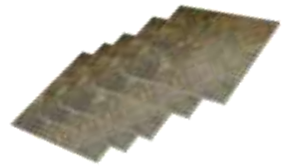

Tiles (x10)



Bracket (x4)



Screw (x16)



Placing and Assembling the Fire Pit table

1. Remove all components from packaging and inspect for damage or missing parts.
2. Move the base to desired location and set into place.
 - When locating your coffee table, refer to the Crystal Fire manual and maintain clearance to combustibles.

3. Place top on base as shown, making sure it is centered in both directions.



4. Line top up with base as shown. Place brackets in marked locations and insert 4 screws into each bracket.

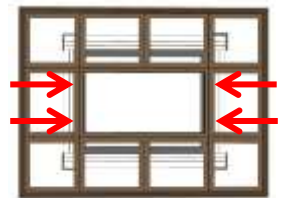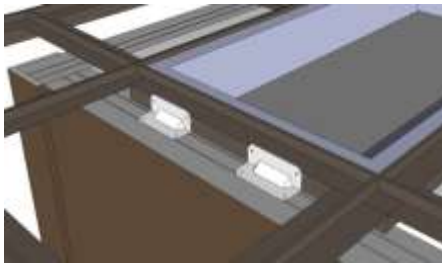


5. With top securely fastened to base, set tiles into place.



Read and understand your Crystal Fire owner's manual before beginning burner hookups or using the device.

Gas Connection

1. With proper orifice installed for the application and metal flex hose attached (see burner owner's manual) set burner in base with burner neck pointed toward the control panel.
 2. Connect the incoming gas hose to the valve and tighten securely. Repeat with flexible metal gas line from the valve to the underside of burner. It is not recommended to use Teflon tape or pipe dope on the connection to the valve with flare fittings.
- LPG installations use the hose and regulator provided with the burner.
 - For Natural Gas hookup information and any other info not listed here consult your Crystal Fire owner's manual.

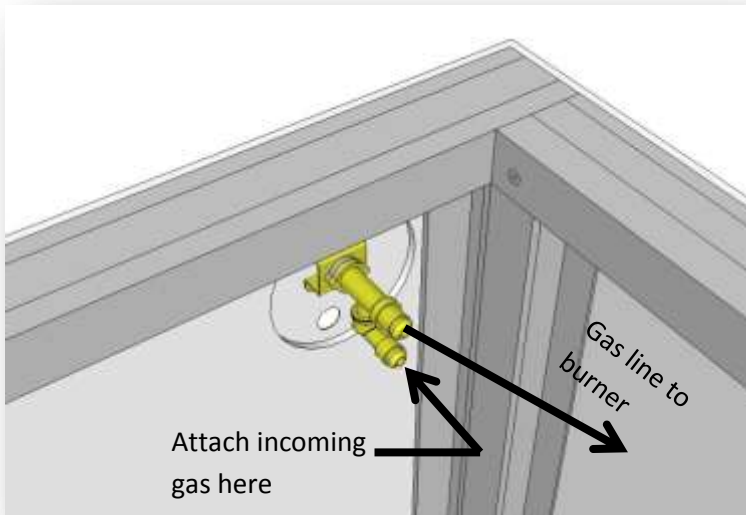


Igniter Installation

(If your igniter only has one port on the back, please ignore instructions for grounding. Your igniter is a self-grounding model)


1. Make sure the valve is in the OFF position



2. Unscrew sparker cap and hex nut (sparker included with burner). Install as shown below.

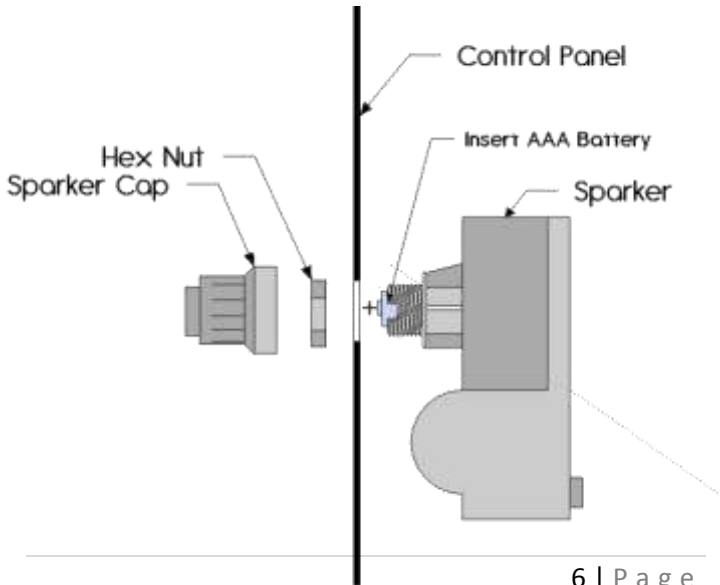

3. To properly install ignition system (in some models) , a spark and ground wire need to be attached to the igniter box.
 - Start by plugging the black wire hanging from the burner in to one side of the back of the igniter.
 - Plug the included grounding wire in to the back of the spark box. The free end of the grounding wire should be secured to the underside of the burner by loosening one of the nuts on the bottom of the burner and inserting the plug as shown before re-tightening the nut.

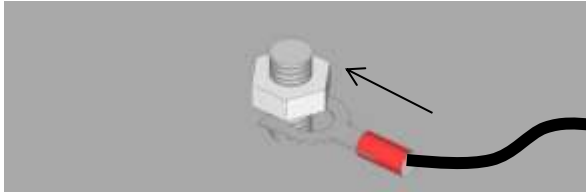

- Test system by depressing the button on the igniter. A continuous repeating spark between the igniter electrode and spark-receiving probe means everything is connected properly. Consult the troubleshooting section of your crystal fire owner's manual if spark is weak, intermittent, or not present.
4. Once ignition system is grounded and gas connections are secured and checked for leaks, set the burner back into its original position if it was removed during gas hookup.


Locating your Tank

1. Your tank should be positioned so that the fuel can be shut off after each use.
2. Slide the tank into the framework past the line shown below (table style may vary). This is to allow the door to close completely.
3. Confirm all hoses are clear and not touching the burner.



Position tank behind this line

Door Installation

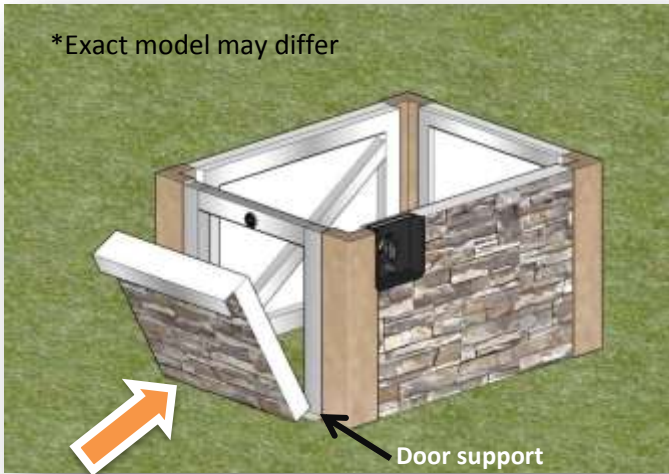

Set door on supports and close.

Magnet will hold door in closed position.

Finishing touches

Once fire pit is set up and in the desired position, scatter decorative glass on burner surface forming an even layer of beads.

- **DO NOT BURN WITHOUT GLASS OR OTHER DECORATIVE SUBSTRATE PRESENT**

IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to hooking up your linear burner, including safety information, proper tightening of connections with two wrenches and full burner setup and lighting instructions.

DO NOT ATTEMPT TO INSTALL CF-1224 BURNER WITHOUT FIRST CONSULTING THE MANUAL. IF YOU ARE UNSURE OF HOW TO COMPLETE THE STEPS OUTLINED, CONSULT A QUALIFIED TECHNICIAN

WARNING

After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks

Warranty: Fire pit tables are covered under a 1-year manufacturer's warranty. Please visit <http://www.outdoorrooms.com/warranty-form> to register your product.

© 2012 The Outdoor GreatRoom Company

2015 Silver Bell Road • Suite 195 • Eagan, MN 55122
Toll Free: 1-866-303-4028 • Sales@OutdoorRooms.com