


Arabella Aluminum Dining Chair

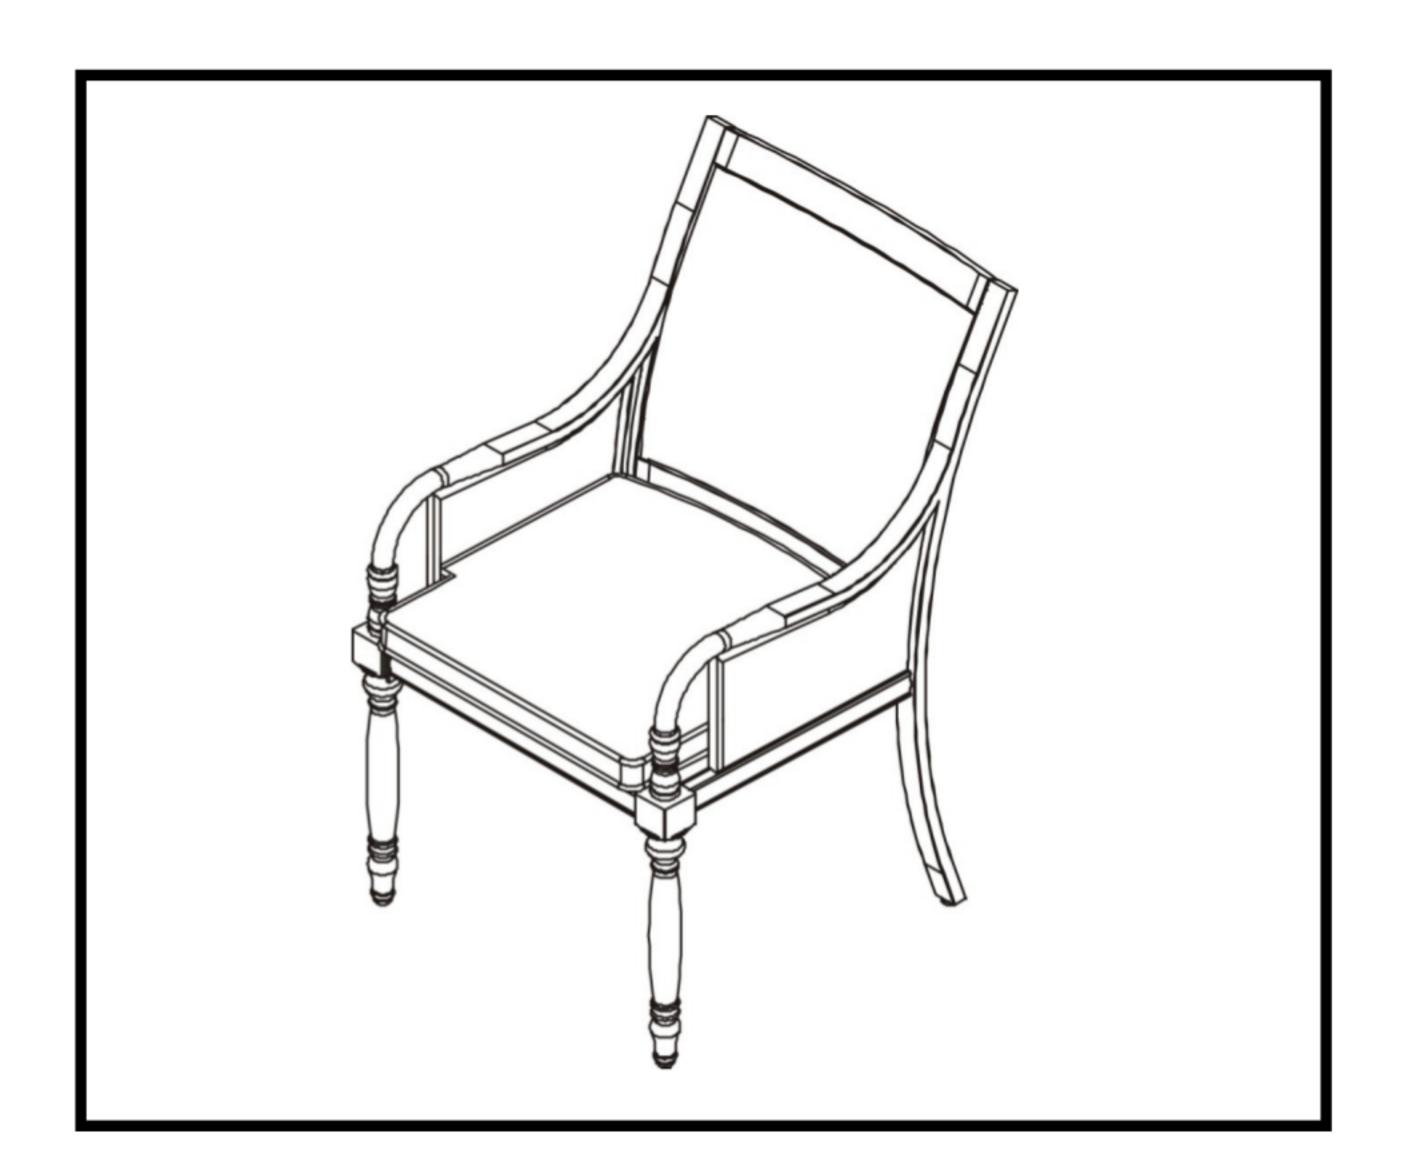

Customer Service CustomerService@ShoppersChoice.com

Monday-Friday 7-9, Sat. 9-3, Sun.12-6 CST Toll Free: 1-877-743-2269 www.ShoppersChoice.com

WARNING

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY. To assemble, place the chair on a non-abrasive flat surface to prevent scratching.

PARTS LIST


PART	DESCRIPTION	PICTURE	QTY
A	Left arm		4
В	Right arm		4
C	Chair seat		4
D	Chair back		4
E	Bolt (1/4X1.181")		24
F	Bolt (1/4X1.575")		16
G	Lock washer		40
Н	Flat washer		40

PART	DESCRIPTION	PICTURE	QTY
I	Bolt(5/16X 0.984")		8
J	Lock washer		8
K	Flat washer		8
L	Bolt cover		40
M	Large bolt cover		8
N	Wrench		2
О	Seat cushion		4

Attach the chair back (D) to left arm (A) by inserting bolts (E) through lock washers (G) and flat washers (H). Do not tighten the bolts at this point.

Using bolt (I), lock washer (J) and flat washer (K) attach the front chair seat joint to the front left arm leg. Do not tighten the bolt at this point.

Next attach the chair seat (C) to left arm (A) by inserting bolts (F) through lock washers (G) and washers (H). Do not tighten the bolts at this point.

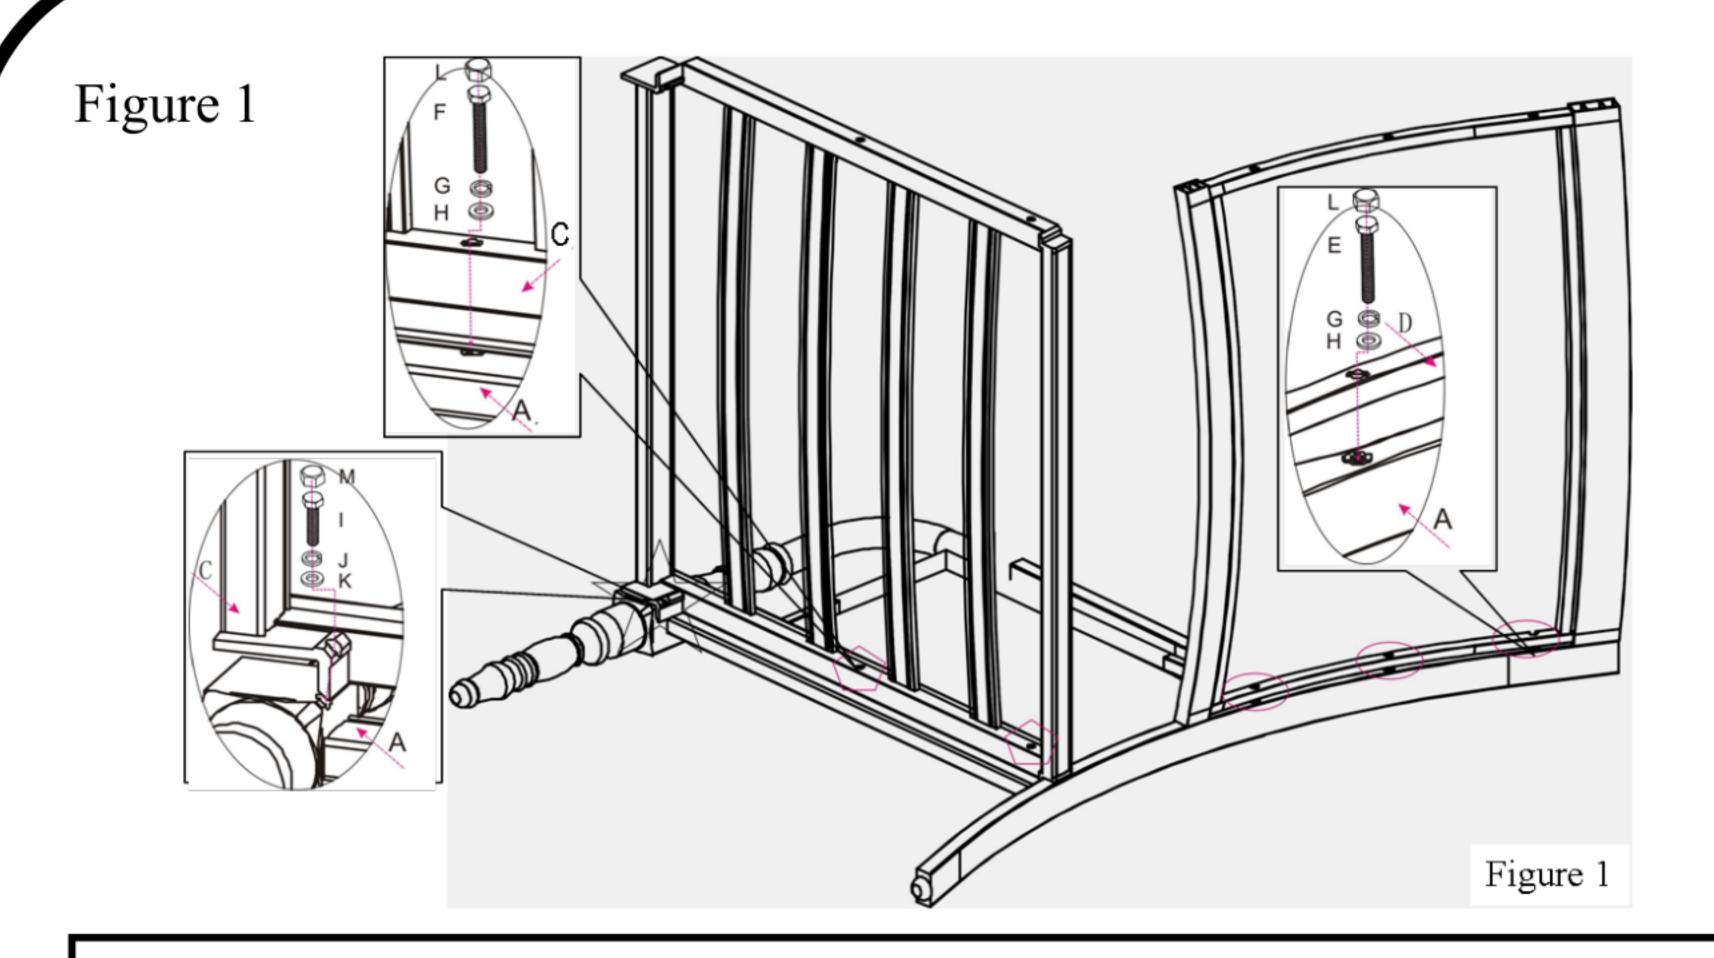

Repeat the steps in figure 1 to assemble the right arm (B). Once all pieces are assembled and tighten all bolts with wrench (N), and cover using bolt covers (L) and large bolt covers (M).

Turn the chair into an upright position and place the seat cushion (O) on the chair.

The Dining chair is ready for your enjoyment.

(Figure 2)

