


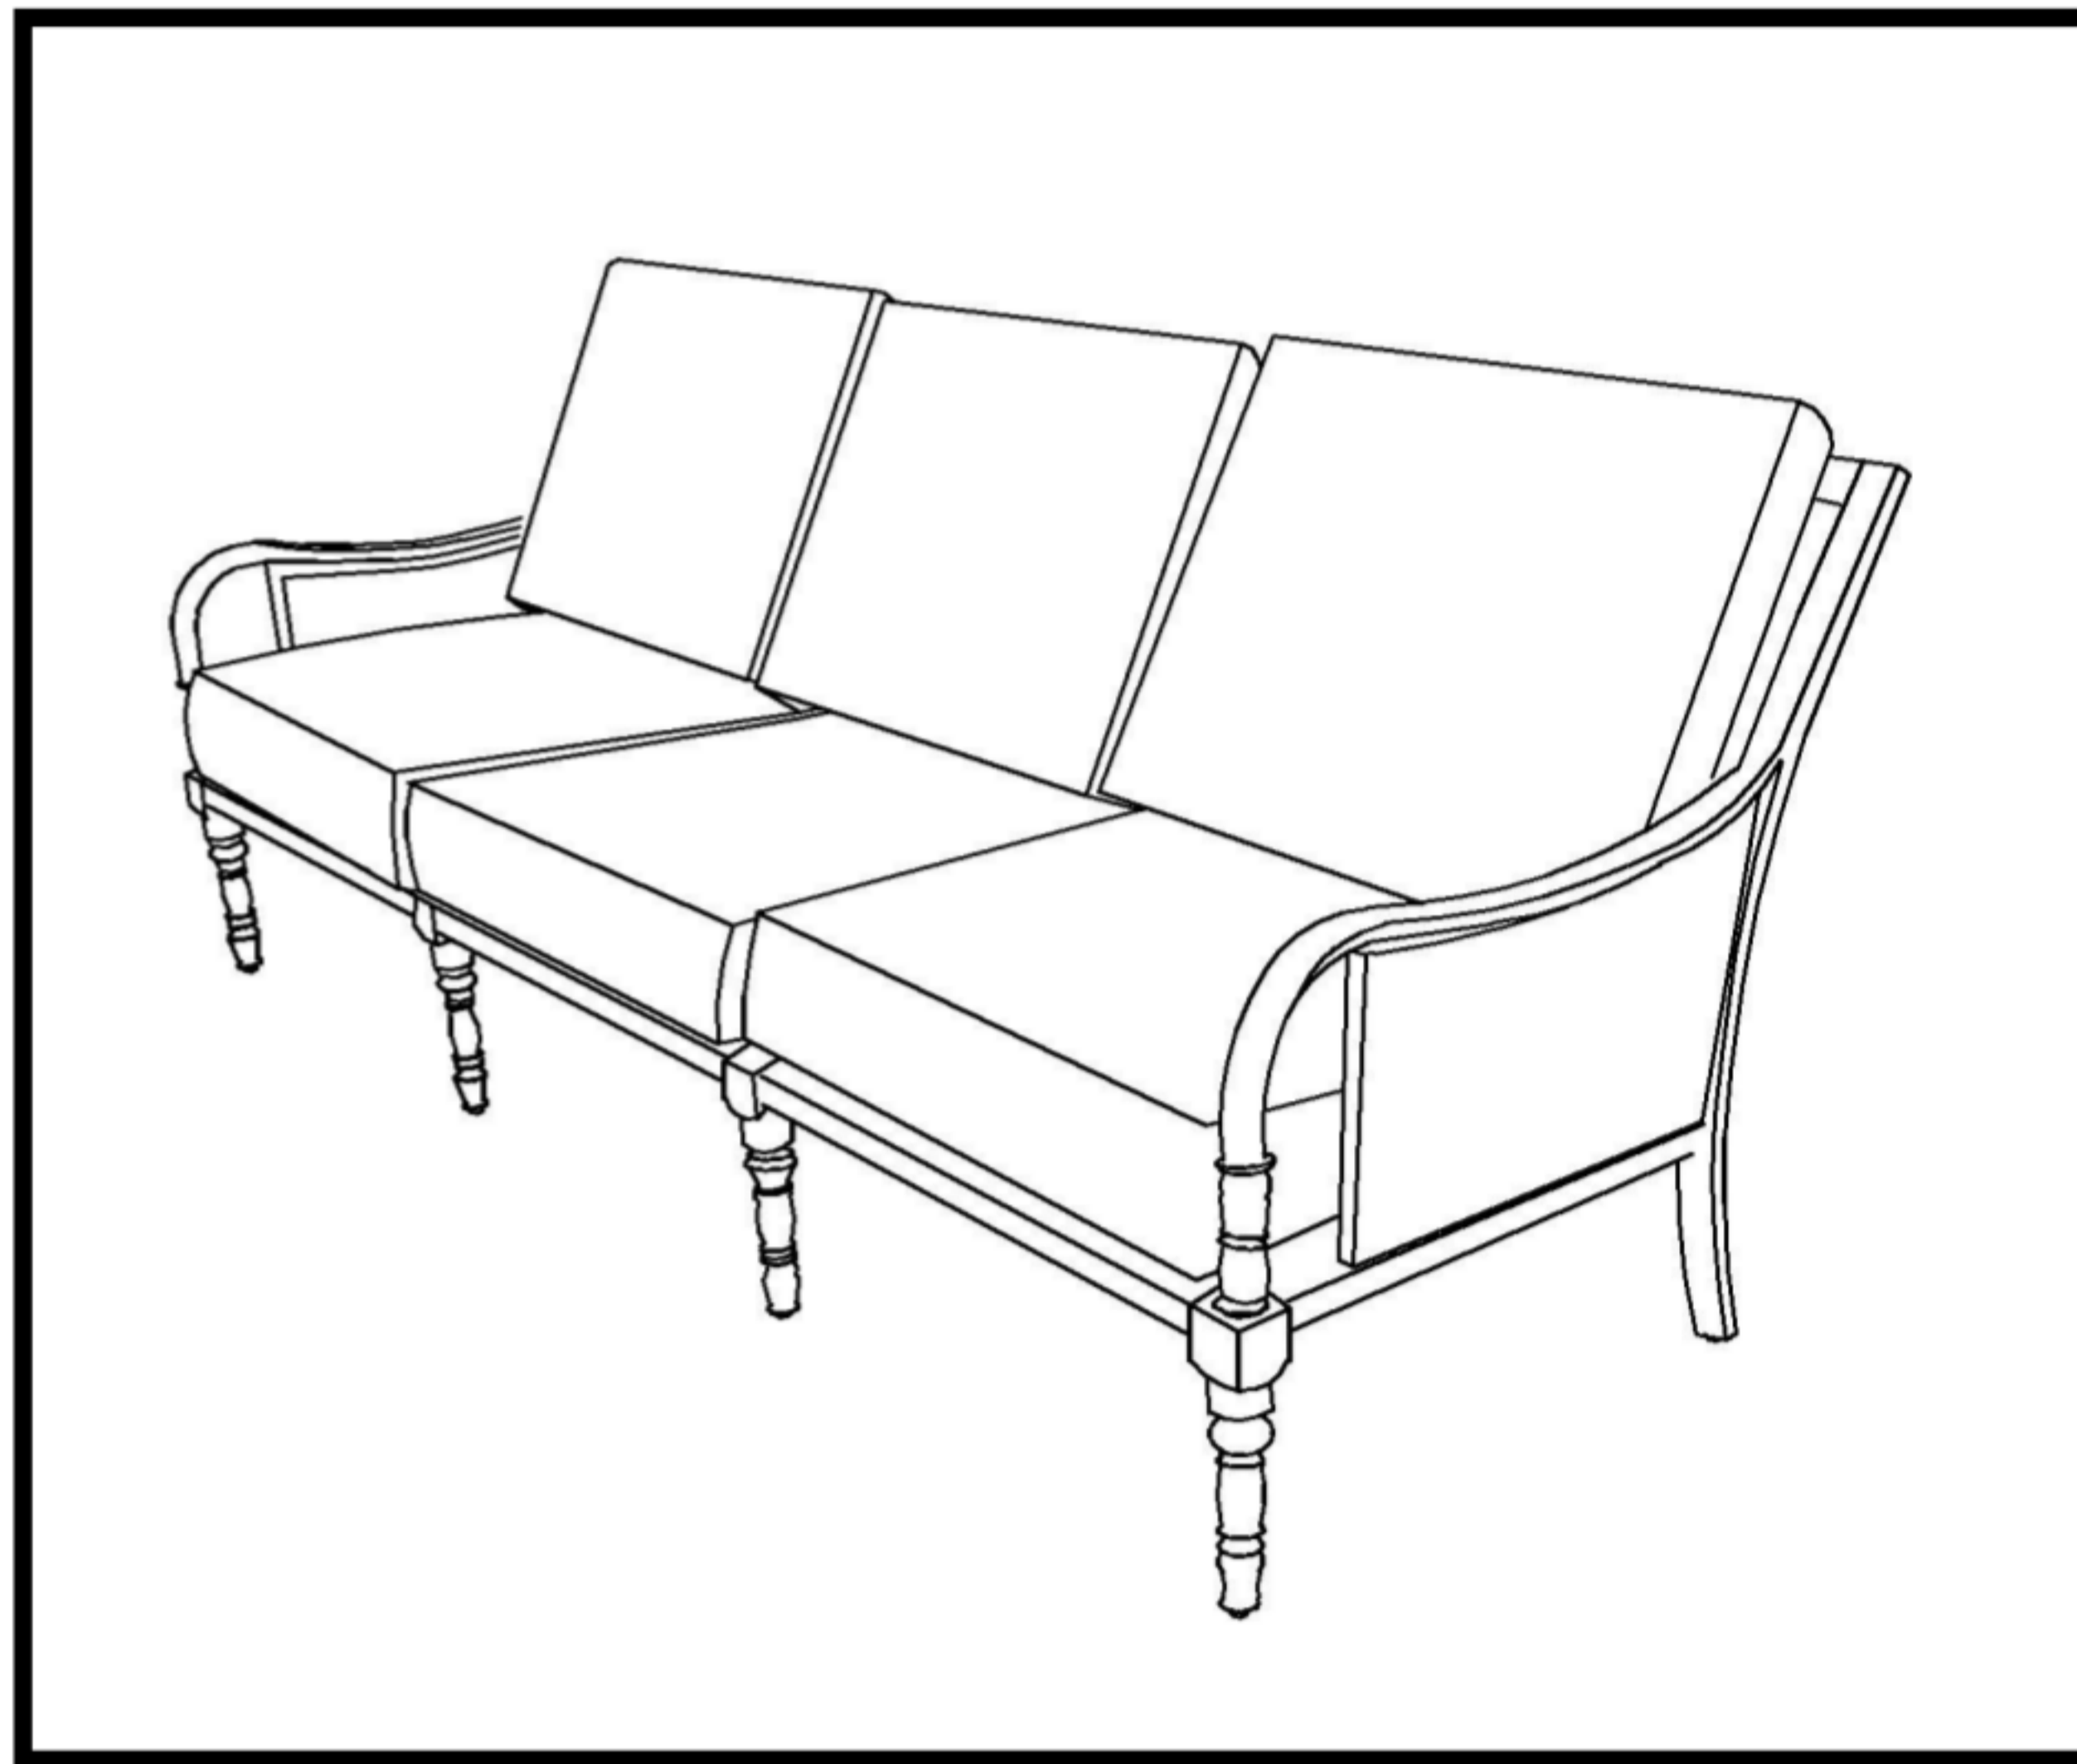

Arabella Sofa



Customer Service

CustomerService@ShoppersChoice.com

Monday-Friday 7-9, Sat. 9-3, Sun. 12-6 CST

Toll Free: 1-877-743-2269

www.ShoppersChoice.com


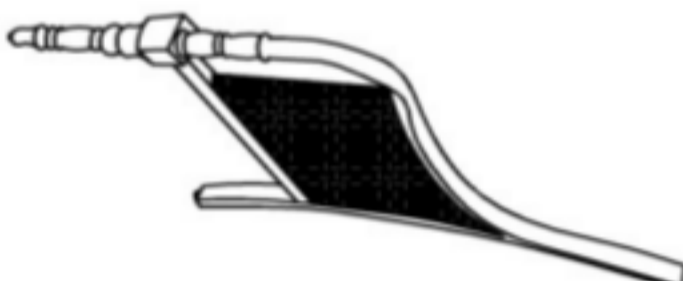







WARNING




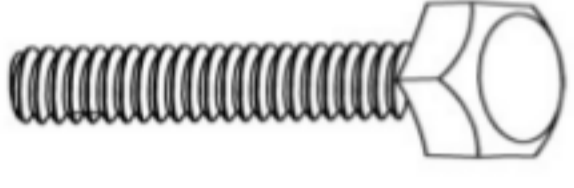




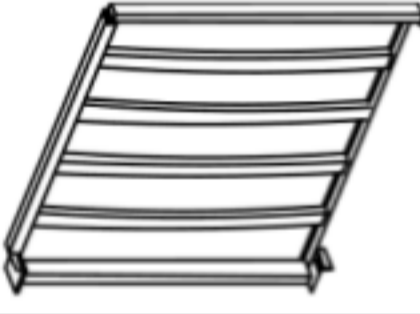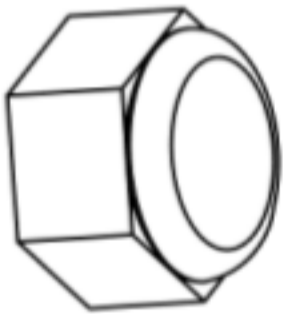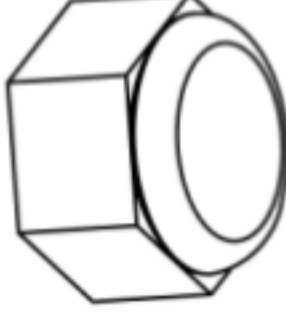


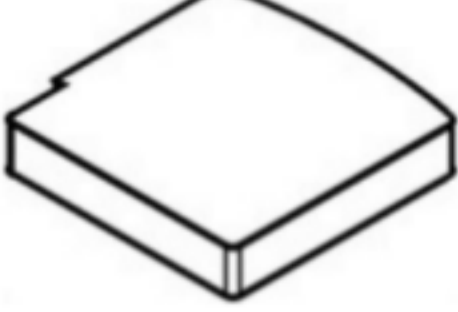
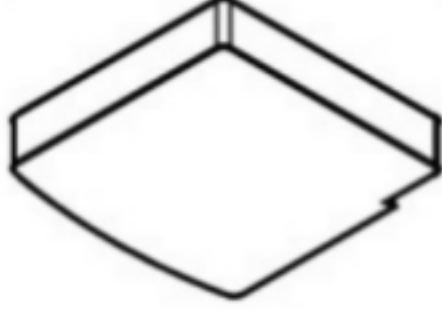

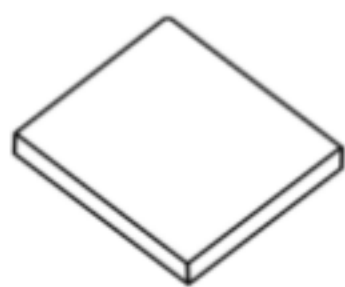
Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY .

To assemble, place the sofa on a non-abrasive flat surface to prevent scratching.

PARTS LIST

PART	DESCRIPTION	PICTURE	QTY
A	Left arm		1
B	Right arm		1
C	Middle leg		2
D	Chair back		3
E	Chair seat		3
F	Bolt cover		22
G	Larger bolt cover		6
H	Bolt cover		4
I	Nut cover		4

PART	DESCRIPTION	PICTURE	QTY
J	Bolt(1/4X1.181")		18
K	Bolt(1/4X1.575")		4
L	Bolt(1/4X3.150")		4
M	Bolt(5/16X0.984")		6
N	Φ8mm Lock washer		26
O	Φ14mm Lock washer		6
P	Φ12mm Flat washer		30
Q	Φ16mm Flat washer		6
R	Nut		4
S	Wrench		1
T	Hex screw driver		1
U	Left seat cushion		1
V	Right seat cushion		1
W	Middle seat cushion		1
X	Back cushion		3


1 Attach the chair back (D) to left arm (A) by inserting bolts (J) through lock washers (N) and washers (P). Do not tighten the bolts at this point.

Using bolt (M), lock washer (O) and flat washer (Q) attach the front chair seat joint to the front left arm leg. Do not tighten the bolt at this point.

Next attach the chair seat (E) to left arm (A) by inserting bolts (K) through lock washers (N) and washers (P). Do not tighten the bolts at this point.

(Figure 1)

figure 1

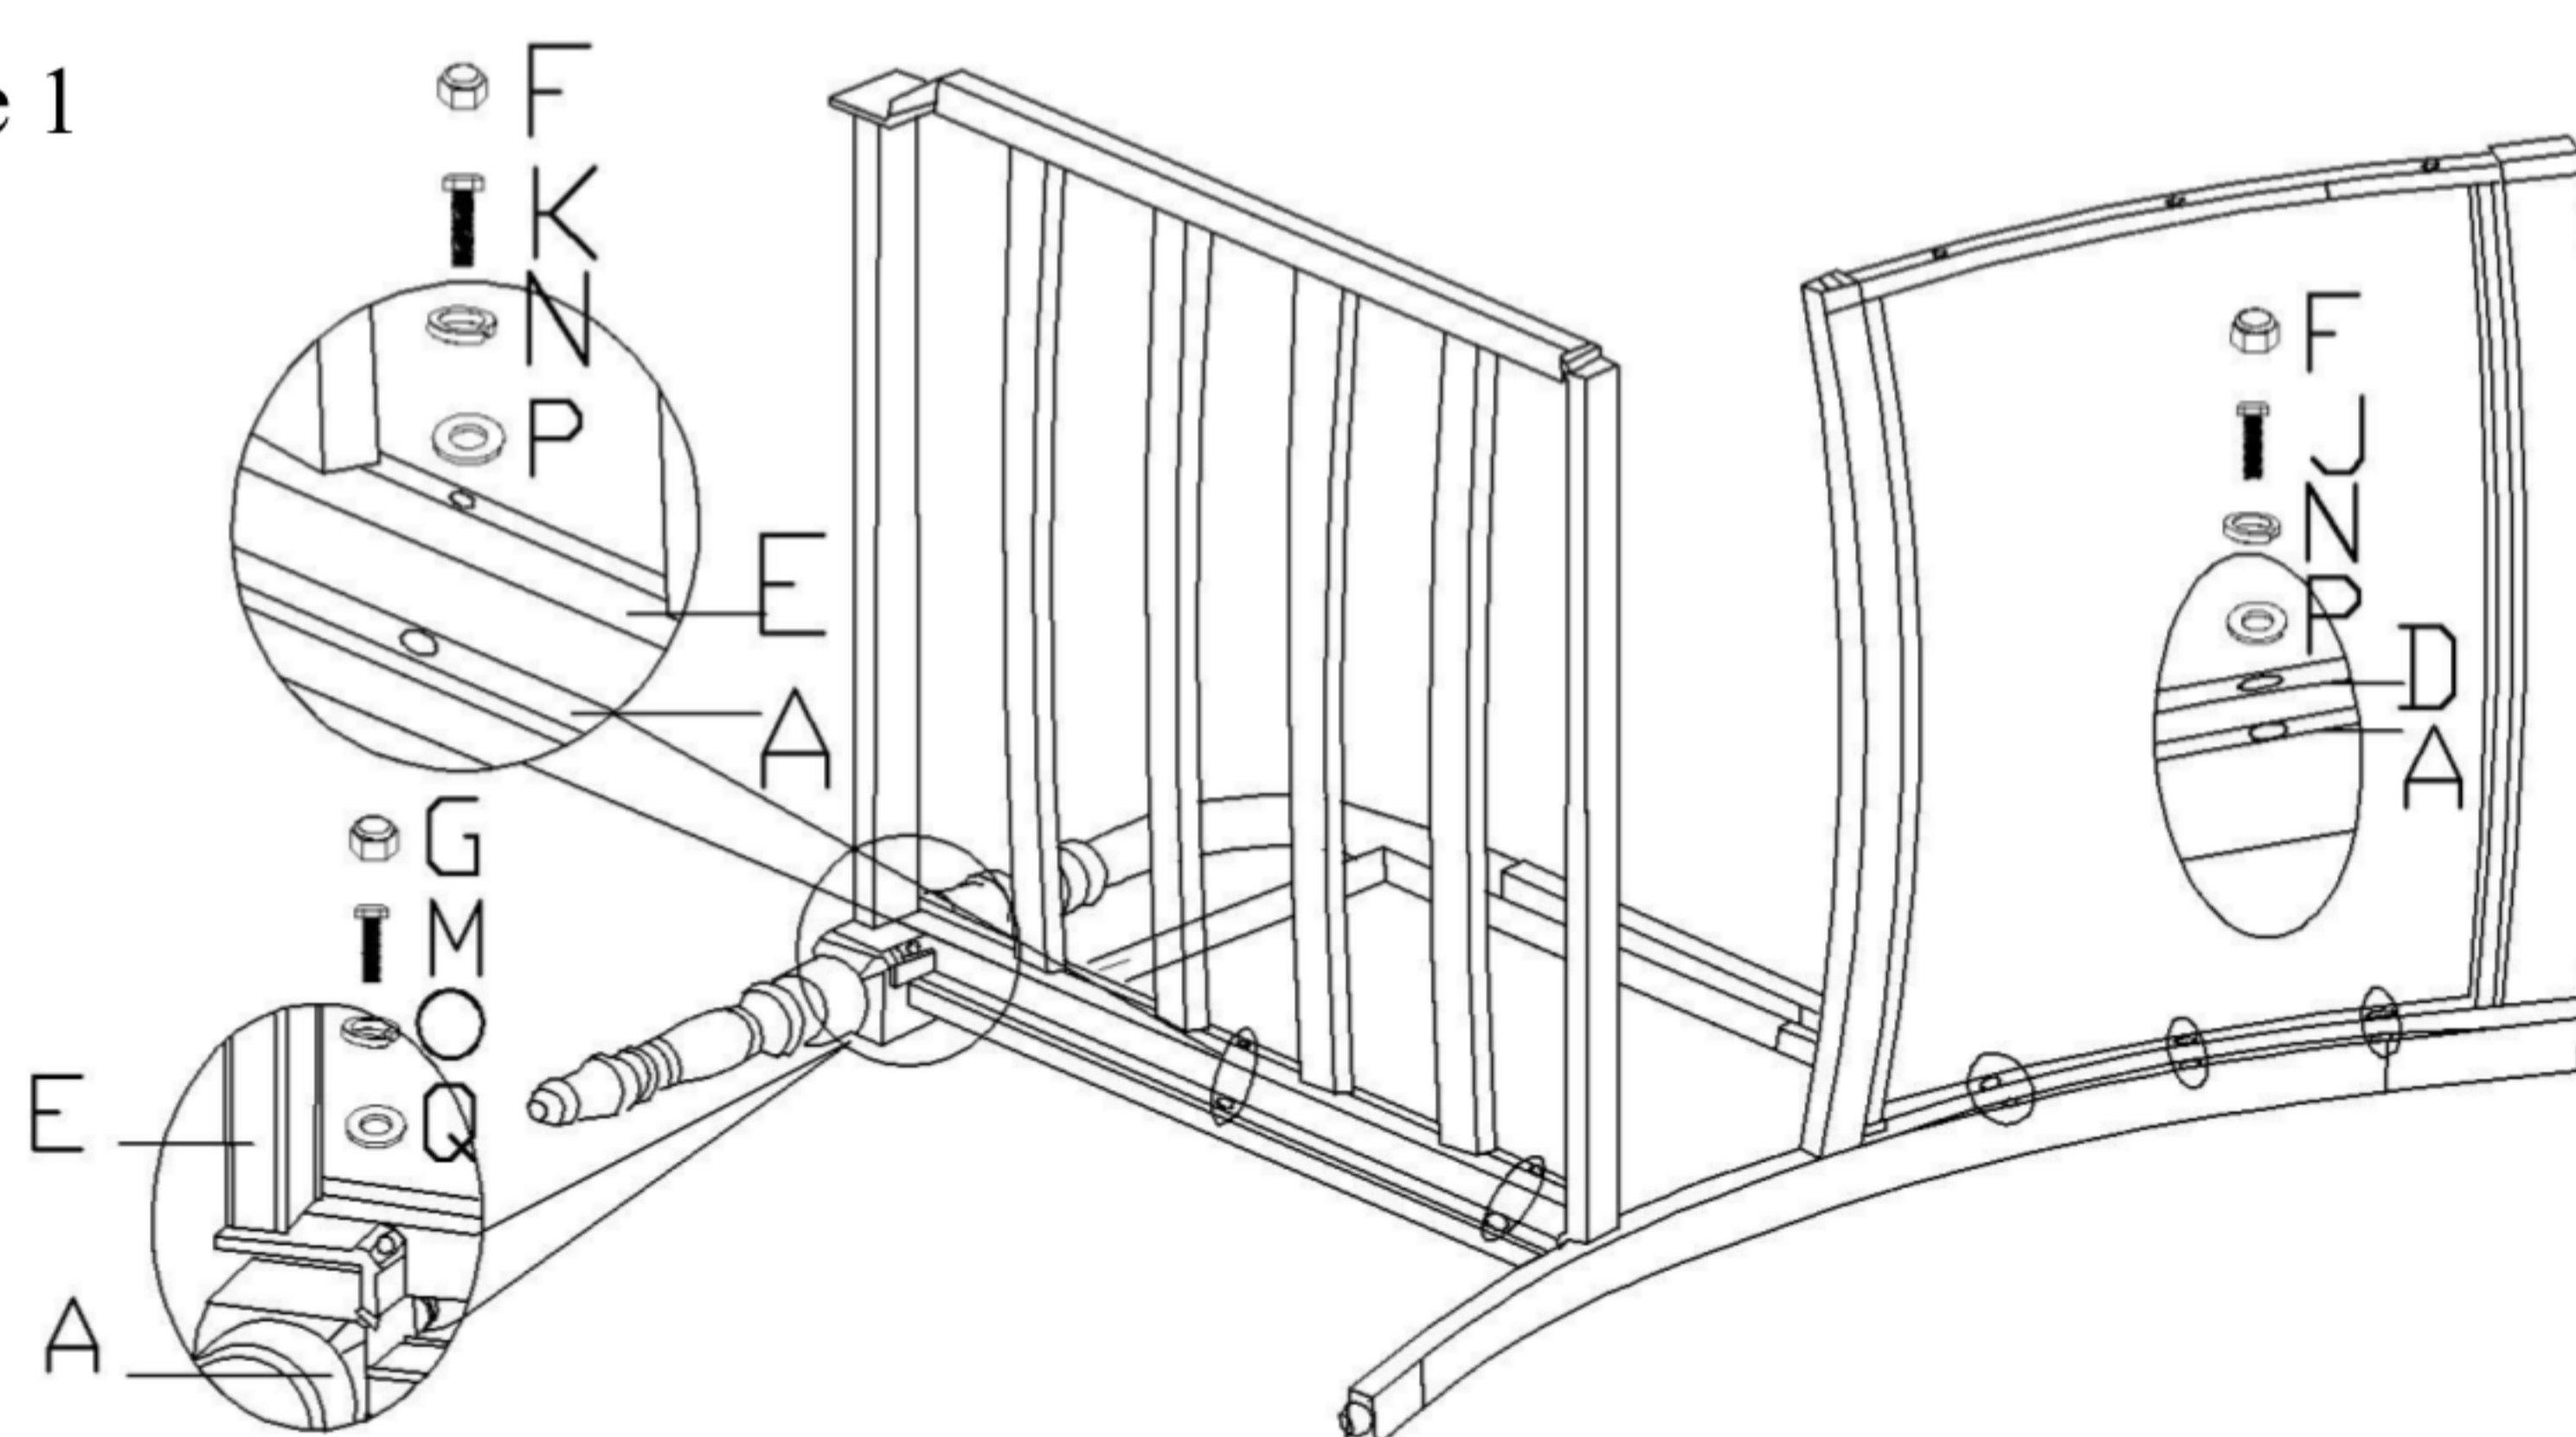

2 Repeat the steps in figure 1 to assemble the right arm (B), back (D) and seat (E) assembly.


Attach the right arm back and left arm back to the middle leg (C) by
3 inserting bolts (J) through lock washers (N) and washers (P). Do not tighten the bolts at this point.

Attach the right arm seat and left arm seat to the middle leg (C) by bolts (L) through washers (P), nuts (R). Do not tighten the bolts at this point.

Using bolt (M), lock washer (O) and flat washer (Q) attach the front chair seat joints to the front center arm leg. Do not tighten the bolt at this point.

(Figure 2)

Figure 2

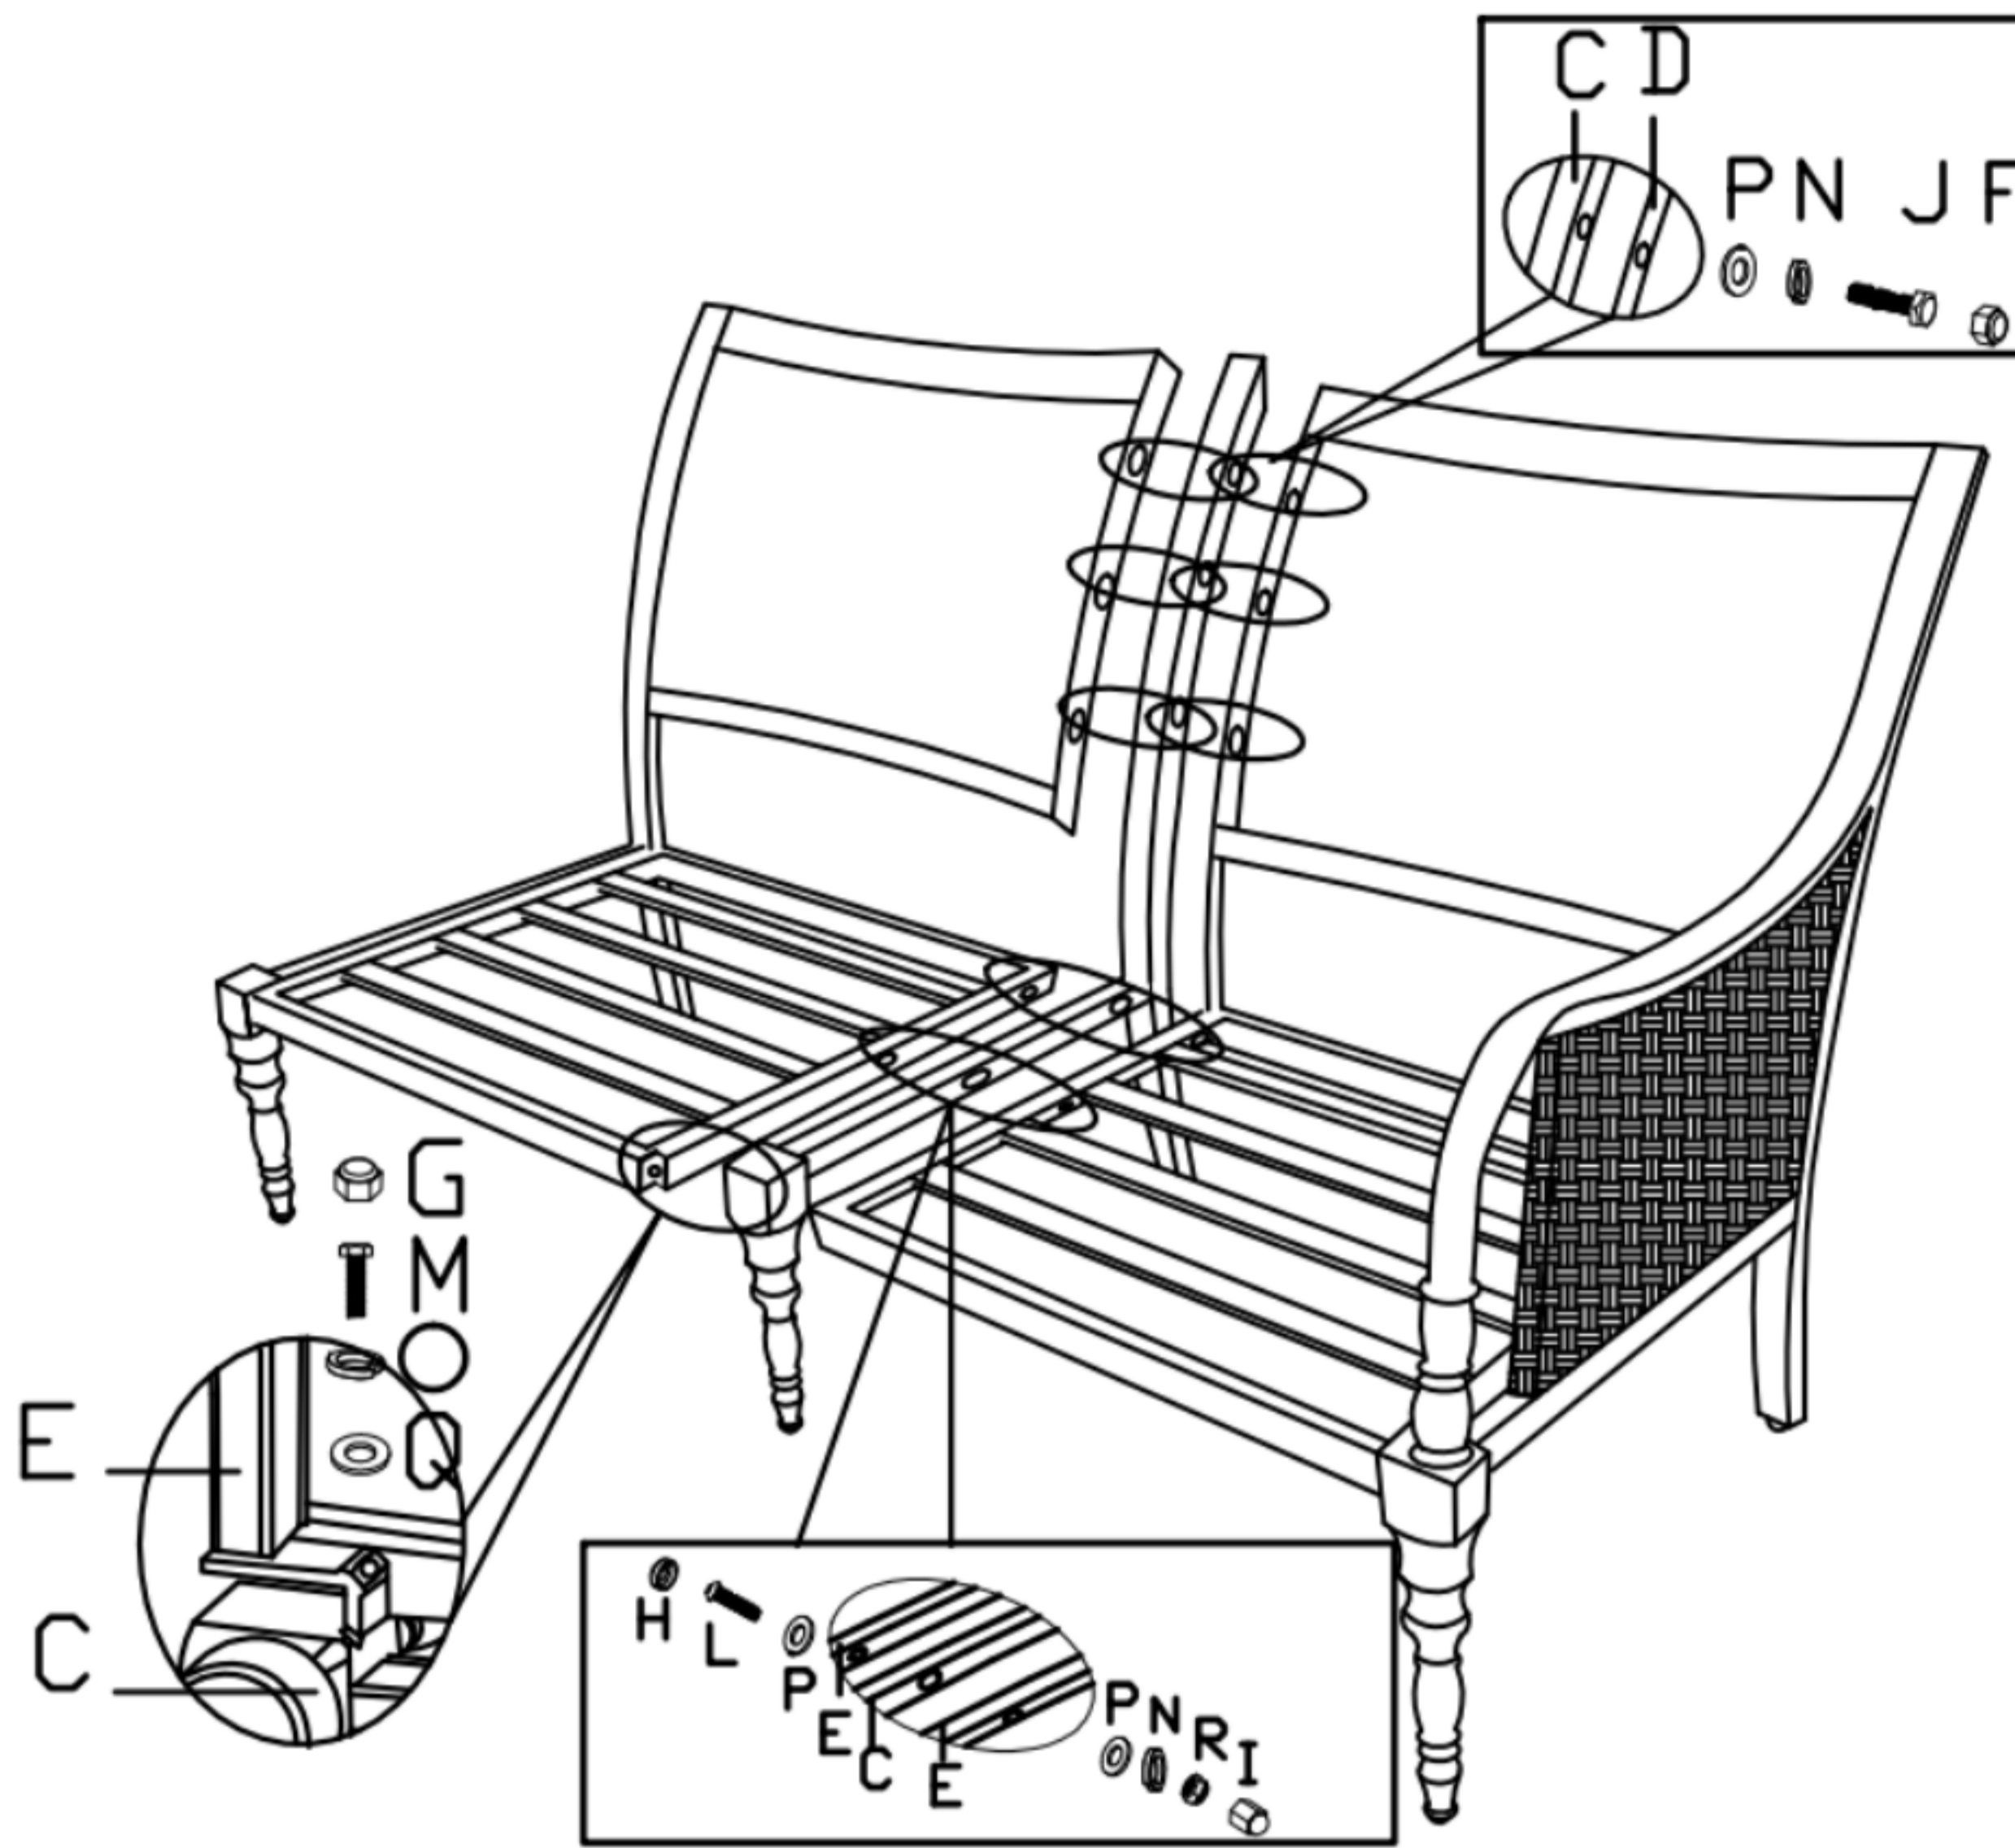

4 Repeat the steps in figure 2 to assemble the other middle arm (C), assembly. Once all pieces are assembled hand tighten all bolts, and cover using nut covers (I) and bolt covers (H).

Figure 3

5 With the help of another person turn the sofa into an upright position and place the seat cushion (U&V&W) and back cushion (x) and on the chair.

The sofa is ready for your enjoyment.
(Figure 3)

