




# Exploded View and Replacement Parts

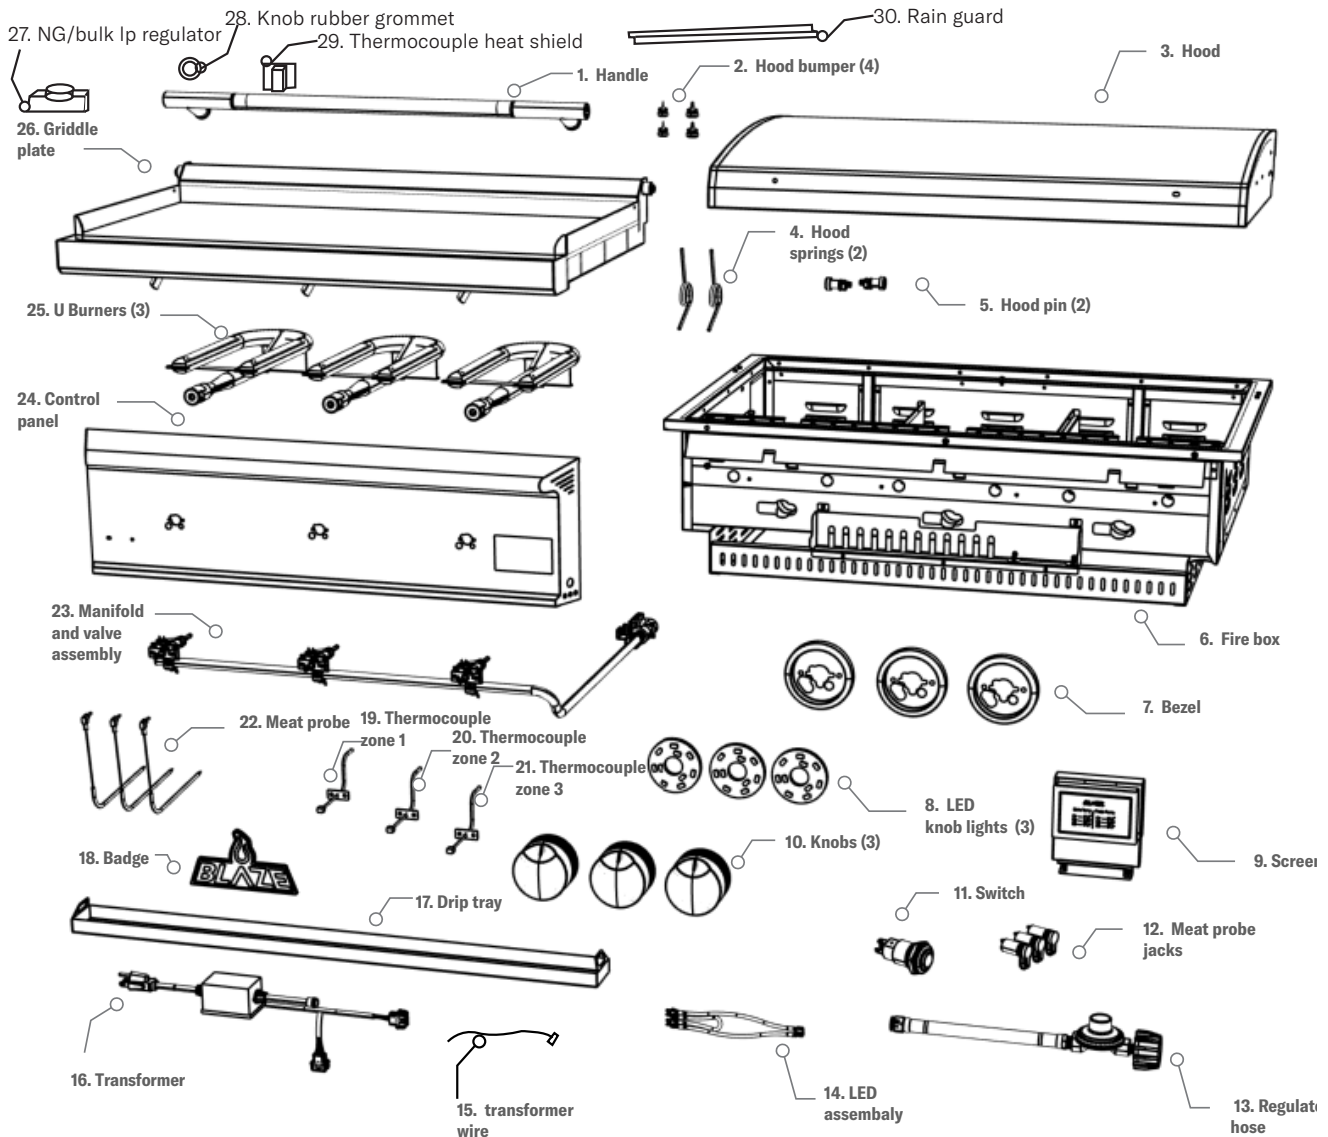

Blaze Part Number: Reference Guide

1.	BLZ-GRIDDLE40-003	10.	BLZ-GRIDDLE40-011	19.	BLZ-GRIDDLE40-015	28.	BLZ-LTE3-016
2.	BLZ-32-012W	11.	BLZ-LTE3-018	20.	BLZ-GRIDDLE40-016	29.	BLZ-GRIDDLE40-018
3.	BLZ-GRIDDLE40-004	12.	BLZ-GRIDDLE40-014	21.	BLZ-GRIDDLE40-017	30.	BLZ-GRIDDLE40-019
4.	BLZ-GRIDDLELTE3-012	13.	BLZ-LP-HOSE/REG	22.	BLZ-LTEPRO-002		
5.	BLZ-GRIDDLELTE-003	14.	BLZ-GRIDDLE40-002	23.	BLZ-GRIDDLE40-008		
6.	NA	15.	BLZ-GRIDDLE40-012	24.	BLZ-GRIDDLE40-001		
7.	BLZ-LTEPRO-008	16.	BLZ-PROPB-002	25.	BLZ-GRIDDLE-003		
8.	BLZ-LTE3-001	17.	BLZ-GRIDDLE40-007	26.	BLZ-GRIDDLE40-009		
9.	BLZ-GRIDDLE40-006	18.	BLZ-GRIDDLELTE-007	27.	BLZ-32-050		