



Carondelet Cast Aluminum Patio Chaise Lounge



Customer Service
CustomerService@ShoppersChoice.com

Monday - Friday 7-9, Sat. 9-3, Sun. 12-6 CST

Toll Free: 1-877-743-2269





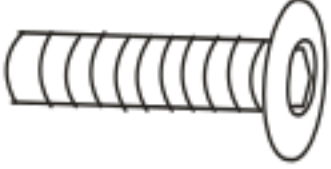


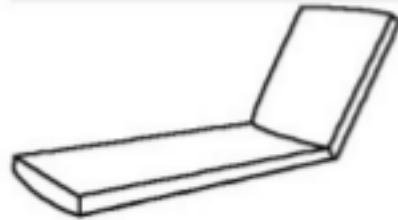
www.ShoppersChoice.com

WARNING

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly. **DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY**

Place chair on a non-abrasive flat surface to prevent scratching.

PARTS LIST

PART	DESCRIPTION	PICTURE	QTY	PART	DESCRIPTION	PICTURE	QTY
A	LOUNGE BACK		1	E	SPACER		2
B	LOUNGE SEAT		1	F	BOLT COVER		2
C	BOLT (1/4"X55MM)		2	G	HEX WRENCH		1
D	FLAT WASHER		2	H	CUSHION		1

Warning: Do not force components and over tighten the nuts during assembly.

ASSEMBLY

1. Remove all protective material carefully. Avoid cutting the surface of the furniture while removing the packaging material.
2. Loosely attach the lounge back (A) to the lounge seat (B) by inserting bolt (C) through flat washers (D), lounge back (A), spacer (E) and lounge seat (B).
4. Once the alignment is correct and all bolts (C) are in place, tighten all bolts (C) using hex wrench (G). Cover all bolts (C) with bolt covers (F).
5. Place cushion (H) on the lounge frame and secure to the frame.

