


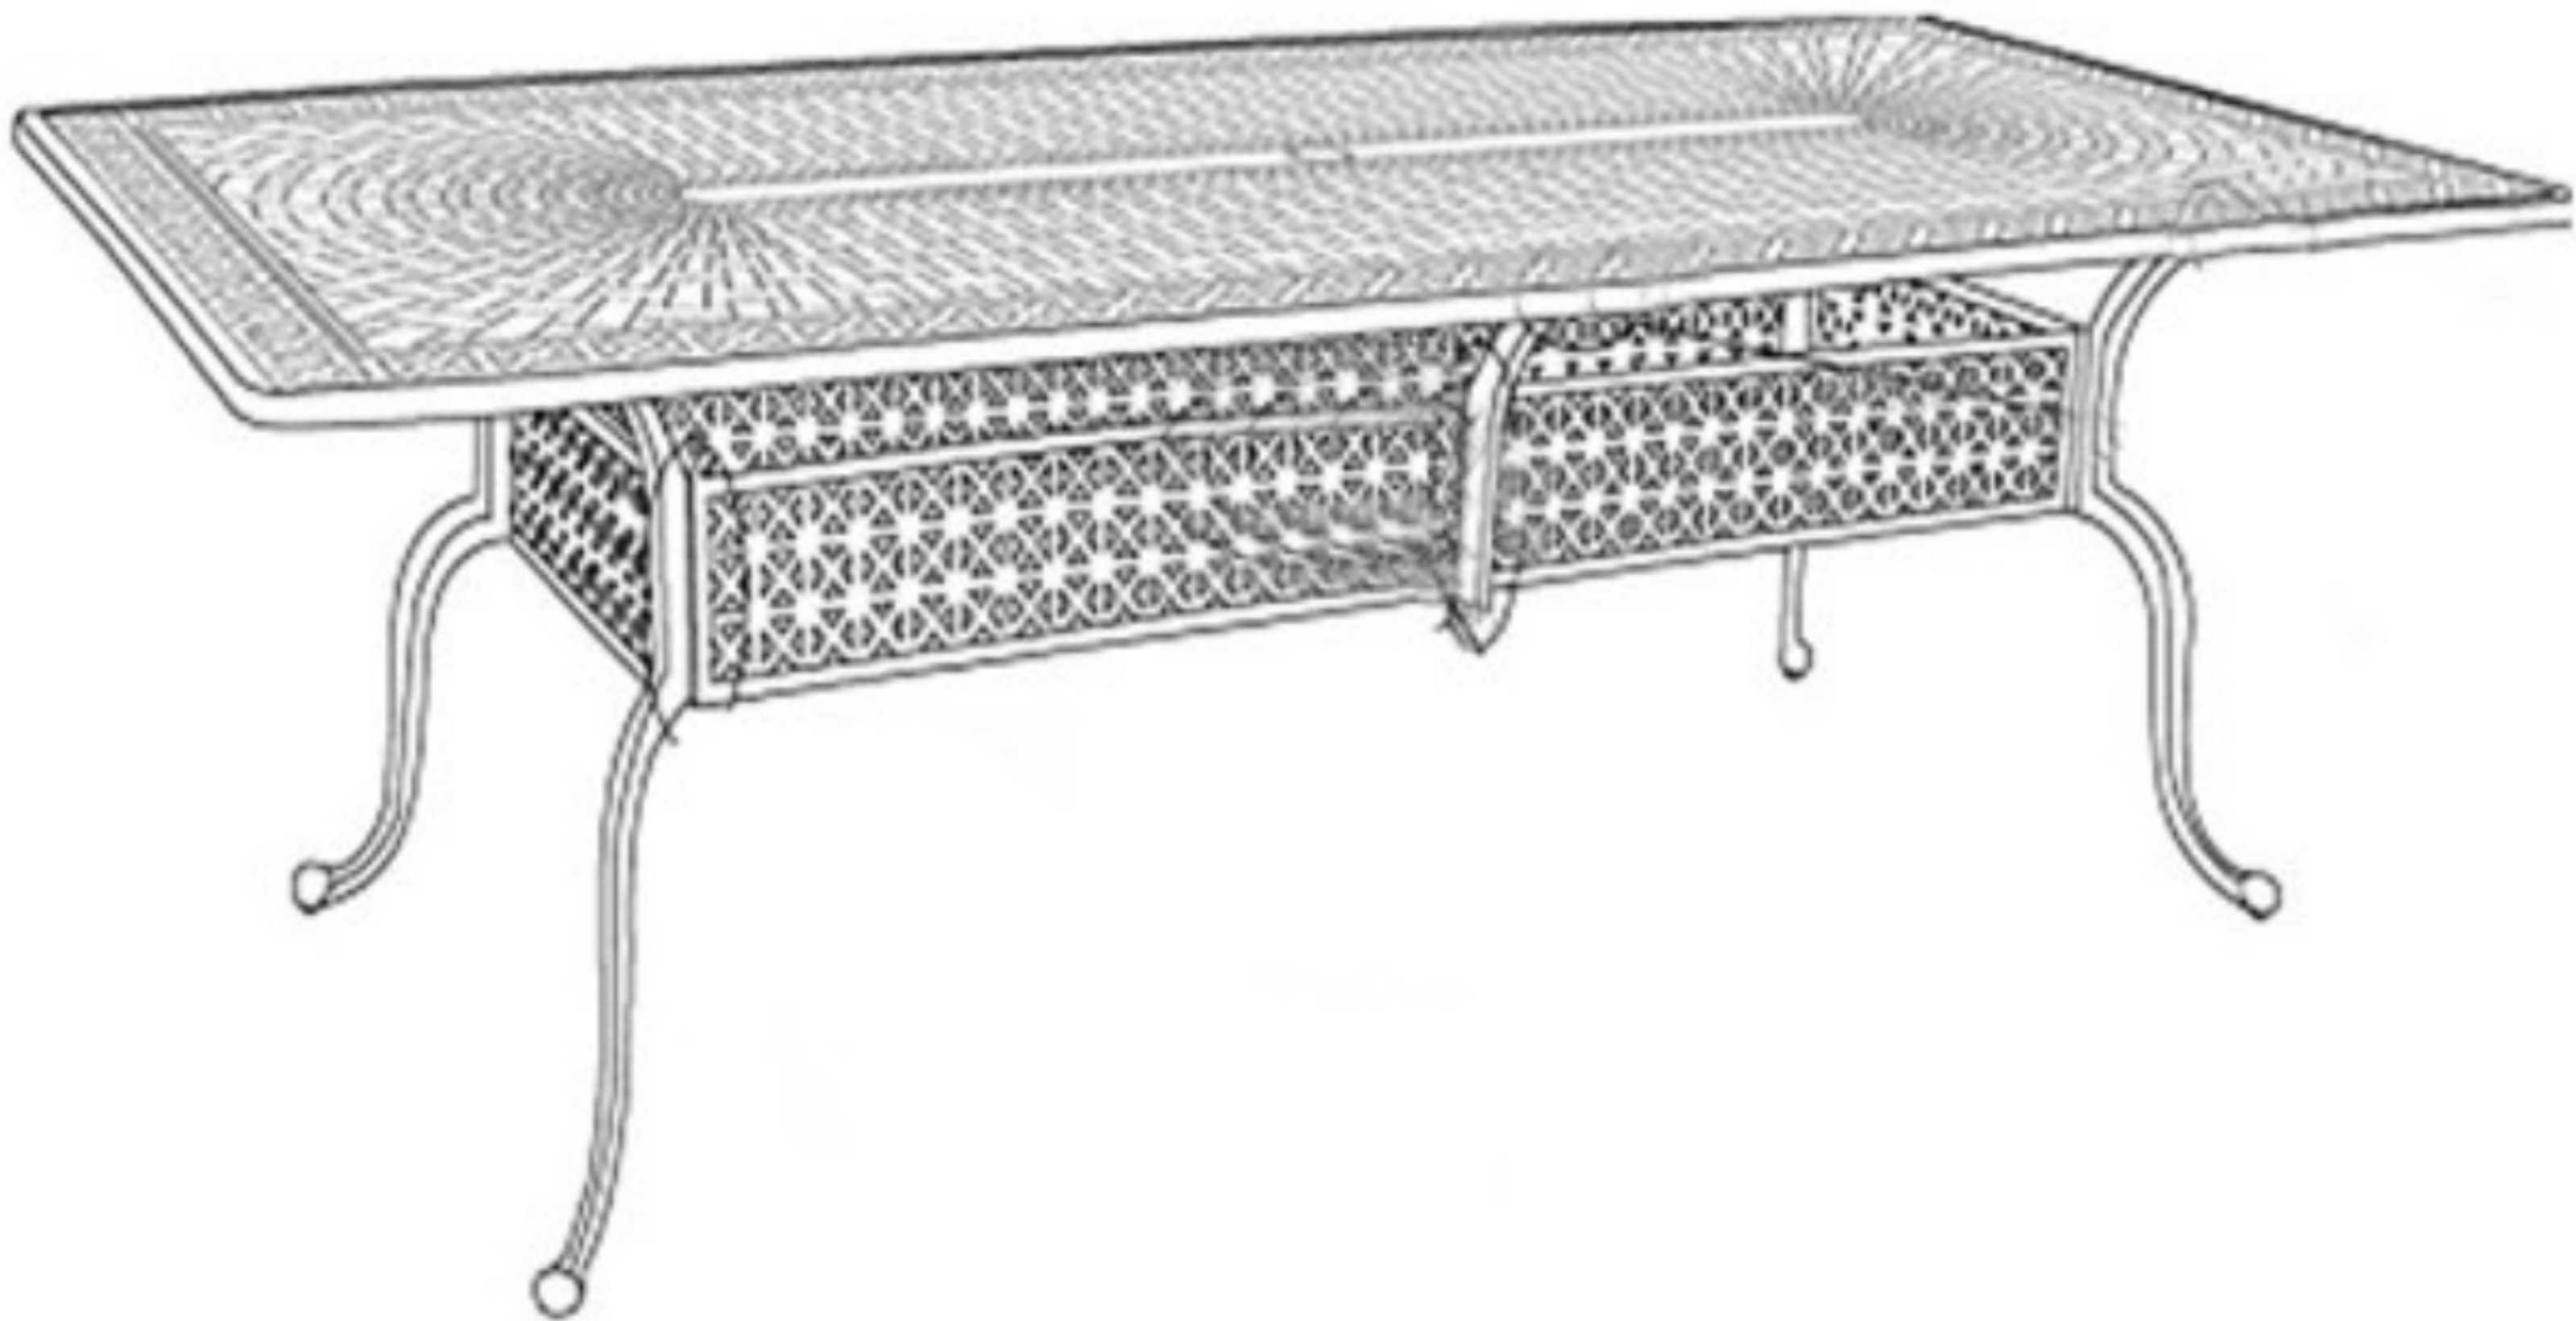

Classique 102 X 47 Inch Rectangular Cast Aluminum Patio Dining Table



Customer Service

CustomerService@ShoppersChoice.com

Monday - Friday 7-9, Sat. 9-3, Sun. 12-6 CST

Toll Free: 1-877-743-2269







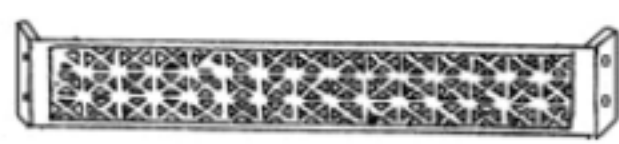

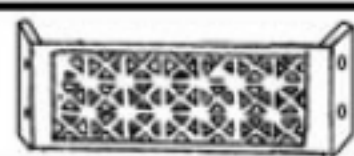


www.ShoppersChoice.com

WARNING

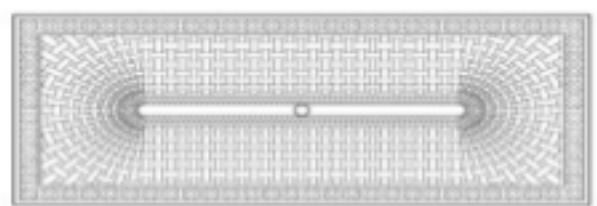Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly. **DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY**

Place table on a non-abrasive flat surface to prevent scratching.

PARTS LIST

Part	Picture	Description	Qty	Part	Picture	Description	Qty
A		Table Top	1	G		Flat Washer	18
B		Table Leg	4	H		Lock Washer	18
C		Middle Table Leg	2	I		Nut	18
D		Long Leg Connector Panel	2	J		Nut cover	18
E		Short Leg Connector Panel	2	K		Wrench	1
F		Bolt (5/16*40)	6				

Warning: Do not force components and over tighten the nuts during assembly.

ASSEMBLY

1. Identify all parts packed in carton against the parts list. Remove all protective material carefully and avoid cutting the surface of the furniture while removing the bubble wrap.
2. Put the table top (A) upside down a flat surface. Assemble the bolts (F) into the holes underneath the table top (A) and tighten. Attach four table legs (B) and two middle table legs (C) with flat washers (G), spring washers (H), nuts (I) and nut covers (J) using the wrench (K). Do not tighten the bolts at the point.
3. Turn the table on its legs, you can adjust the foot plugs to level table if needed.

