



## **Classique 48-Inch Round Cast Aluminum Patio Dining Table**



**Customer Service**  
**CustomerService@ShoppersChoice.com**

Monday - Friday 7-9, Sat. 9-3, Sun. 12-6 CST

Toll Free: 1-877-743-2269

[www.ShoppersChoice.com](http://www.ShoppersChoice.com)












## WARNING

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly. **DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY**

**Place table on a non-abrasive flat surface to prevent scratching.**

## PARTS LIST

Part	Picture	Description	Qty	Part	Picture	Description	Qty
A		Table Top	1	F		Flat Washer	12
B		Table Leg	4	G		Lock Washer	12
C		Center Ring	4	H		Nut cover	12
D		Nut	12	I		Wrench	1
E		Bolt (5/16*40)	4				

Warning: Do not force components and over tighten the nuts during assembly.

## ASSEMBLY

1. Identify all parts packed in carton against the parts list. Remove all protective material carefully and avoid cutting the surface of the furniture while removing the bubble wrap.
2. Put the table top (A) upside down a flat surface. Assemble the Bolts (E) into the holes underneath the table top and tighten. Attach all legs with Flat washers (F), Lock washers (G), Nuts (D) and nut covers (H). Don't tighten and keep nuts loose.
3. Take off the plastic cap from the bolts inside the Legs (B), then loosely attach the Center Ring (C) to the Legs (B) with Flat Washers (F), Lock Washers (G), Nuts (D) and nut covers (H). Progressively tighten all nuts with Wrench (I) until secure.
4. Turn the table on its legs, you can adjust the foot plugs to level table if needed.

