 




 






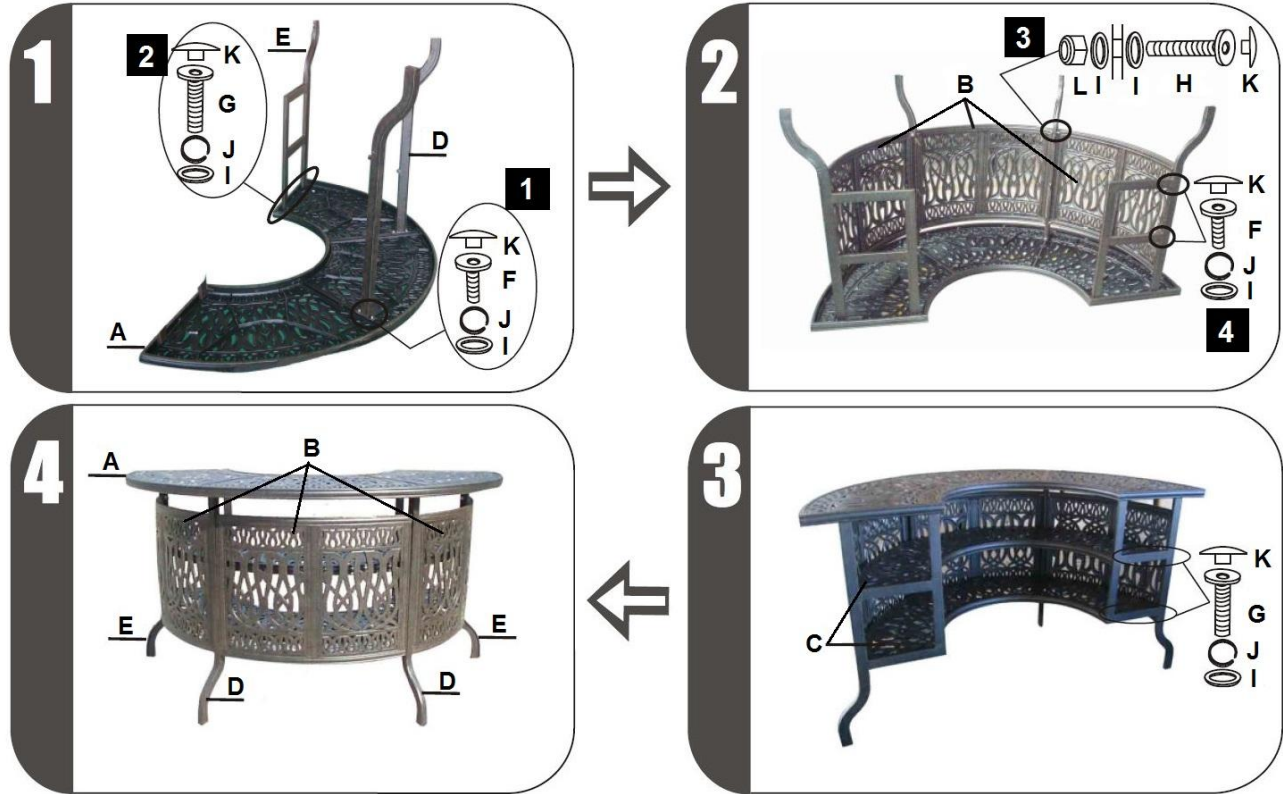



Assembly Instructions

BEFORE YOU BEGIN:

1. Identify all parts in the box against the “Parts” List.
2. Remove all protective material carefully and avoid cutting the surface of the furniture while removing wrapped material.



Part		Description	Qty	Part		Description	Qty
A		Table Top	1	F		Short Bolt	8
				G		Medium Bolt	12
B		Faceplate	3	H		Long Bolt	4
				I		Flat Washer	28
C		Shelf	2	J		Lock Washer	20
D		Middle Leg	2	K		PVC Cover	24
E		Side Leg	2	L		Lock Nut	4
				M		Wrench	1

Assembly Instructions

(FOR DL707-K)

ATTENTION:

1. **DO NOT** use power tools or over-tighten hardware during assembly.*
*Aluminum is soft metal, so over-tightening may strip threads or break the parts.
2. Please read these instructions carefully before assembling.
3. During assembly, place furniture against soft surfaces to avoid scratching the paint/ metal.

ASSEMBLY STEPS:

1. Place the **TABLETOP (A)** upside down onto a clean and soft, non-abrasive surface.
2. Loosely secure the 2 x **MIDDLE LEGS (D)** to the **TABLETOP** using **SHORT BOLTS (F)**, **FLAT WASHERS (I)**, **LOCK WASHERS (J)**, and **PVC COVERS (K)**. *Do not tighten at this time.
3. Loosely secure the 2 x **SIDE LEGS (E)** to the **TABLETOP** using **MEDIUM BOLTS (G)**, **FLAT WASHERS (I)**, **LOCK WASHERS (J)**, and **PVC COVERS (K)**. *Do not tighten at this time.
4. Loosely attach the **FACEPLATES (B)** to the **MIDDLE LEGS** using **LONG BOLTS (H)**, **FLAT WASHERS (I)**, **LOCK NUTS (L)**, and **PVC COVERS (K)**.
5. Then, secure the **FACEPLATES** to the **SIDE LEGS (E)** using **SHORT BOLTS (F)**, **FLAT WASHERS (I)**, **LOCK WASHERS (J)**, and **PVC COVERS (K)**.
6. Carefully flip the party bar right side up.
7. Attach the **SHELFS (C)** to the legs using **MEDIUM BOLTS (G)**, **FLAT WASHERS (I)**, **LOCK WASHERS (J)**, and **PVC COVERS (K)**.
8. Tighten all bolts and nuts completely.
9. If needed, you may use the adjustable feet to level out the party bar.

CARE INSTRUCTIONS:

Please **DO NOT** use acid or alkaline washing liquids to clean this product. Harsh cleaners can cause the powder-coated finish to stain and fade. Use a soft towel with mild liquid soap and water to clean the product, and dry with a soft cloth.