



MODEL

EWS-1500-P1

INDOOR PERSONAL HEATER

OWNERS OPERATING MANUAL

eureka[®]

Read All Instruction Before Using This Heater.

Please visually inspect all internal and external components before connecting to electric current. If any damage is found. DO NOT USE THIS UNIT and contact our warranty line – 1 877-891-7333.

When using this electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all the instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch the hot surfaces. Use handles when moving this heater.
3. Keep combustible material, such as furniture, pillow, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. Always unplug the heater when not in use.
6. Do not operate any with a damaged cord or plug or after the heater malfunctions, or has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and /or repair in order to avoid a hazard.
7. Do not use this heater outdoors.
8. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub, shower, swimming pool or other water container.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
10. To disconnect heater, turn controls to off, then remove plug from outlet.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. It is possible, however unlikely, to have sparking or arcing parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use that is not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Operate this heater only in its upright position.
16. Do not operate this heater on an elevated surface such as a shelf or desktop. Use only while placed on the floor.
17. This heater is equipped with a thermal safety shut-off system designed to turn off the heater when an internal overheating condition is detected
18. This appliance has a polarized plug (one blade is wider than the other). This plug is intended to reduce the risk of electric shock by fitting in a polarized outlet in only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician.
19. Do not use this heater on a circuit that has a variable speed, such as with a blender or a variable speed fan.
20. Do not use this heater to dry human or animal hair/fur or articles of clothing.
21. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
22. Do not use this heater in an RV, a boat, or in any application where a DC/AC converter is converting battery power to AC power.
23. Do not use this heater on a surge protected circuit
24. Do not use the heater with any kind of timer to turn the unit on or off.
25. Do not use this heater on a circuit that is shared with a high power device, such as a vacuum or power equipment
26. CAUTION: A loose fit between the outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product. Contact a qualified electrician to replace loose or worn outlet.

HOW TO USE



Using this fan heater is easy. Just follow these simple steps.

1. Position your heater so the disbursement of warm air is unobstructed and is directed across the room. Position it in a location that is representative of the room temperature. The unique side –angled air inlets allow the heater to be placed closer to walls than possible with most ordinary heater (but do not place close to combustibles). Avoid areas of temperature extremes such as cold drafts and heat registers (refer to important instruction for safe placement)
2. Plug power cord into a standard wall outlet.
3. Turn the power switch to on
4. Select fan speed and then medium or High heat.
5. (Suggested Usage) Set the thermostat to the highest setting. When the room reaches the desired comfort level, turn the thermostat knob slowly counterclockwise until the heater cycles off.

ADVANCED SAFETY FEATURE



1. Small grill spacing to avoid injury
2. Cool touch case: Safe to touch, even on high heat setting..
3. Automatic safety shut off system: if airflow becomes blocked, power to the heating element is shut off to prevent overheating.
4. Automatic Tip-over protection: If tipped more than 10 degree in any direction, heat and fan functions immediately shut down.

HOW TO CLEAN



1. Your heater has no user serviceable parts. Do not disassemble the unit. This will void your warranty. If service is required, please call our warranty department and make arrangements to return your heater.
2. The motor is permanently lubricated and requires no oiling.

Because your heater moves a substantial amount of air, it will need regular cleaning.
To clean follow these simple instructions:

1. Unplug the unit. Note: Do not use gasoline, thinners, solvents or other chemicals for cleaning.
2. Use the brush attachment on your household vacuum cleaner to vacuum any accumulated dust off the front grill. Wipe down the entire surface with a soft cloth.

STORAGE



During the off-season or after extended periods of non-use, you may choose to store your heater. To ensure long life of the product, it is recommended to store your heater by following these instructions:

1. Unplug power cord and bundle loosely
2. Thoroughly clean you heater
3. Cover, or place back in retail carton if available. This will prevent the unit from accumulating dust overtime.
4. Store unit in a cool and dry location

PRODUCT SPECIFICATIONS



MODEL: EWS-1500-P1

VOLTAGE: 120V

WATTAGE: 1500W

AMPERAGE: 12.5A

CUSTOMER SERVICE



IF WARRANTY/CUSTOMER SERVICE IS NEEDED

Contact the manufacturer by calling customer service department at (877) 891-7333.

EnergyWise Solutions LLC

PO Box 4681

Logan, UT 84323

Make sure you have your warranty, your sales receipt, location of purchase and the model/serial number of your product.