


## Elysian 84 X 42 Inch Oval Cast Aluminum Patio Dining Table

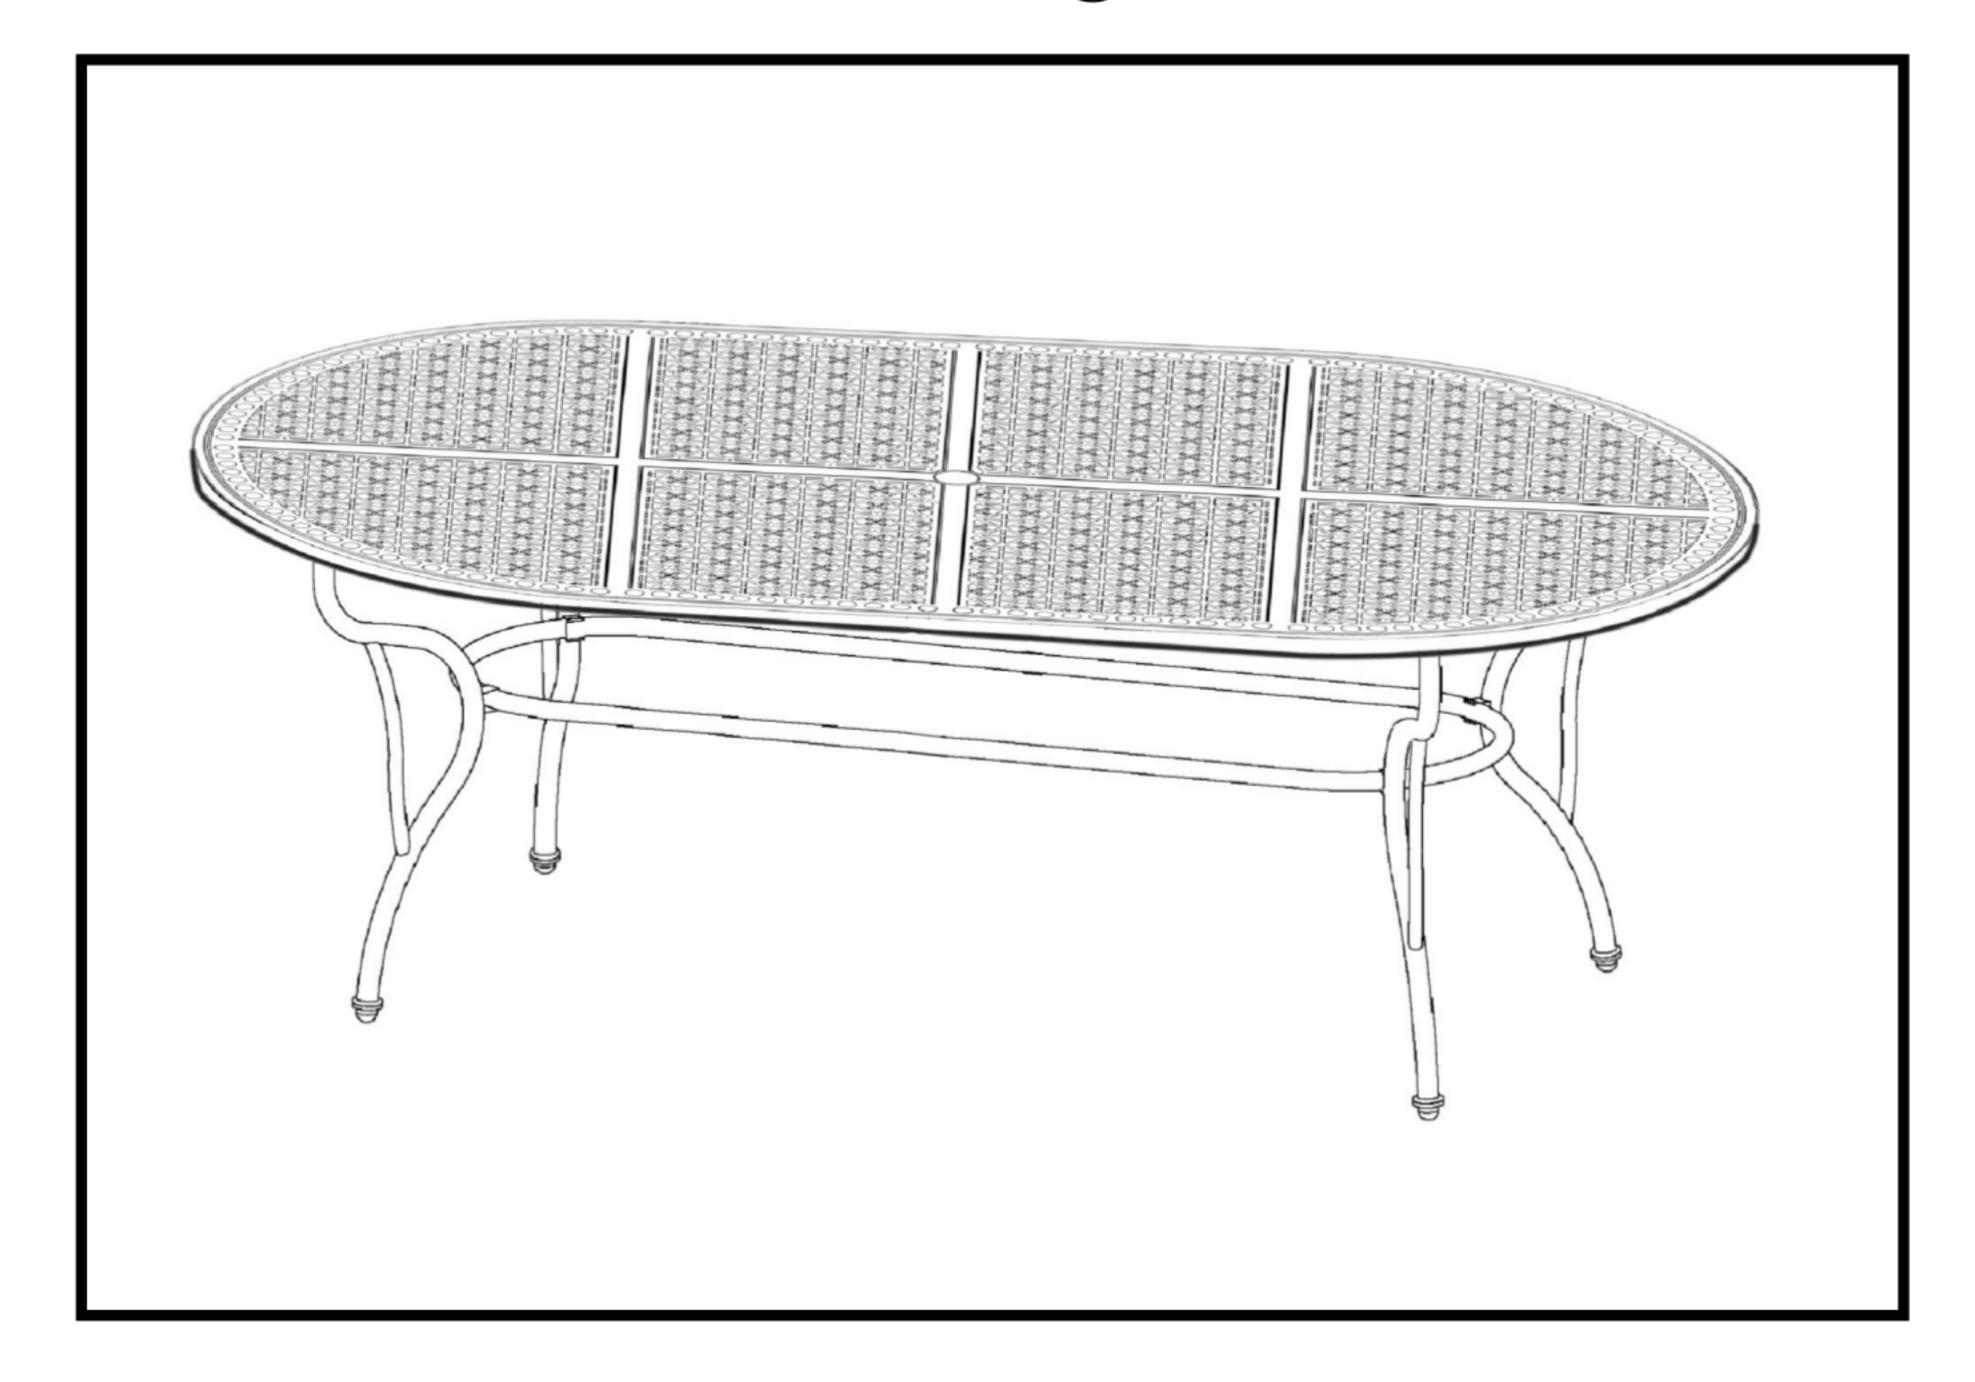

## Customer Service CustomerService@ShoppersChoice.com

Monday - Friday 7-9, Sat. 9-3, Sun. 12-6 CST Toll Free: 1-877-743-2269 www.ShoppersChoice.com

## **WARNING**

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly. **DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY** 

Place table on a non-abrasive flat surface to prevent scratching.

## **PARTS LIST**

PART	DESCRIPTION	PICTURE	QTY
A	TABLE TOP		1
В	TABLE LEG		4
С	LEG CONNECTOR BRACE		1
D	LARGE BOLT (5/16*30)	())))))))	4
Е	LARGE FLAT WASHER		4
F	LARGE LOCK WASHER		4
G	NUT		4
Н	NUT COVER		4
Ι	SMALL BOLT(1/4*40)		8
J	SMALL FLAT WASHER		8
K	SMALL LOCK WASHER		8
L	PVC COVER	<b>(</b>	8
M	HEX SCREW DRIVER		1
N	WRENCH	5	1


1

Carefully place the table top upside down (A) on a non-abrasive flat surface and insert bolt (B) into the table top (A) and tighten.

Loosely attach the table legs (B) to the table top (A) using the bolts (D), large flat washers (E), large lock washers (F), nuts (G).

Do not tighten the bolts at this point.

(Figure 1)

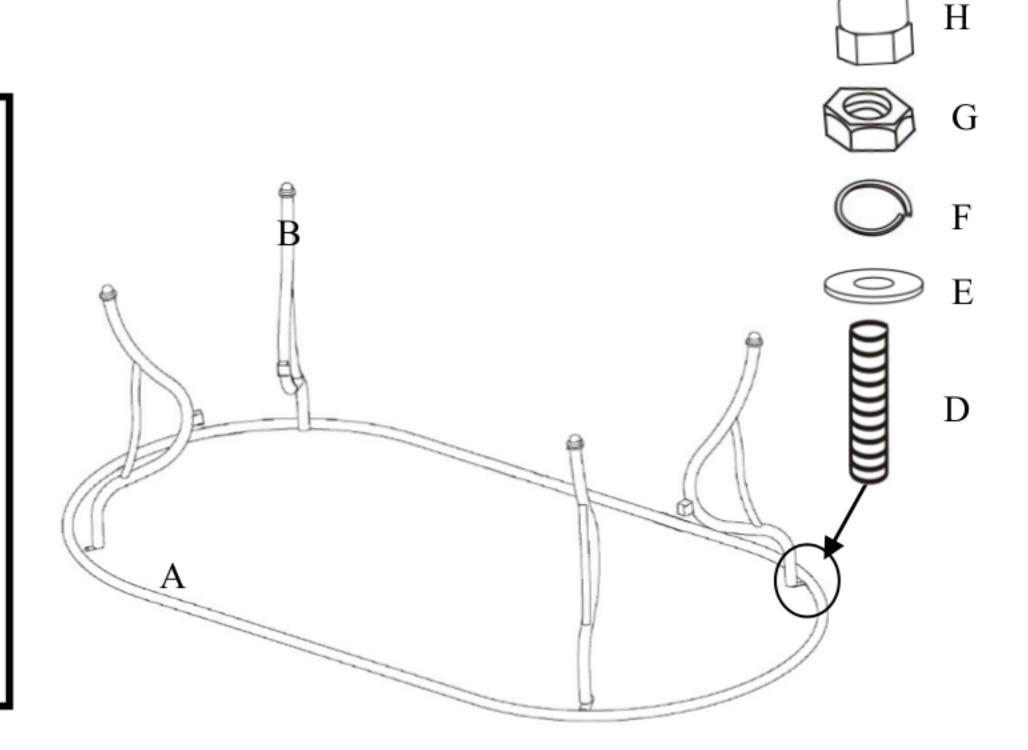

2

Loosely attach the leg connector brace (C) to legs (B) using the small flat washers (J), small lock washers (K), small bolts (I).

Tighten all bolts (I) with hex screwdriver (M) and wrench (N) and cover all bolts with PVC cover (L) and all nuts (G) with nut cover (H).

(Figure 2)

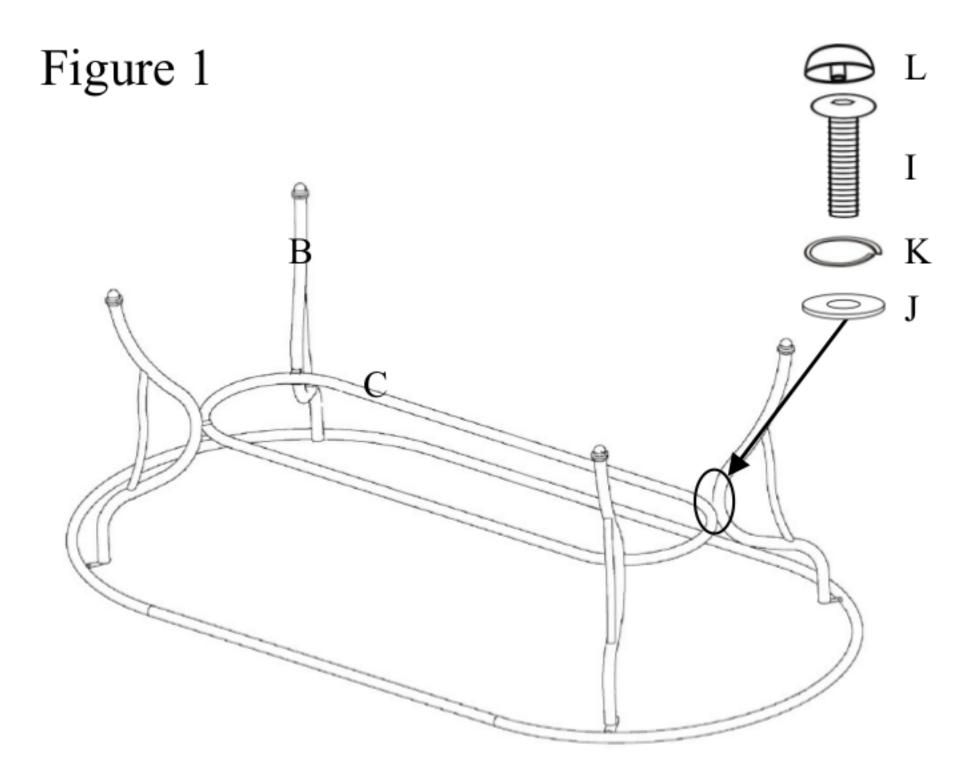


Figure 2

3

With the help of another person, carefully turn the table to the upright position. The table is now ready to use.

(Figure 3)

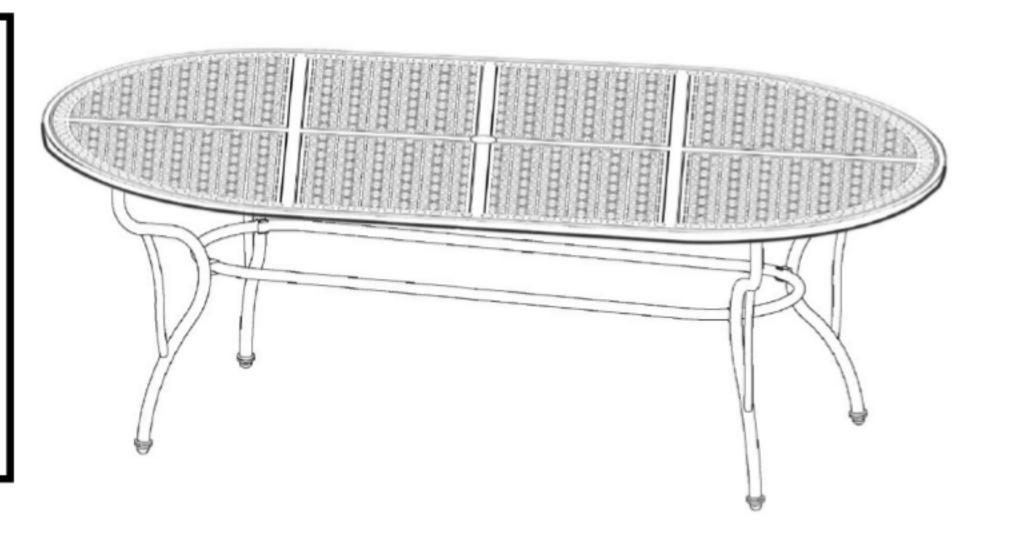


Figure 3