


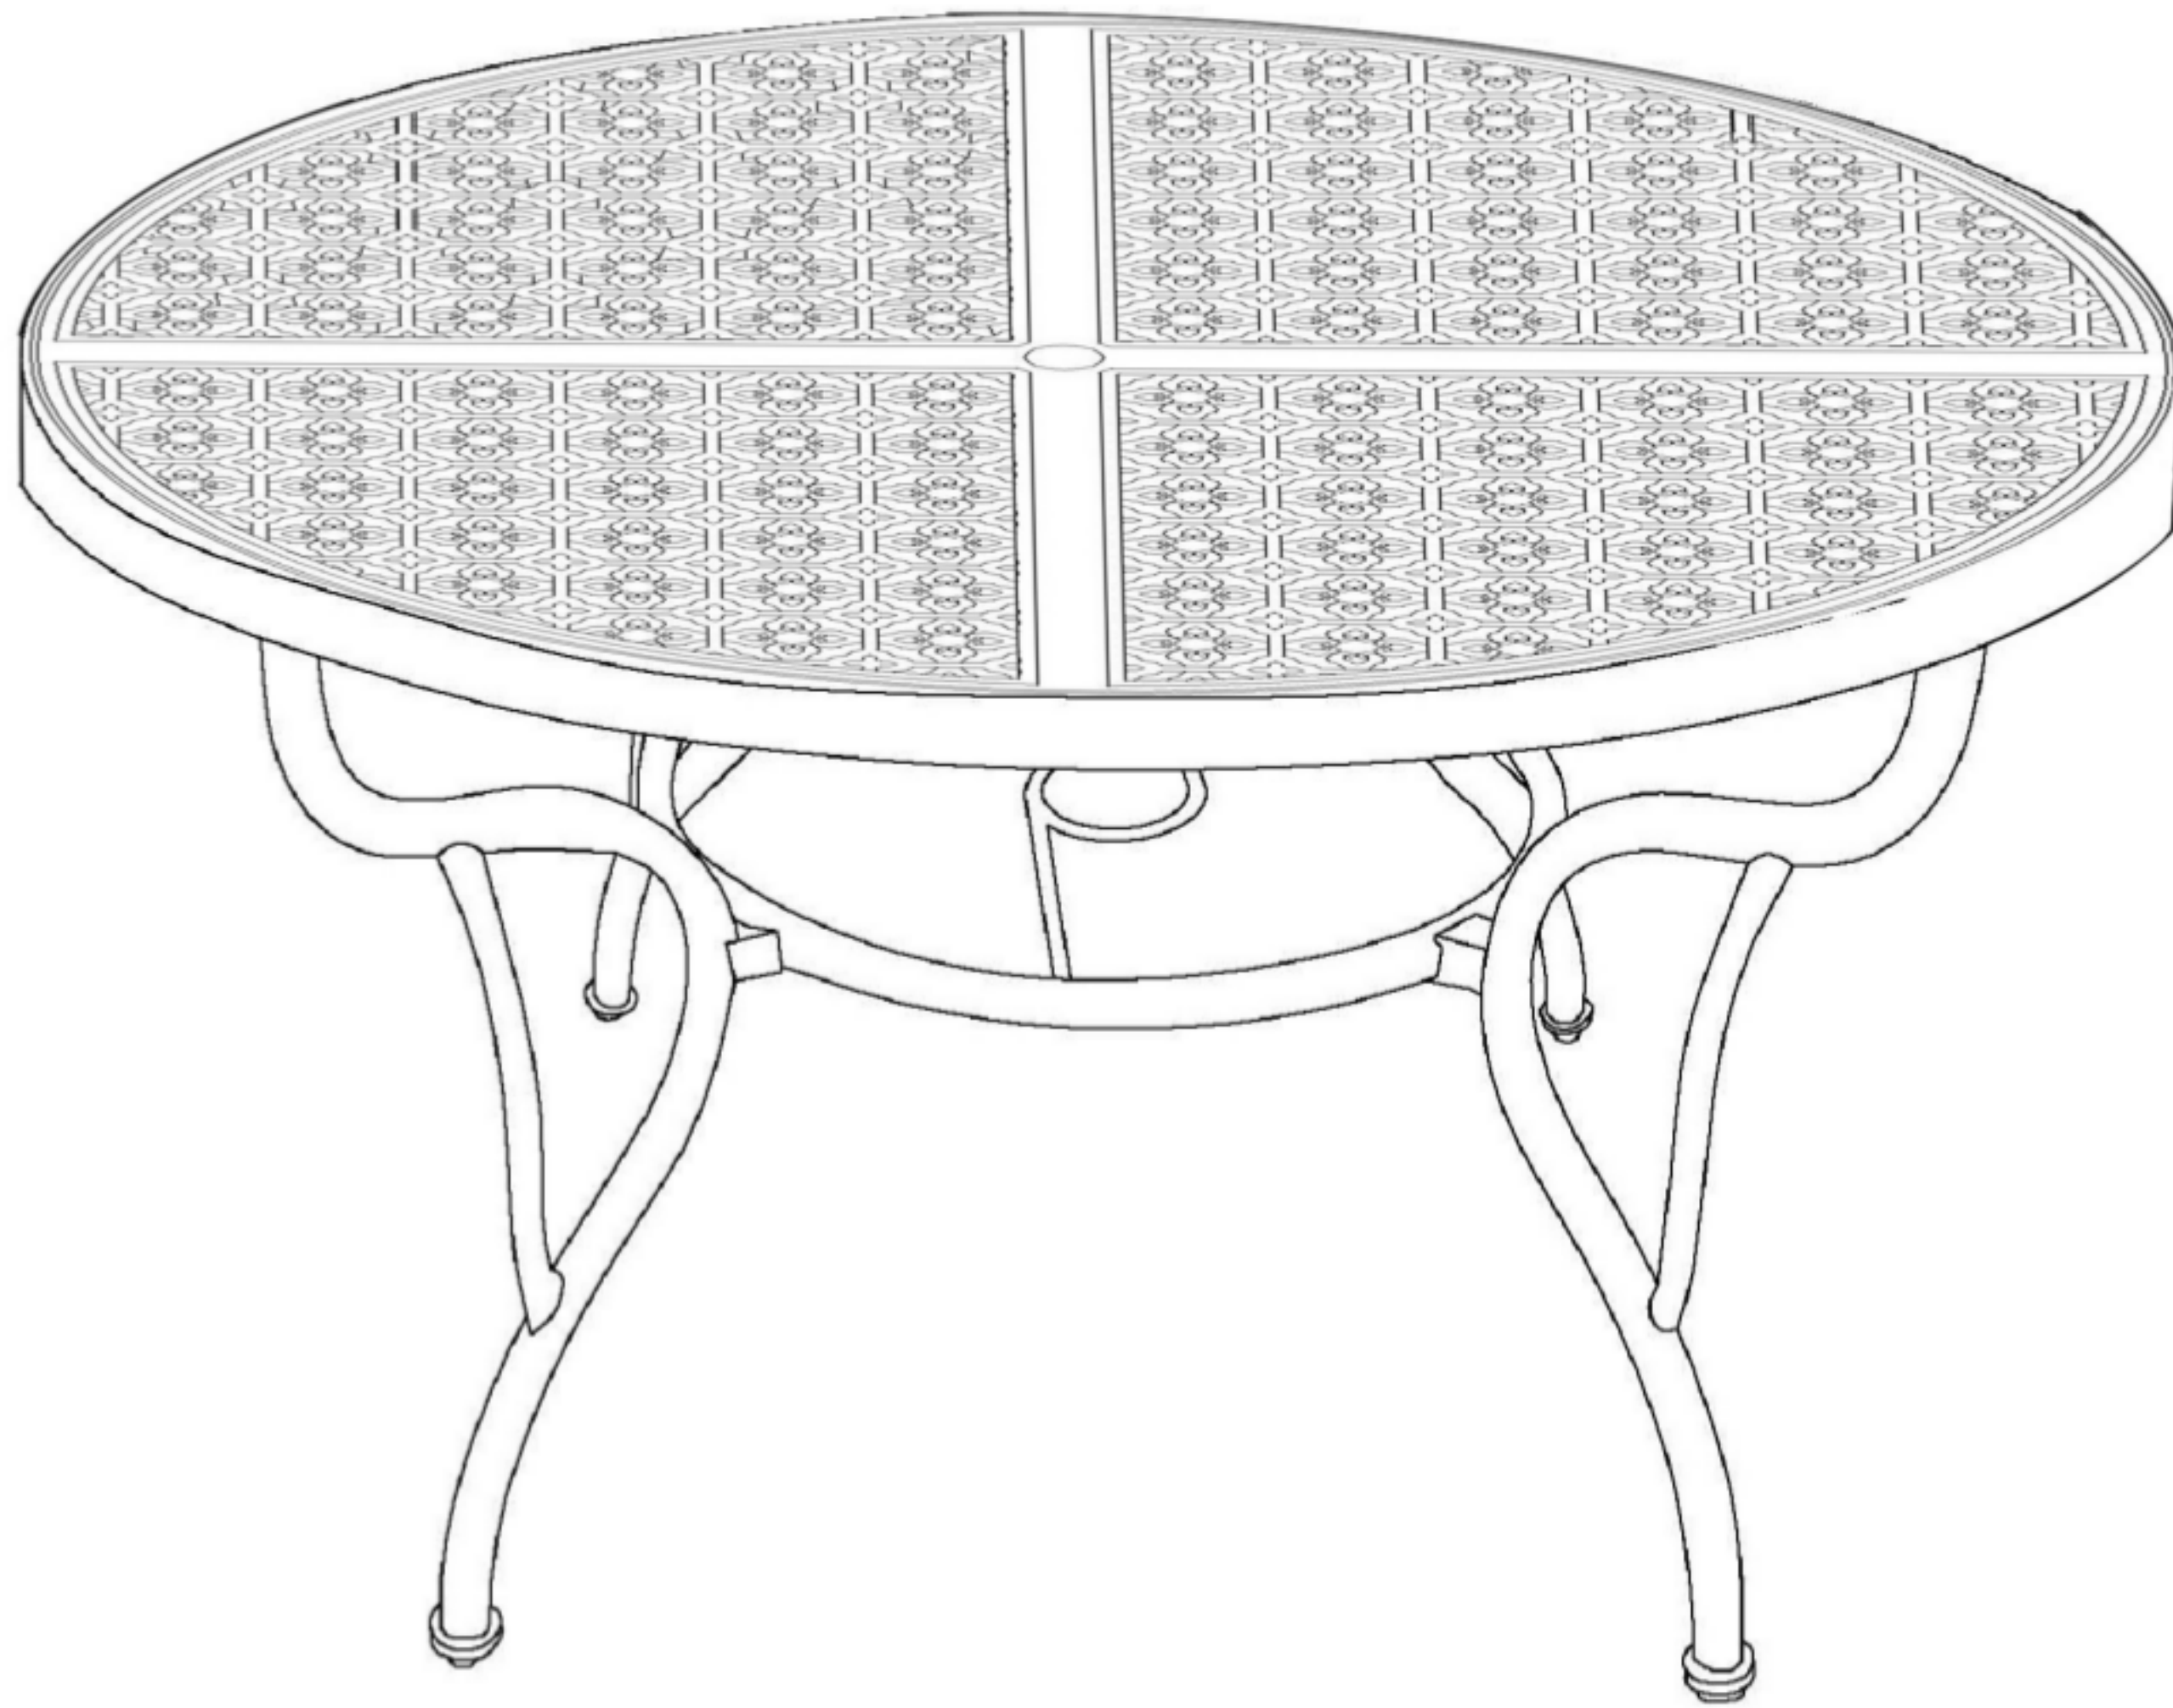

Elysian 52-Inch Cast Aluminum Patio Dining Table



Customer Service

CustomerService@ShoppersChoice.com

Monday - Friday 7-9, Sat. 9-3, Sun. 12-6 CST

Toll Free: 1-877-743-2269












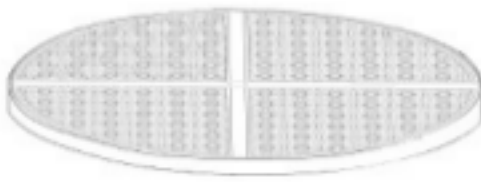


www.ShoppersChoice.com

WARNING

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly. **DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY**

Place table on a non-abrasive flat surface to prevent scratching.

PARTS LIST

PART	DESCRIPTION	PICTURE	QTY
A	TABLE TOP		1
B	TABLE LEG		4
C	LEG CONNECTOR BRACE		1
D	LARGE BOLT (5/16*30)		4
E	LARGE FLAT WASHER		4
F	LARGE LOCK WASHER		4
G	NUT		4
H	NUT COVER		4
I	SMALL BOLT(1/4*40)		8
J	SMALL FLAT WASHER		8
K	SMALL LOCK WASHER		8
L	PVC COVER		8
M	HEX SCREW DRIVER		1
N	WRENCH		1

1

Carefully place the table top (A) on a soft surface with the underside facing up. Loosely attach the table leg (B) to the table top (A) using the bolt (D), large flat washers (E), large lock washers (F), nut (G) and nut cover (H). Do not tighten the bolts at this point.

(Figure 1)

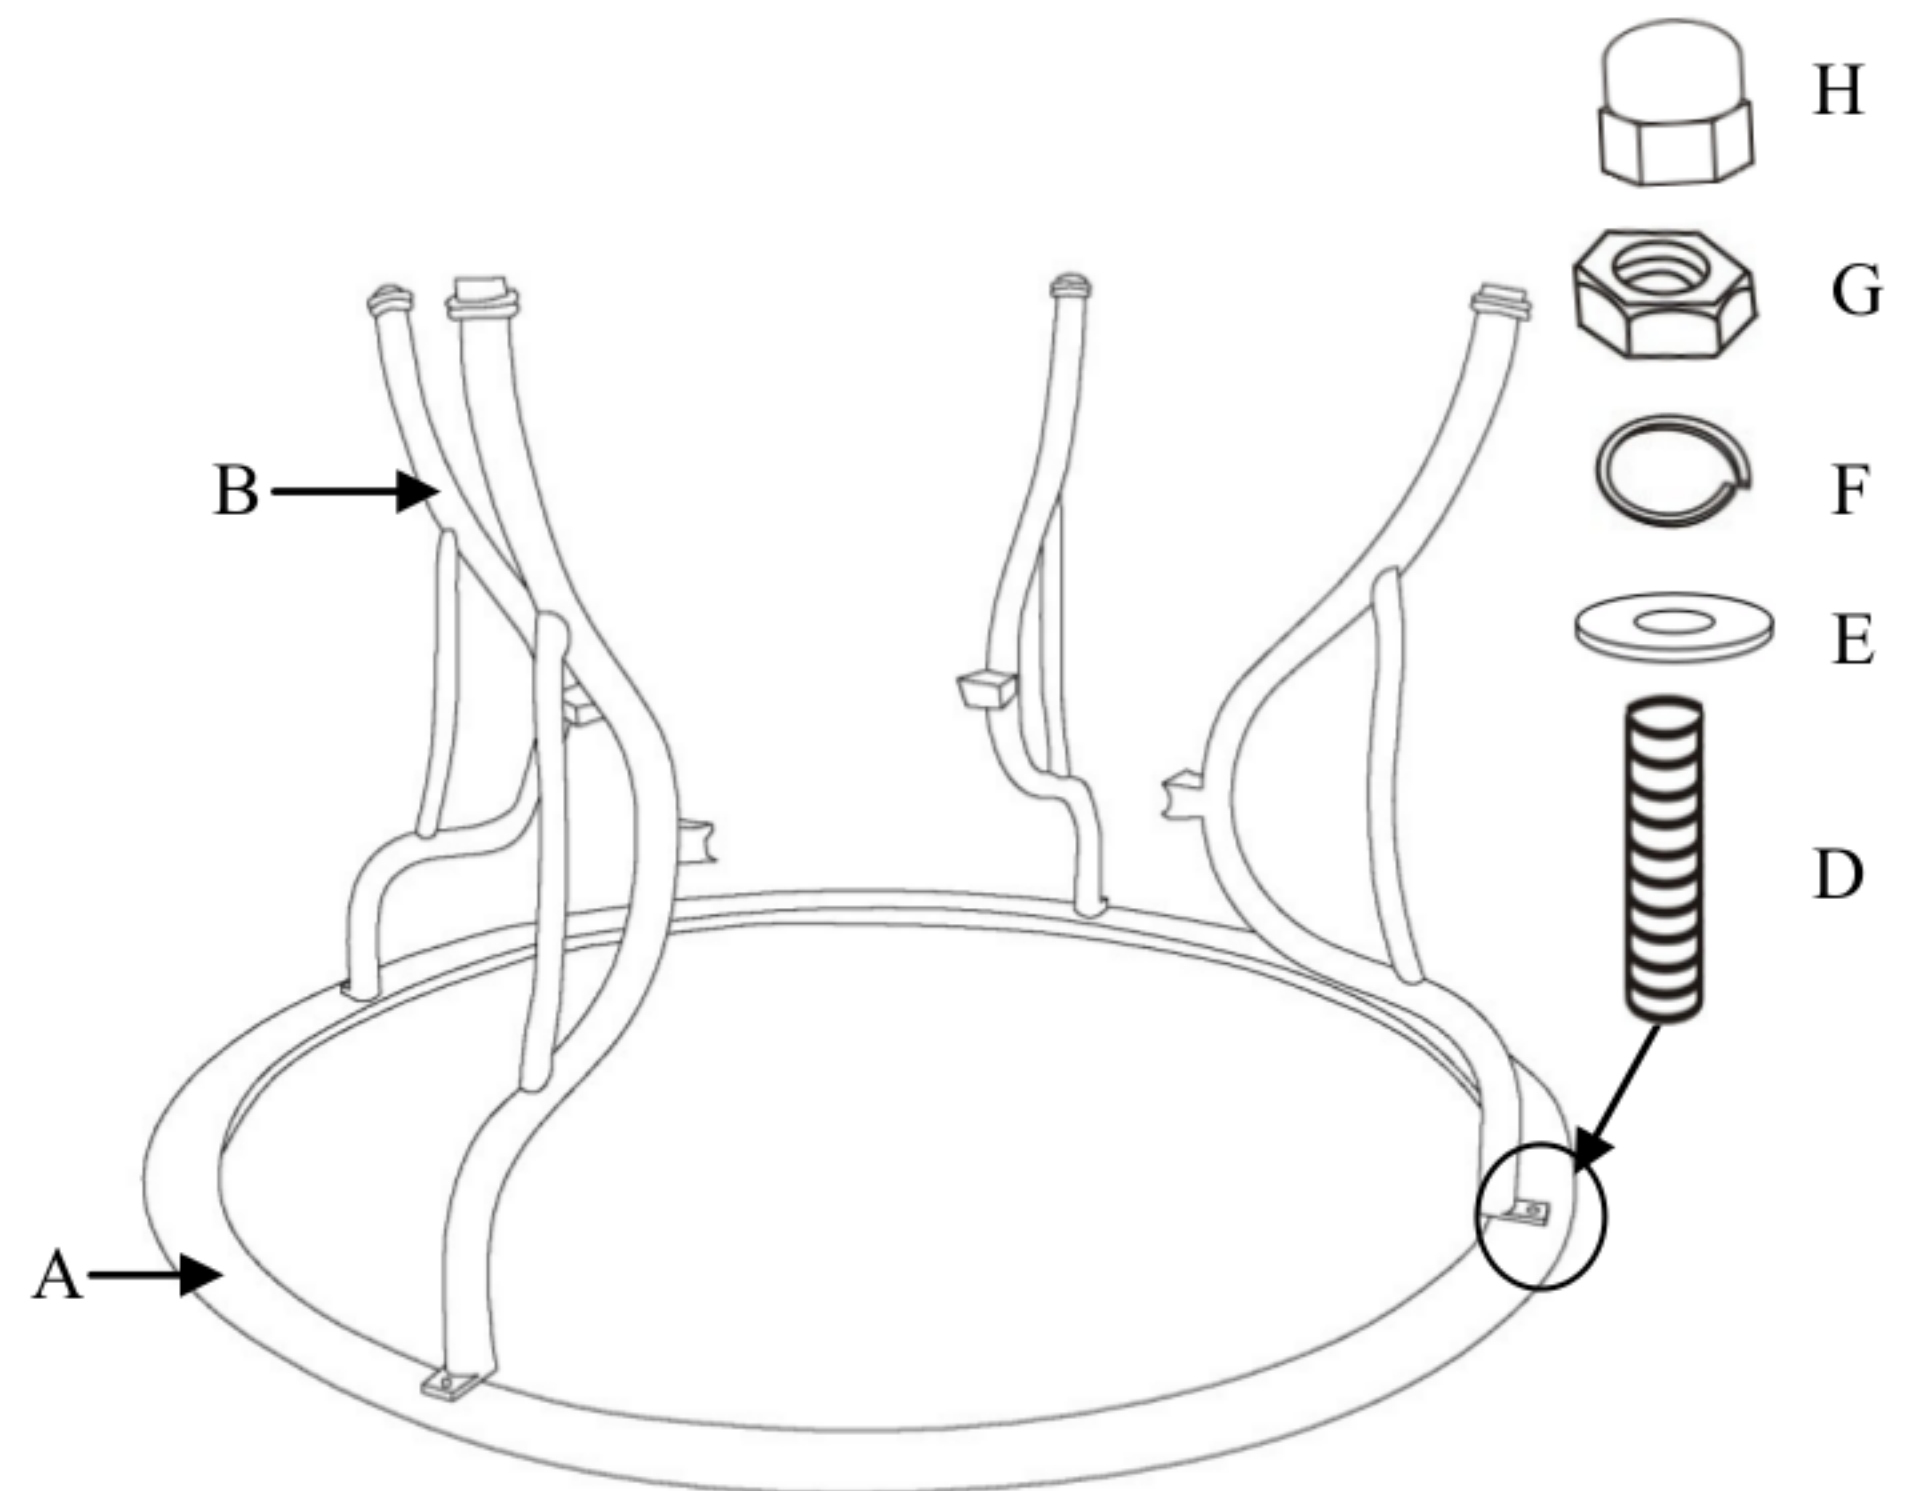


Figure 1

2

Loosely attach the leg connector brace (C) to leg (B) using the small flat washers (J), small lock washers (K), small bolts (I) and PVC covers (L).

Tighten all bolts (D&I) with hex screw driver (M) and wrench (N).

(Figure 2)

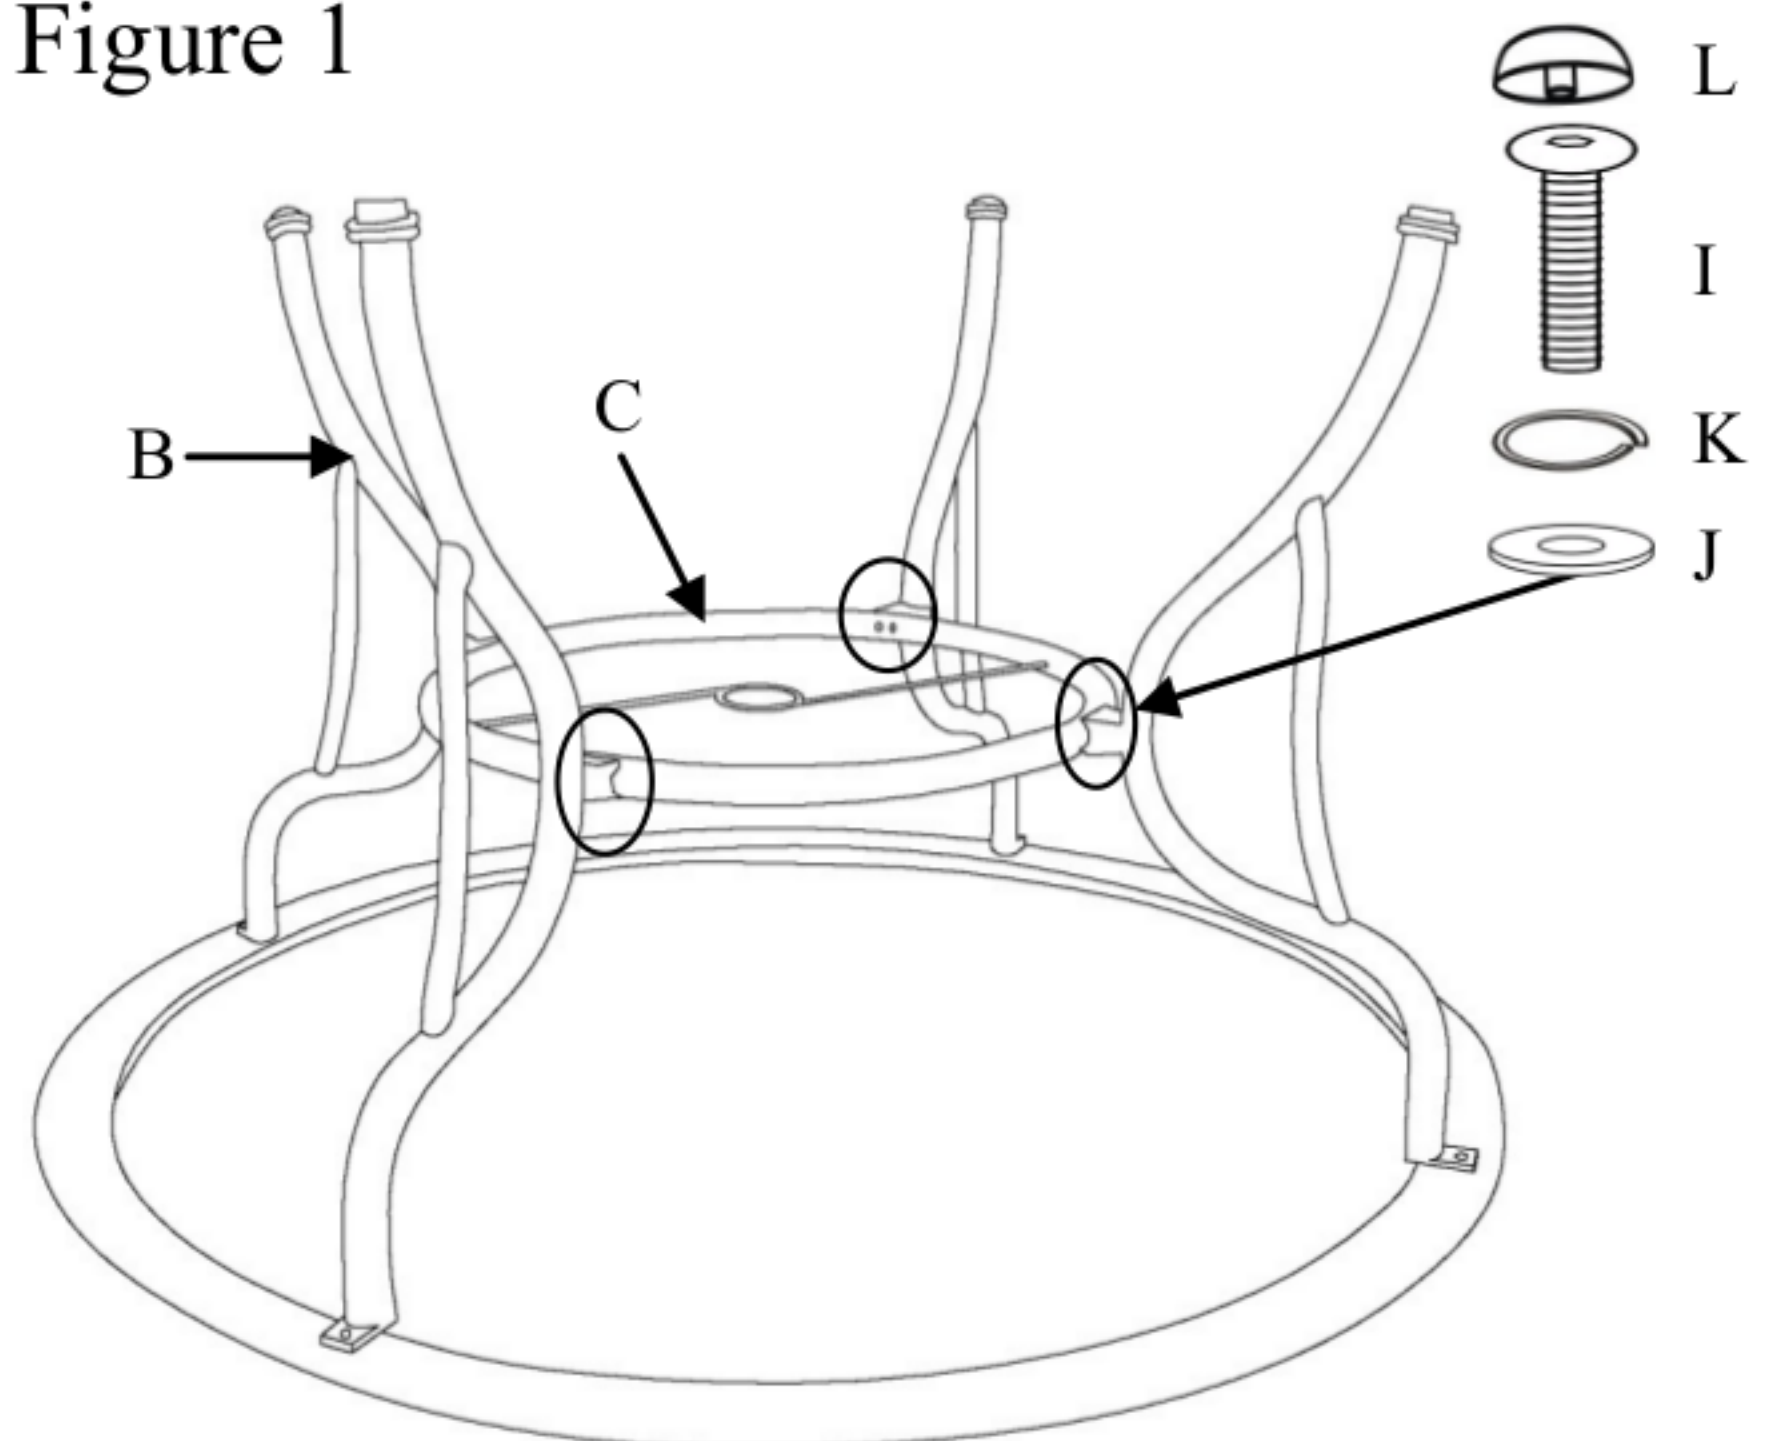


Figure 2

3

Carefully turn the table to the upright position. The assembly is now complete.

(Figure 3)

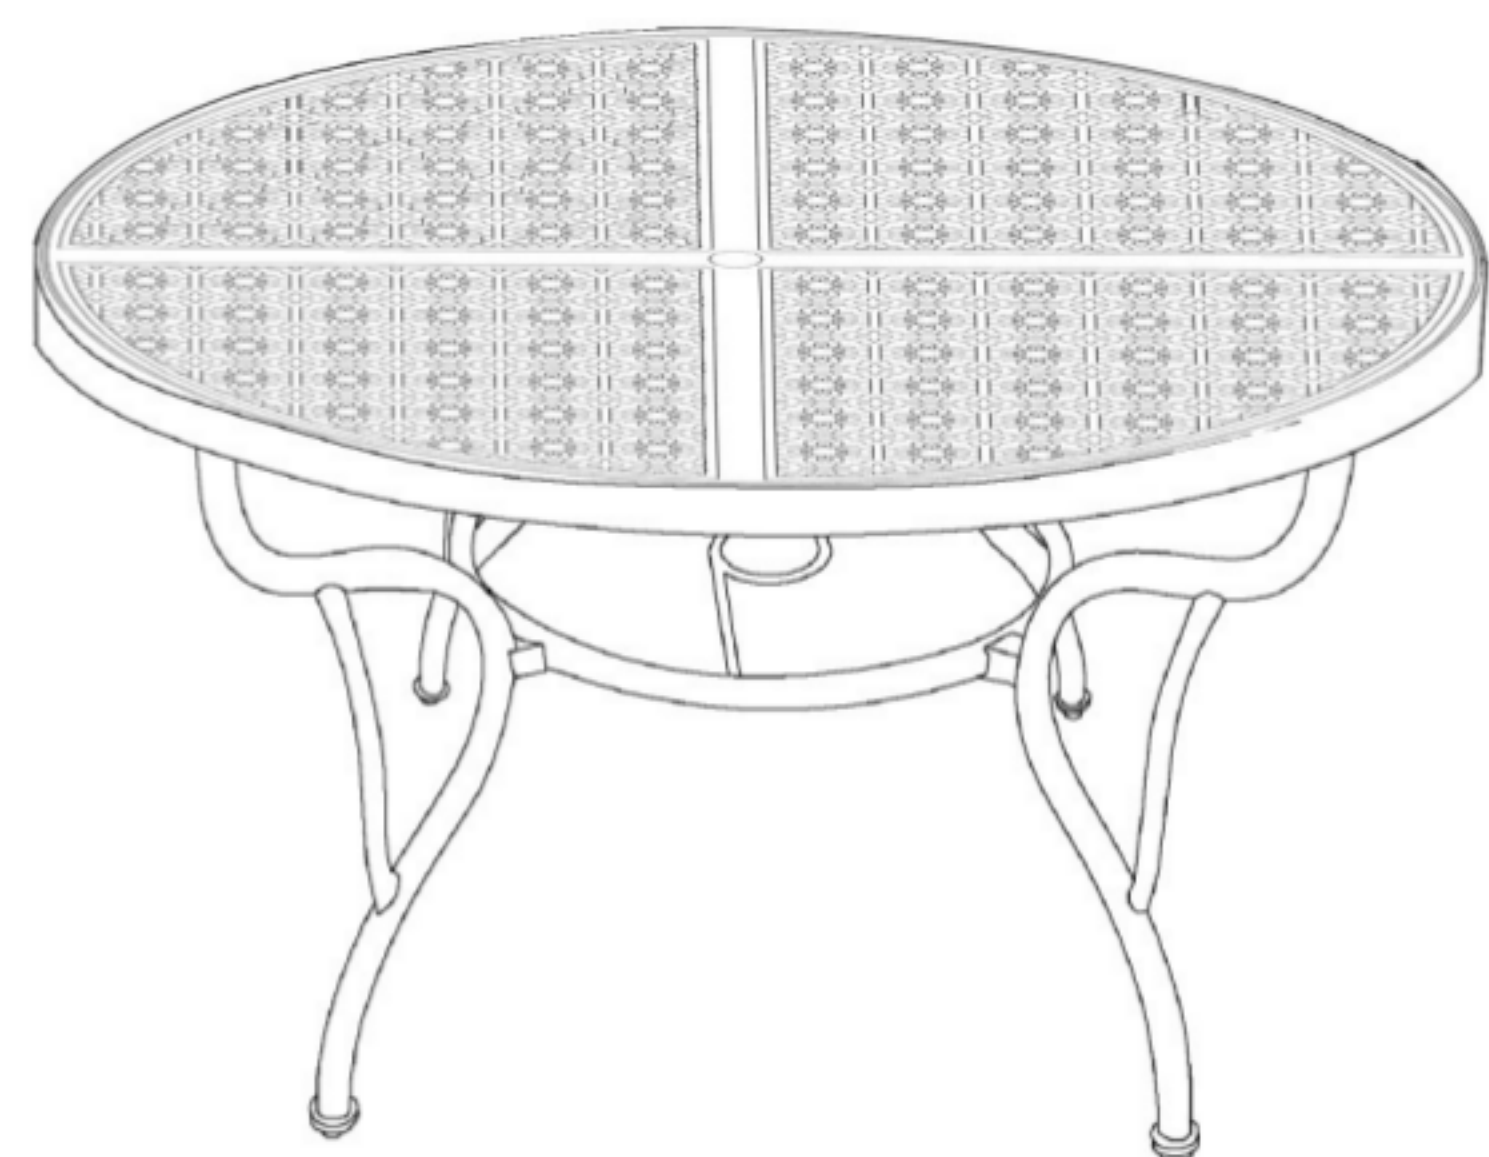


Figure 3