
READ AND SAVE THESE INSTRUCTIONS

Everdure



OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS BBQ MODULE (EKM3BBQ / EKM3BBQBP)

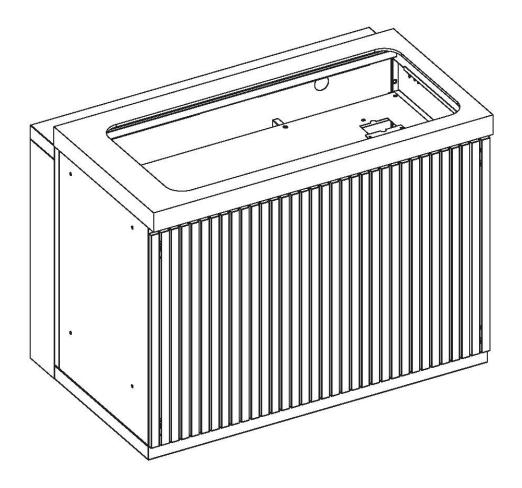

CONTENTS

Important Safety Instructions 3
Appliance Details4
Cleaning & Storage5
Hinge Adjustment5
Parts List6
Module Assembly7-13
Connecting Modules Instructions 14-17
Warranty

Note: In this instruction manual, the BBQ module will be referred to as an appliance

Read these instructions and follow steps carefully to ensure you assemble the appliance correctly and avoid damages. Check that all parts and hardware have been provided before assembling the appliance. Place all contents on a clean, soft-flat surface to avoid scratching the product



IMPORTANT SAFETY INSTRUCTION:

WARNING:





- DO NOT climb, step, or stand on the appliance.
- DO NOT use the appliance for any purpose other than that for which it is designed.
- **DO NOT** exceed the maximum weight for countertop 70kg (150lbs).
- Keep the appliance on a level surface. It may become unstable if stored or moved on a sloping surface and may cause personal injury, and/or damage to the appliance.
- · Always apply leg stabilizers once the appliance has been moved to the area.
- To prevent damage to threads, do not use a power tool and do not overtighten screws.
- Do not use or store this appliance in areas of high salt content (a marine environment) or an area with caustic fumes or liquids (such as a domestic pool), as these chemicals can cause the appliance materials to deteriorate (and void the warranty).
- This built-in barbecue module is for **OUTDOOR USE ONLY** (semi-covered areas, protected from wind and rain). This appliance must **NOT** be used indoors. Follow the assembly and operational instructions of your barbecue in all ways.
- We recommend that you regularly maintain your module and keep them in good condition. This can be achieved by following the cleaning suggestions in this booklet.
- · Use two people to lift and to turn the appliance when assembling.
- · Do not attempt assembly with one person.
- · Keep all hardware and small parts away from children.
- · When moving the appliance secure any items placed on top to prevent damage or personal injury.

4 APPLIANCE DETAILS

APPLIANCE DETAILS:

EKM3BBQ / EKM3BBQBP	WIDTH mm (in)	DEPTH mm (in)	HEIGHT mm (lb)	WEIGHT kg (lb)	MAX TOP COUNTER WEIGHT kg (lb)
	1220 (48.03)	620 (24.41)	920 (36.22)	51 (112)	70 (150)

PACKAGING:

- · Remove all external packaging and remove the appliance from the packaging before use.
- · Removal all internal cartons and packaging from within the appliance assembly.
- Recycle as per local government laws

GENERAL:

It is recommended that, at the commencement of each barbecue season, the following maintenance be conducted on the built-in barbecue module.

- Check all fasteners for tightness and re tighten where necessary to ensure rigidity of the structure.
- Check that the separation panel is firmly fixed in place. This includes the small fixing panel around the gas hose.
- · Check for insect infestation and clean out any cobwebs.
- · Check that all vents are fully open and not blocked.
- · Check for any leaks at the water inlet pipes and at the wastewater pipes.
- Check the seal around the sink, as this can deteriorate over time and allow water to seep into the module.


CLEANING:


Surfaces can be cleaned using a mild household detergent or cleaner and a clean cloth (do not use scourers or harsh detergents). It is advisable to test cleaners on a small section of the appliance first. NEVER use paint thinners or similar solvents for cleaning and NEVER pour cold water over hot surfaces. Dry the surface afterwards. DO NOT use high pressure cleaners or steam cleaners, as this can damage the module surface causing it to break down and lift away.

STORAGE:


When the appliance is not in use, MUST be under cover and covered (preferably with a purpose made cover) out of the weather

HINGE ADJUSTMENT:

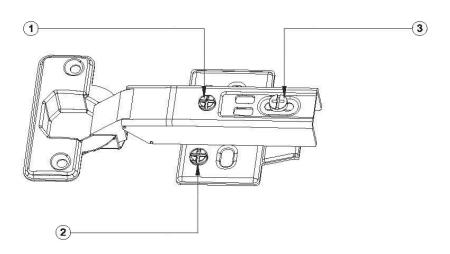

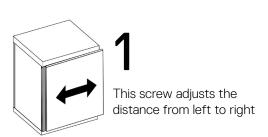




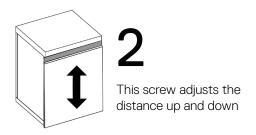

PARTS LIST:

 Tools required:



Phillips head screwdriver



Flat head screw M4*12 16 PCS



Screw M4*12 35 PCS





Screw M6*16 17 PCS

Washer Ø18-Ø6.5 17 PCS




Screw M8*16 4 PCS

Washer Ø18-Ø8.5 4 PCS



	010 00.0 41 00		
NO.	PART NAME	QTY	PCS
1	Table top	1	PC
2	Rear infill top panel-A	1	PC
3	Rear infill side panel-B	1	PC
4	Rear infill side panel-C	1	PC
5	Back panel	1	PC
6	Separation panel	4	PCS
7	Support bracket-A	1	PC
8	Support bracket-B	1	PC
9	Centre shelf	2	PCS
10	Middle plate	1	PC
11	Right panel	1	PC
12	Left panel	1	PC
13	Base panel	1	PC
14	Left side door	5	PCS
15	Right side door	2	PCS
16	Rear infill bracket-A	5	PCS
17	Rear infill bracket-B	2	PCS
18	Towel Rack	1	PC
19	Stiffener bracket	1	PC

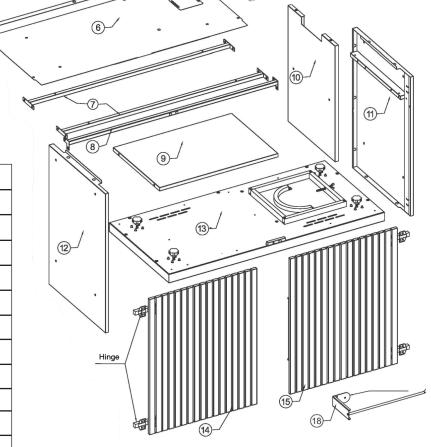



NO.	PART NAME	QTY	PCS
А	Screw M8*16	4	PCS
В	Screw M6*16	17	PCS
С	Screw M4*12	35	PCS
D	Flat head screw M4*12	16	PCS
Е	Washer Ø12	35	PCS
F	Washer Ø18 - Ø6.5	17	PCS
G	Washer Ø18 - Ø8.5	4	PCS


Please contact Everdure for any spare part related inquires.





MODULE ASSEMBLY INSTRUCTIONS:

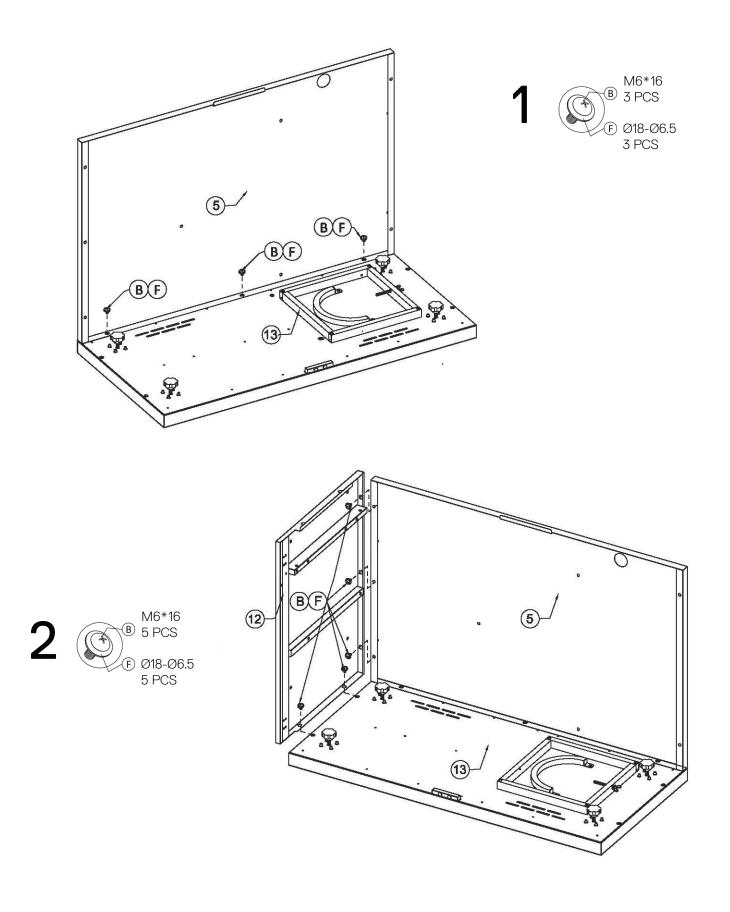


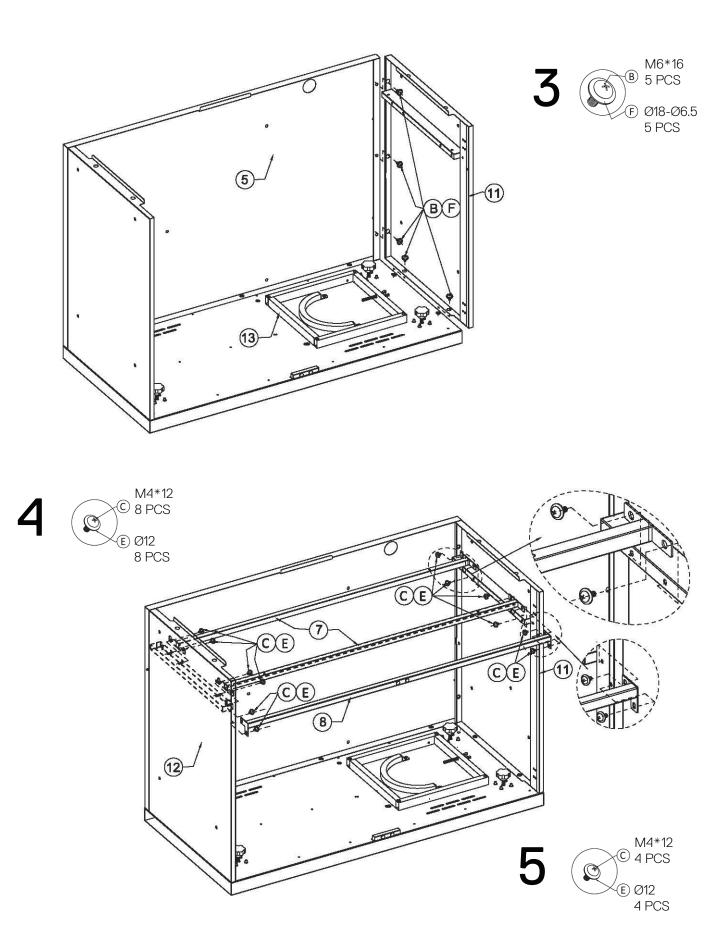


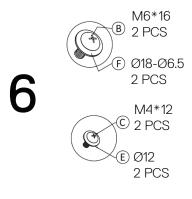


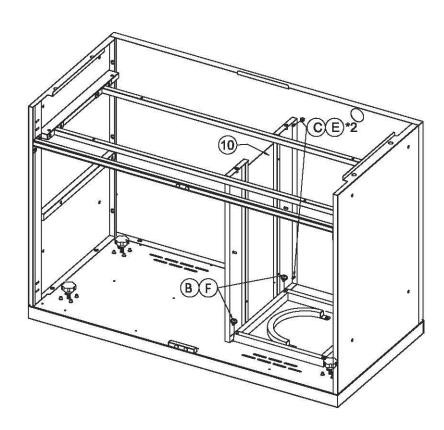


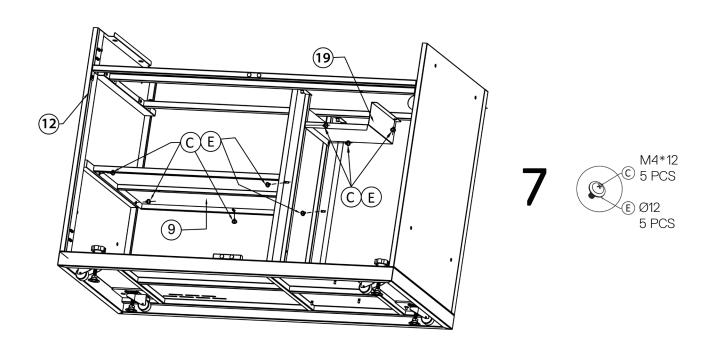

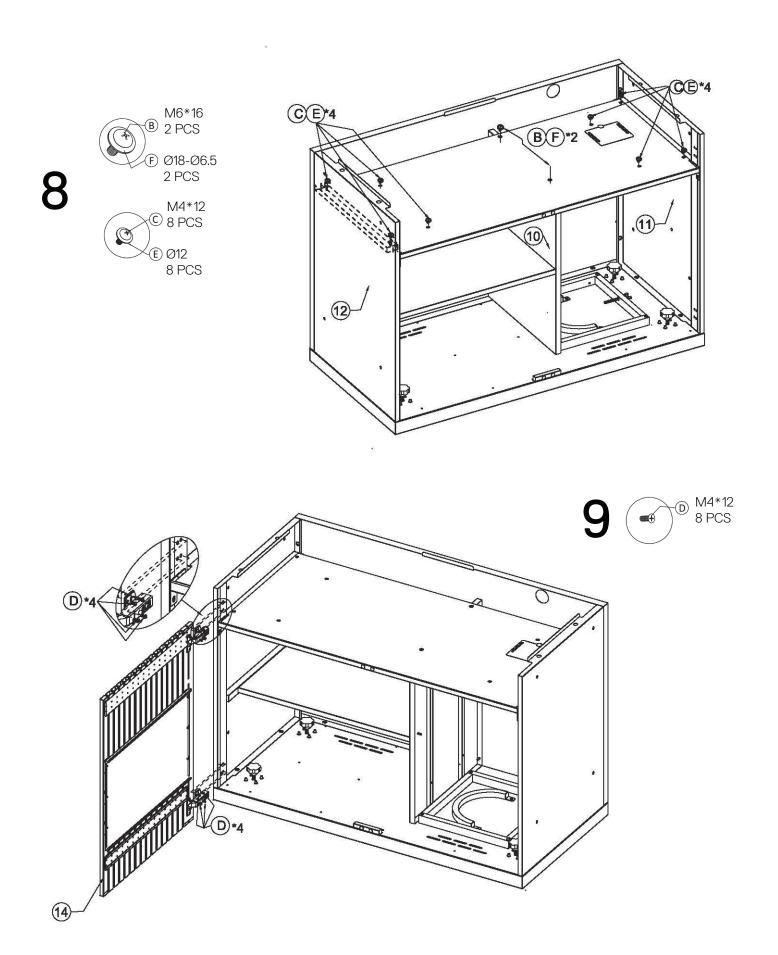


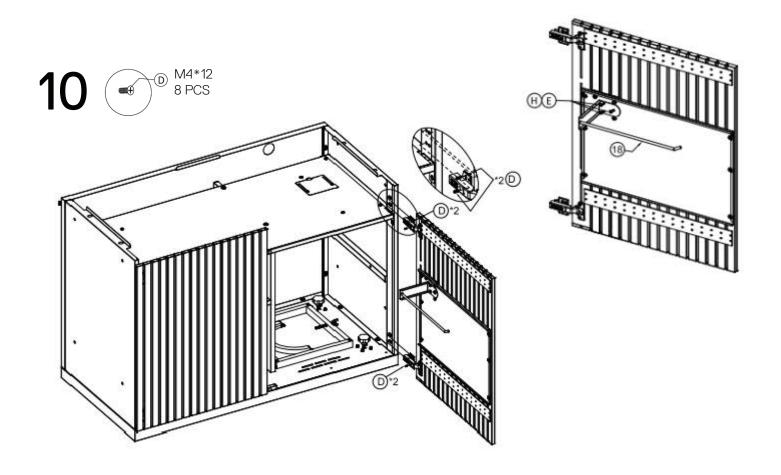


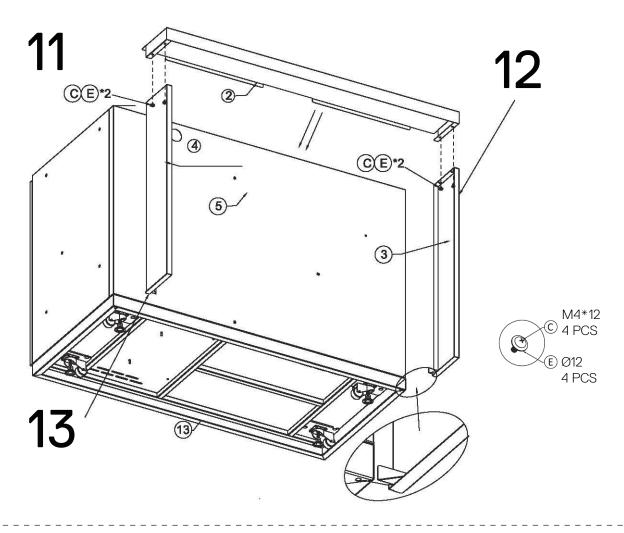


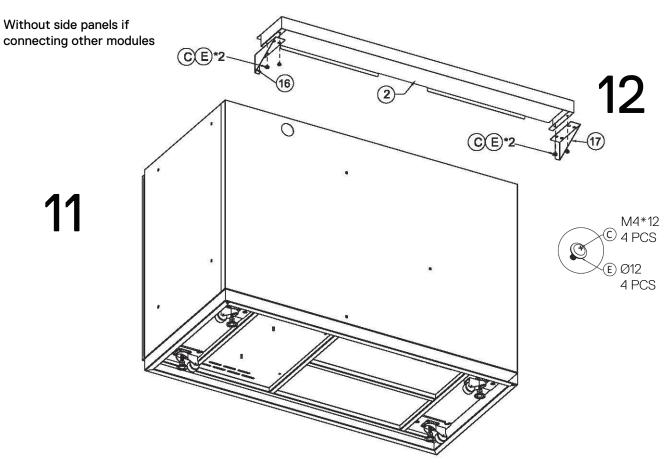


14

 


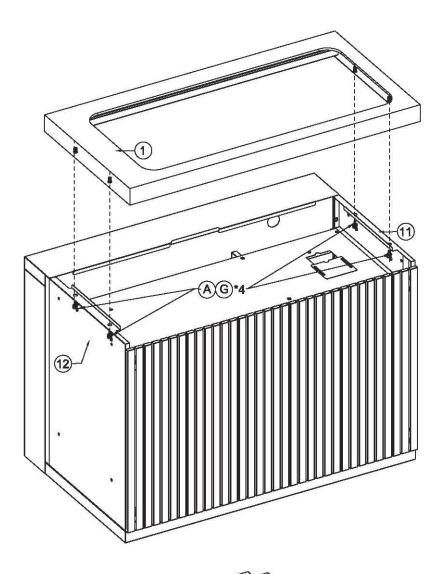

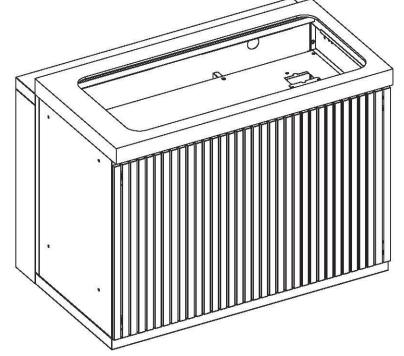


CONNECTING MODULES INSTRUCTIONS

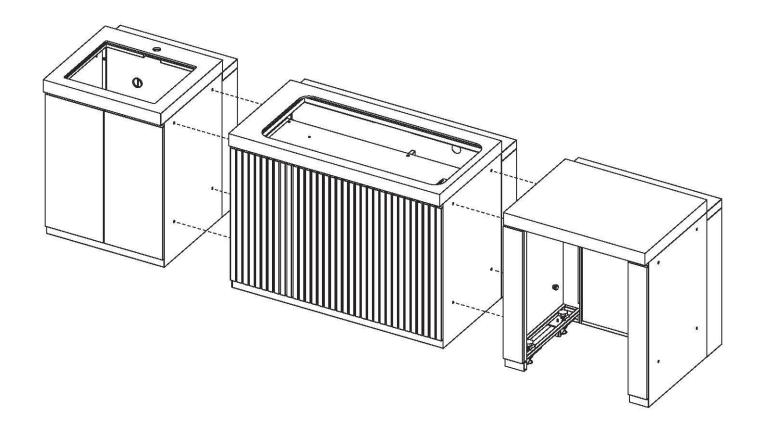


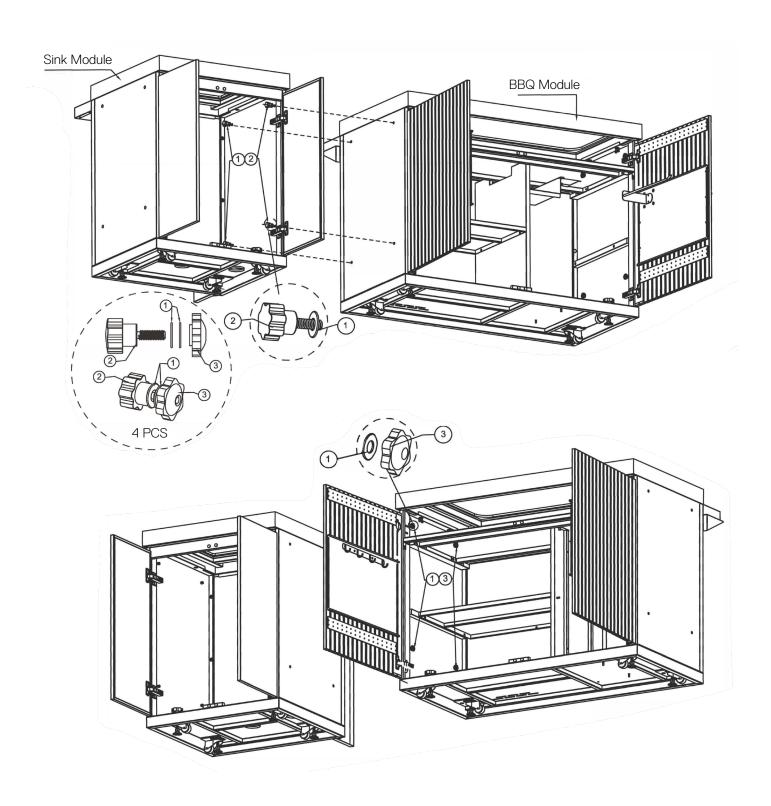

1	Ø18-Ø6.5	8	PCS
2	M6*20	4	PCS
3	M6	4	PCS

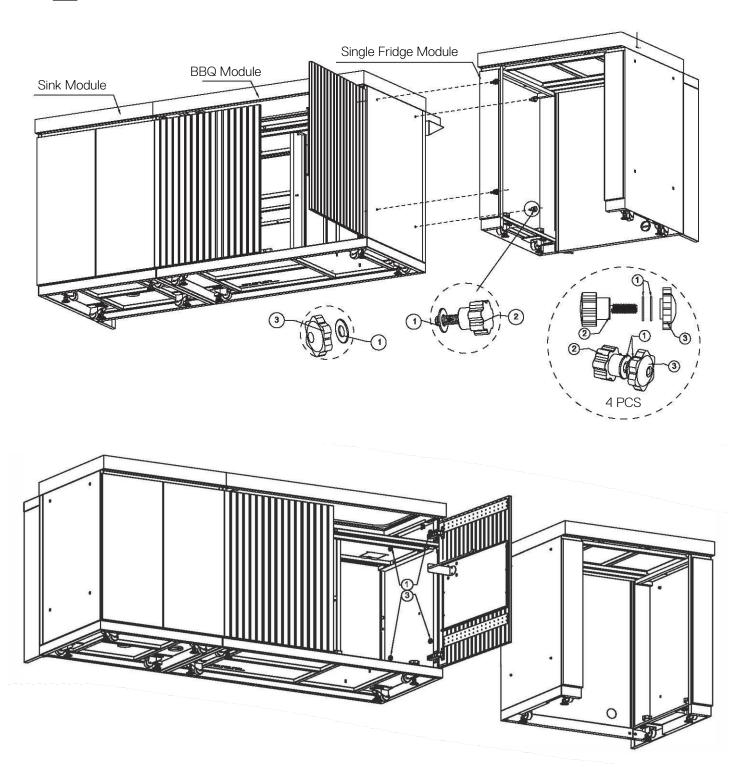

1	Ø18-Ø6.5	8	PCS
2	M6*20	4	PCS
3	M6	4	PCS

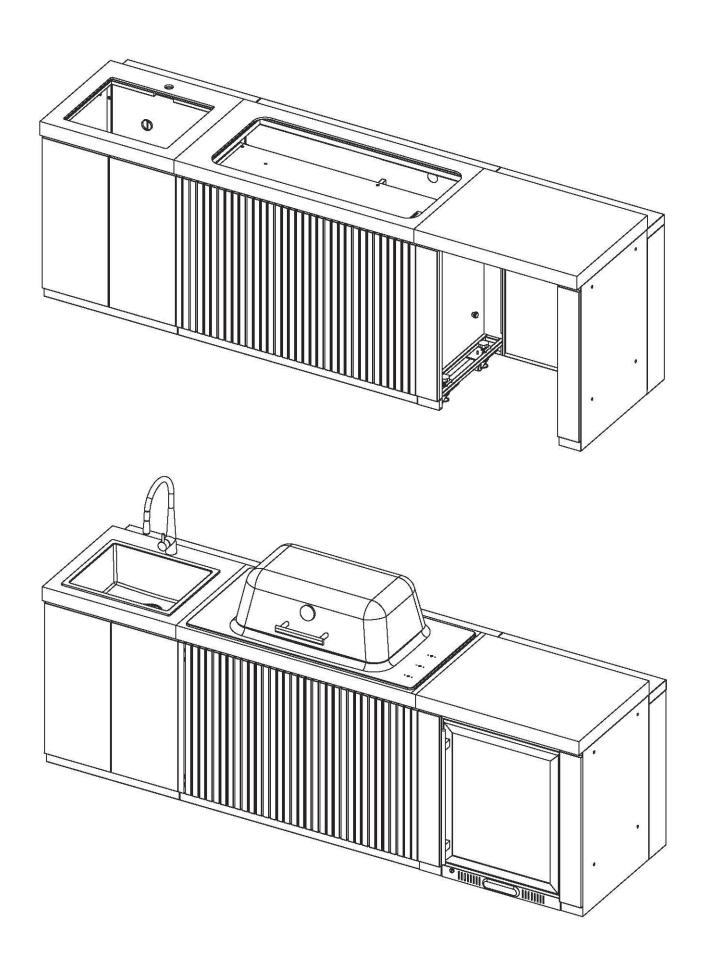

18 WARRANTY

WARRANTY (AU/NZ):

APPLIANCE WARRANTY

PRIVACY POLICY

Privacy policy: Everdure is committed to protecting your personal privacy. Your personal information that you have provided in this form (e.g., name, street address, email address and telephone/mobile number) is used solely

by Everdure for the express purpose for which is was collected (e.g., to respond to your enquiry regarding your appliance). Your personal information will be processed by Everdure in accordance with the guidelines and requirements of the Privacy Laws of Australia (Privacy Act 1998).

For a full copy of Everdure's Privacy Policy, please e-mail customercare@shriro.com.au in Australia or customercare@monacocorp.co.nz in New Zealand or call 1300 766 066 in Australia or (09) 415 6000 in New Zealand

STATEMENT OF STANDARD WARRANTY CONDITIONS

AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss of damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

OUR WARRANTY

Subject to the following conditions, this appliance is also covered by the manufacturer's warranty from the date of purchase, covering all parts and labour for the period listed below (Our Warranty). Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defected materials or components, or faulty workmanship. The appliance will be repaired or replaced at the option of Everdure, but all costs of installation, removal, cartage, freight, travel expenses and insurance are to be paid by the claimant. Our Warranty is subject to appliances being used for single-family domestic household use.



19 WARRANTY

Our Warranty

Operates in additional to (and does not exclude, restrict, or modify) any rights or remedies to which you may already be entitled to under the Australian Consumer Law or any consumer guarantee law relating to this appliance.

WHAT IS COVERED: By Our Warranty

During the warranty period your appliance will be repaired free of charge by Everdure, or its authorised service centre provided your appliance is delivered to and picked up from Everdure or its authorised service centre, subject to terms and conditions below.

It is recommended that exposure of the appliance to the elements should be minimised. After the appliance has been cleaned, store it under cover with a weatherproof cover over it.

WHAT IS NOT COVERED: By Our Warranty

- 1. Any defect or failure caused by the appliance not being assembled or used in accordance with the instruction/installation manual provided with the appliance.
- 2. Normal fair wear and tear (e.g., surface rust & discolouration).
- 3. Insect or vermin infestation.
- 4. Unauthorised repairs or use of non-genuine Everdure parts.
- 5. Appliance scratches & damage as a result of delivery, installation, or assembly.
- 6. Claims to appliance surface coatings due to accidental damage, improper or lack of maintenance, damage from cleaning appliance not recommended by Everdure.

HOW TO CLAIM OUR WARRANTY

You will need to contact Everdure in Australia or New Zealand using the enclosed contact details. Please make sure you have the following information on hand:

- Appliance Name/Model Number
- Purchase Date (as per invoice, or proof of purchase)
- Place of Purchase

SHRIRO USA INC. Incorporation Number 7164875 25541 Arctic Ocean Drive

Lake Forest, CA 92630 USA
Tel (toll free): +1 (877) 794 2622
Email: sales@shrirousa.com
Website: www.everdure.com

WORLD WIDE APPLIANCES 48 Moore Street Leichhardt, NSW 2040 Australia Tel: 1300 766 066 Website: www.everdure.au



Everdure

SHRIRO USA INC. Incorporation Number 7164875 25541 Arctic Ocean Drive Lake Forest, CA 92630 USA

Email: sales@shrirousa.com Website: www.everdure.com

Tel (toll free): +1 (877) 794 2622

WORLD WIDE APPLIANCES 48 Moore Street Leichhardt, NSW 2040 Australia Tel: 1300 766 066

Website: www.everdure.au