



# How to replace the igniter

1- Unscrew the push button



2- Remove AA battery, unscrew plastic nut



3- Remove Igniter from below



4- Unplug black wire



5- Connect the new igniter



6- Replace the new igniter, Screw the plastic nut place a new AA battery and screw the push button as described in item 3, 2 and 1