


Purchase Date: / / Order/Customer Reference Numbe

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty
If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email:

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

LONGFORD RESIN WICKER CHAISE SOFA SECTIONAL PATIO FURNITURE SET

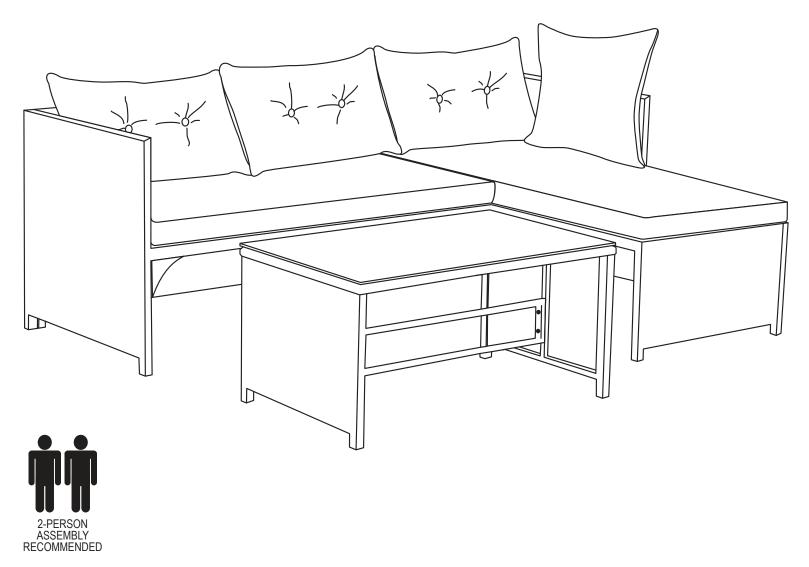


HELPFUL HINT

Sunnydaze Decor advises reading this manual fully, and assembling the furniture set soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning. Save this manual for future reference.

COMPONENTS

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

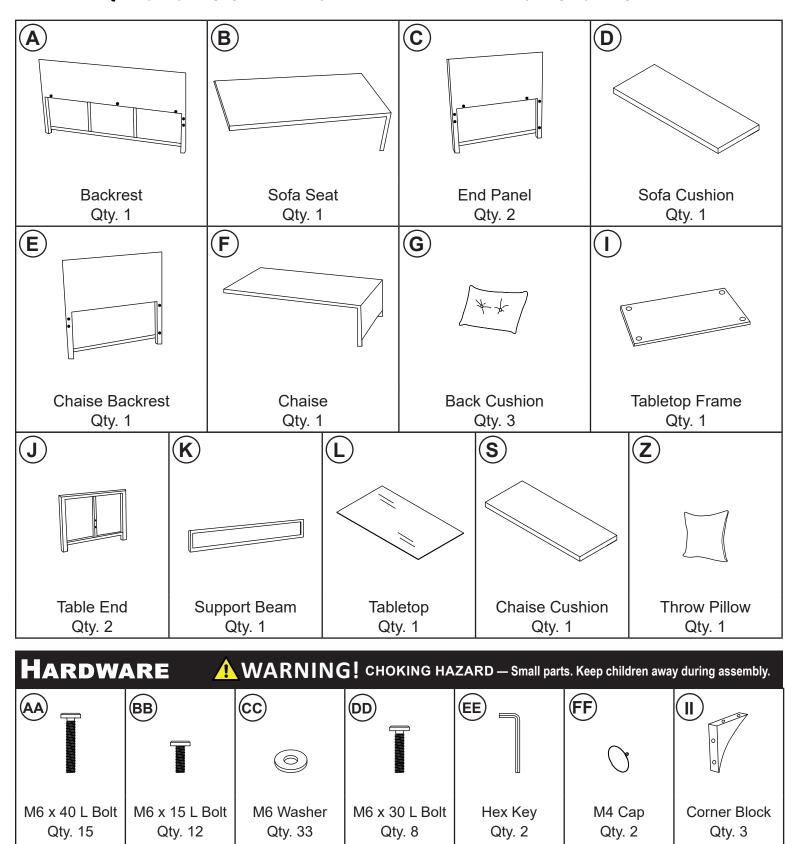

! HELPFUL HINT: Do not tighten hardware until all components have been loosely assembled. If the hardware is tightened too soon, mounting holes may not align, and parts may not easily fit together.

SECTIONAL ASSEMBLY


STEP 1

A: 1

B: 1

AA: 4

CC: 4

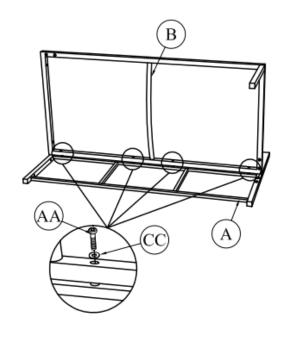


Do not fully tighten hardware until after Step 7 is complete.

STEP 2

C: 1

AA: 3

CC: 3

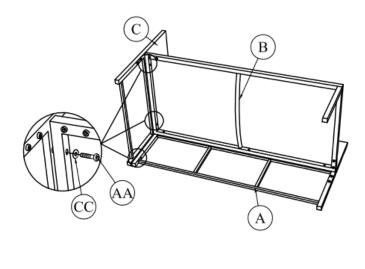

Do not fully tighten hardware until after Step 7 is complete.

STEP 3


AA: 1

BB: 8

CC: 9

FF: 1

II: 2

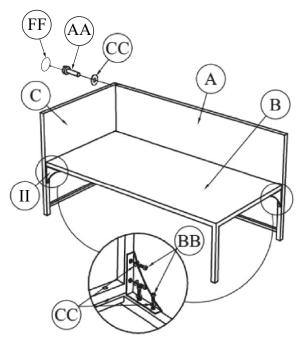

Do not fully tighten hardware until after Step 7 is complete.


STEP 4

E: 1

F: 1

AA: 2

CC: 2

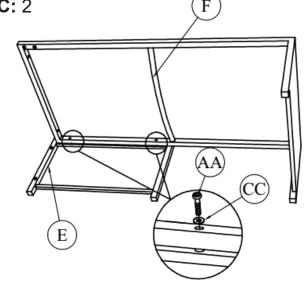


Do not fully tighten hardware until after Step 7 is complete.

STEP 5

C: 1

AA: 3

CC: 3

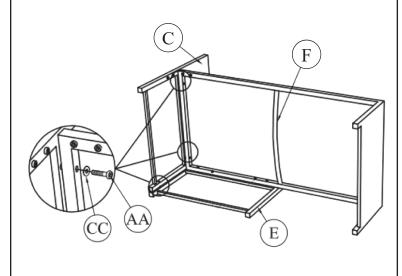

Do not fully tighten hardware until after Step 7 is complete.

STEP 6


AA: 1

BB: 4

CC: 5

FF: 1

II: 1

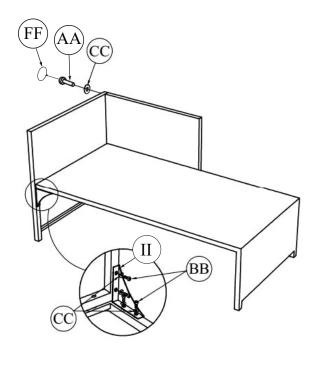


Do not fully tighten hardware until after Step 7 is complete.

STEP 7

AA: 1

CC: 1

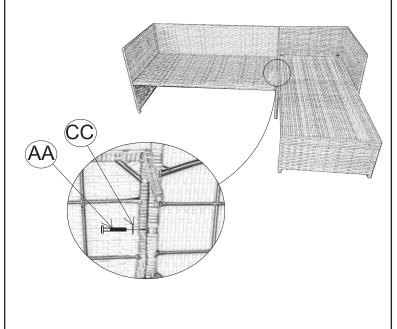

Do not fully tighten hardware until all components in this step have been connected.

STEP 8

D: 1

G: 3

S: 1

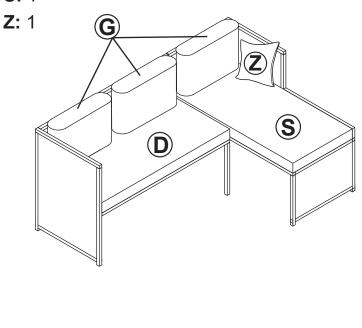


TABLE ASSEMBLY


STEP 9

I: 1

J: 2

CC: 4

DD: 4

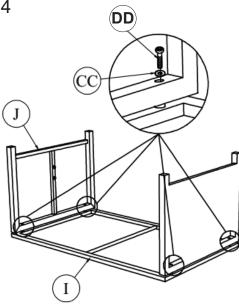


Do not fully tighten hardware until after Step 9 is complete.

STEP 10

K: 1

CC: 4


DD: 4

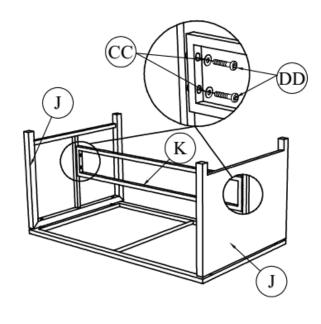

Do not fully tighten hardware until all components in this step have been connected.

STEP 11

L: 1

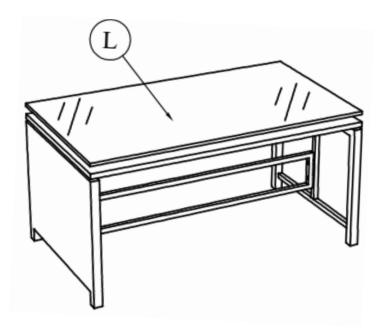

Care & Maintenance

Resin wicker furniture requires minimum maintenance. Follow these basic tips to prolong the life of your resin wicker furniture.

Protect: Storing cushions indoors when the furniture is not in use is highly recommended.

Cover: Covering the furniture with a breathable cover when it's not being used will help protect it from the harmful effects of sunlight, dust build-up, and collecting debris.

Sun Exposure: All materials and fabrics will eventually fade and degrade from sun exposure. Maintain cushion color and integrity by covering the furniture or storing cushions indoors when not in use.

Winter Care & Storage: Move the furniture to a cool, dry location to preserve the quality and to protect the frame from rusting. Covering furniture while in storage is recommended to help prevent dust build-up. Ensure cushions are completely dry before storing.

Cleaning

Regular cleaning keeps your resin wicker furniture looking stunning for many Sunnydaze to come! Do not use harsh chemicals or abrasive materials to clean the furniture.



DO NOT USE BLEACH



Cushions/Pillows

- Brush or vacuum loose dirt from the cushions.
- · Wipe the cushions down using a soft cloth and cool water. For more stubborn stains, clean with mild soap and cool water, using a soft-bristle brush.

Furniture

- Remove all cushions and tabletop.
- Brush, vacuum or use a garden hose to remove loose dirt and debris. If using a hose with a spray nozzle, use gentle or medium pressure settings; using high-pressure sprayer settings will damage the construction of the furniture and void the product warranty.
- Mix 1/4 cup of soap or a mild detergent with 1 gallon of warm water. Using a soft-bristle brush, gently scrub the dirt and grime from the resin wicker.
- Spray with the garden hose or use a bucket of water to rinse all traces of soap residue from the furniture.

🛕 SAFETY STATEMENTS & WARNINGS 🛕

- Do not exceed the weight capacity of the furniture.
- Do not sit, stand, or climb on the table.
- Inspect hardware often and tighten loose hardware before use.
- Do not put hot items on or near furniture.
- Keep furniture a safe distance from heat sources such as fire pits, patio heaters, and grills.
- Do not allow children to use this product without adult supervision.
- Do not use harsh chemicals or abrasive materials to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

♠WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.