


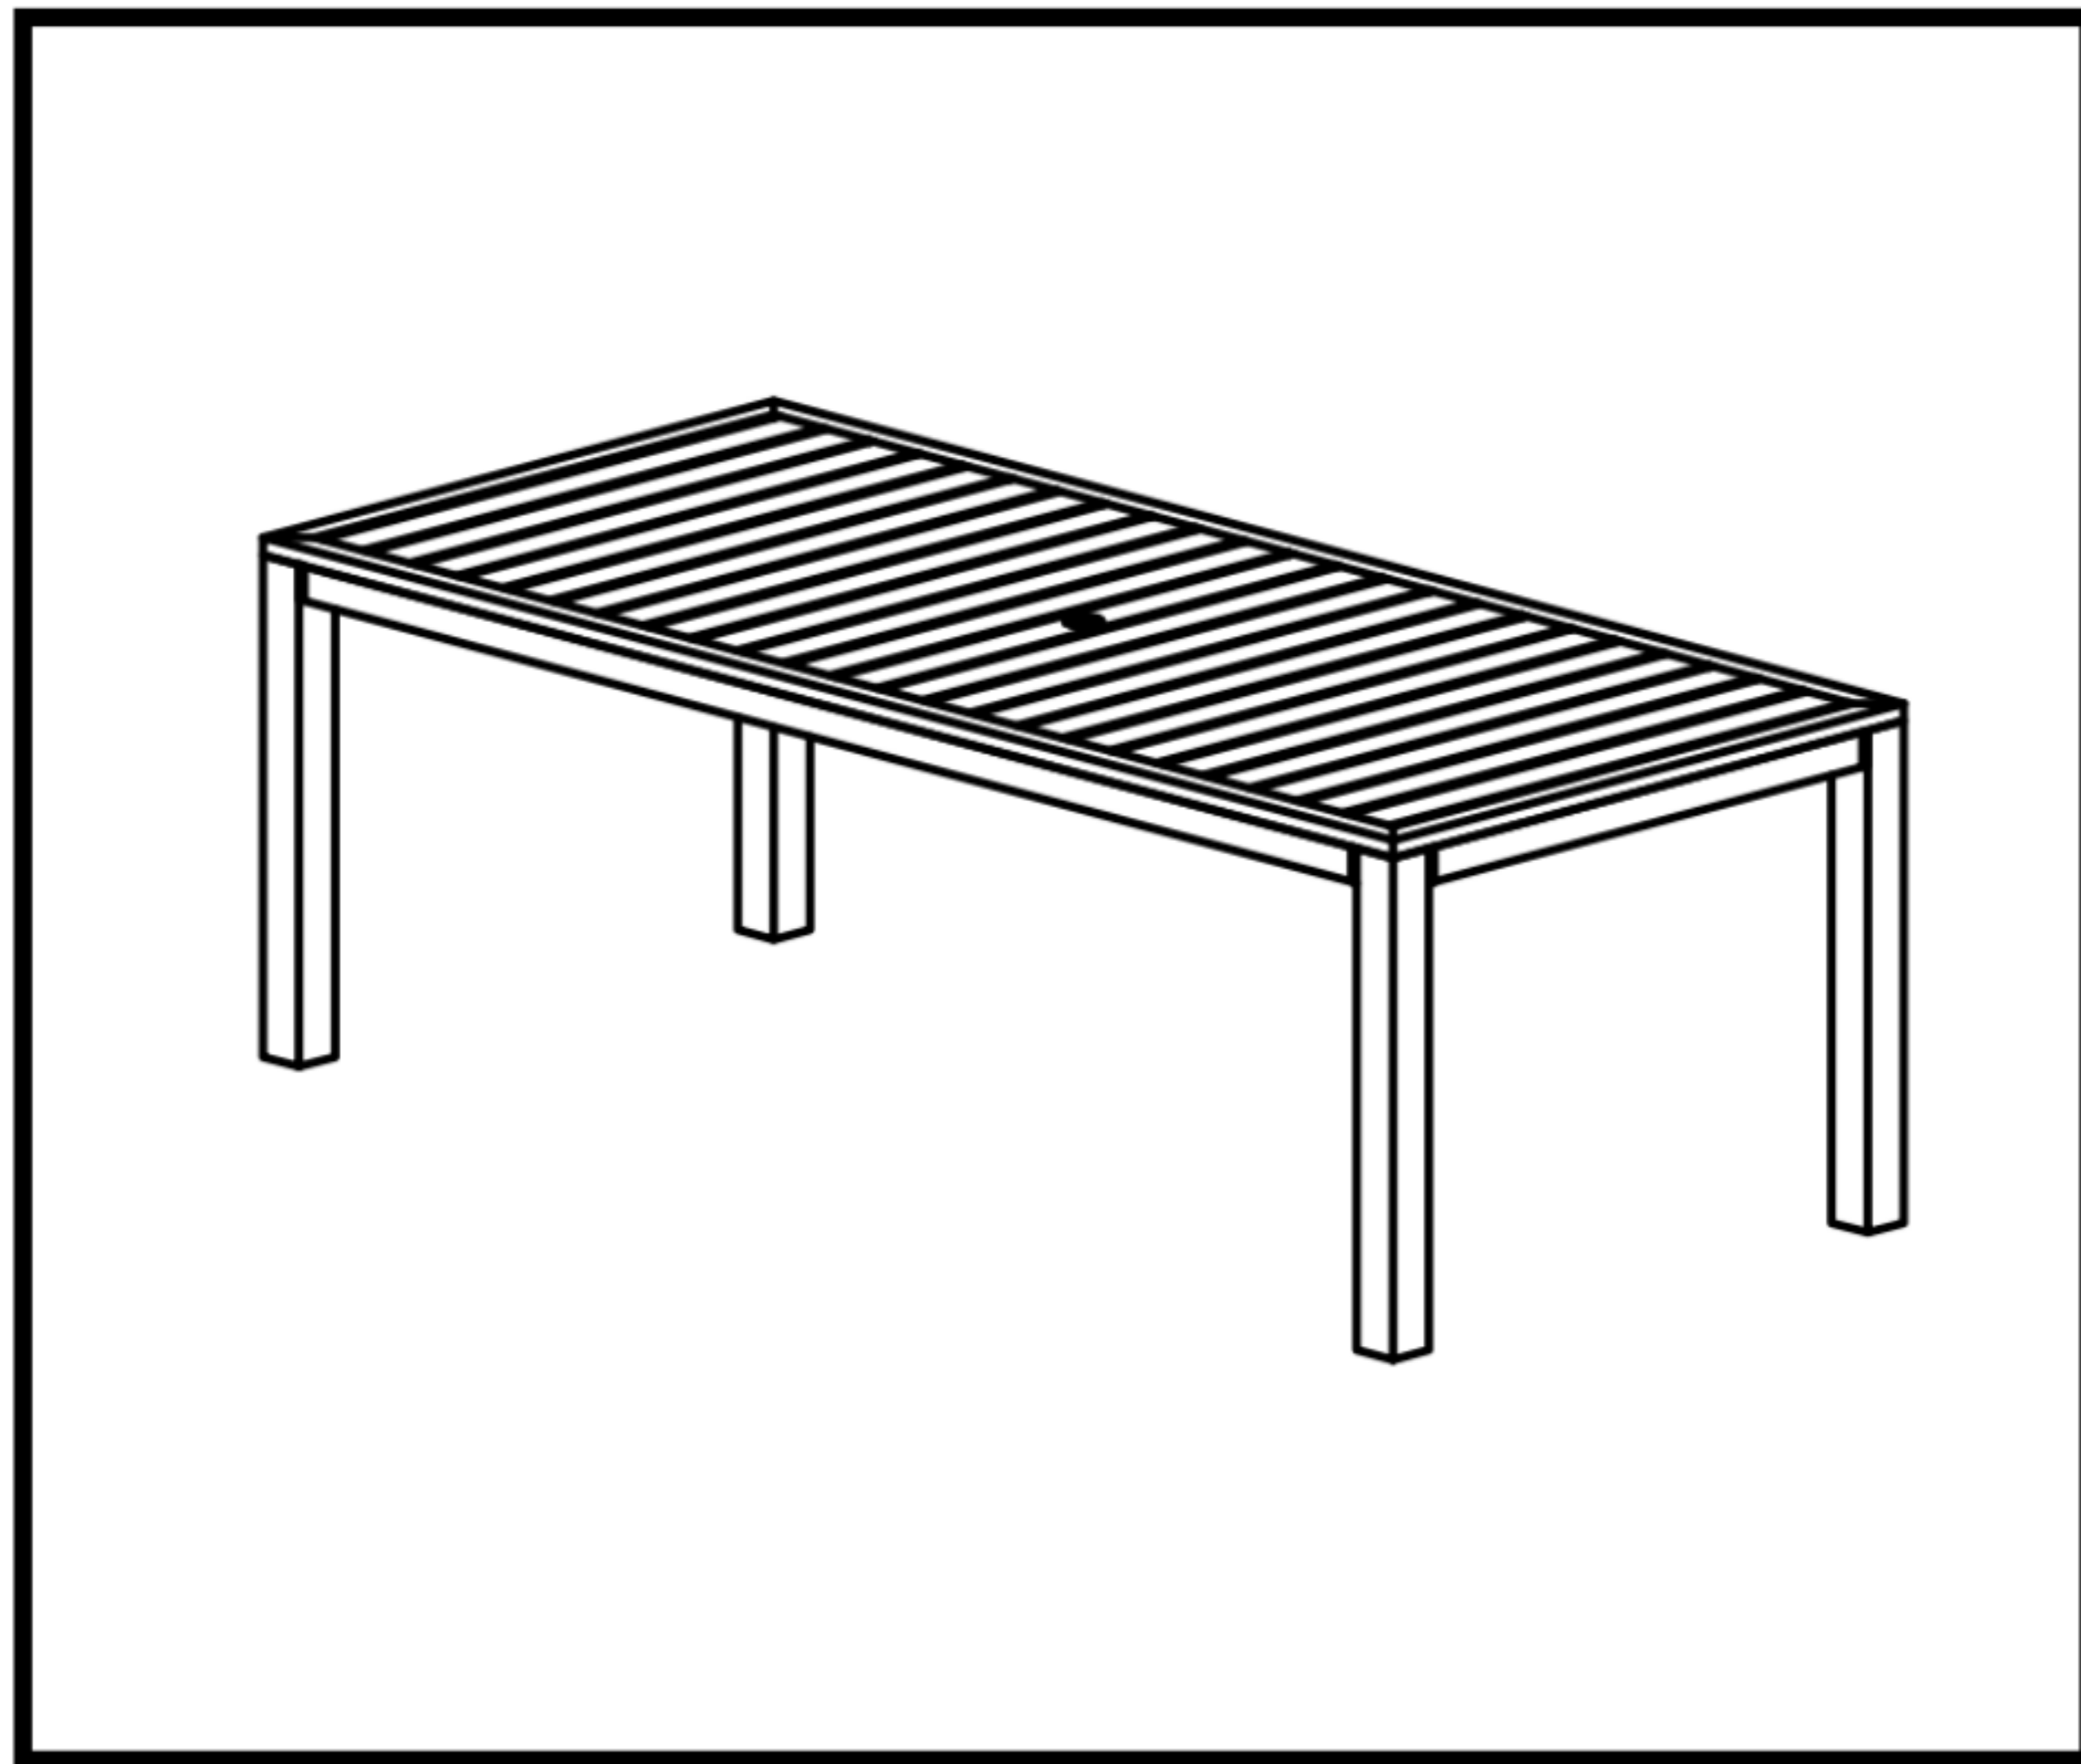

Lafitte 87×39 Inch Rectangular Patio Dining Table



Customer Service

CustomerService@ShoppersChoice.com

Monday-Friday 7-9, Sat. 9-3, Sun. 12-6 CST

Toll Free: 1-877-743-2269

www.ShoppersChoice.com




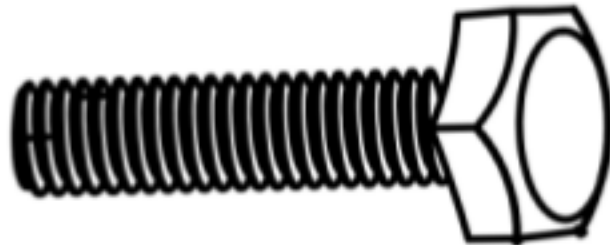




WARNING

Please read instructions carefully and thoroughly before assembling. Check parts against the parts list to make sure you have all the parts needed for proper assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

DO NOT ATTEMPT TO ASSEMBLE IF PARTS ARE MISSING OR DAMAGED. IMPROPER ASSEMBLY MAY RESULT IN DAMAGE OR SERIOUS INJURY .

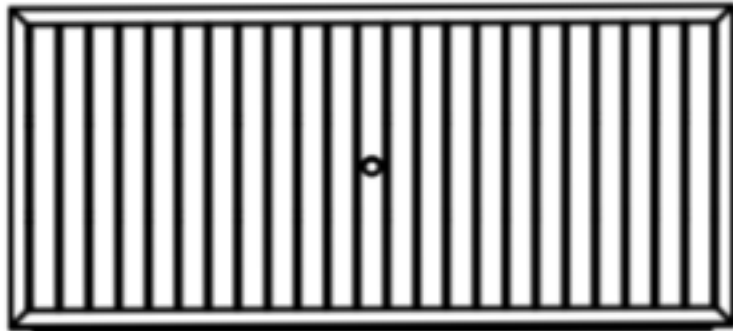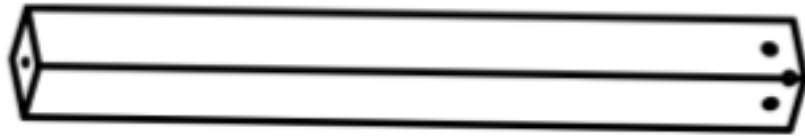To assemble, place the item on a non-abrasive flat surface to prevent scratching.


PARTS LIST

PART	DESCRIPTION	PICTURE	QTY
A	Table top		1
B	Table leg		4
C	Bolt cover		12
D	Bolt(5/16 × 1.38")		4
E	Bolt (5/16×1.18")		8
F	Lock washer		12
G	Flat washer		12
H	Wrench		1

1 Loosely attach the legs (B) to the table top (A) with bolts (D&E) through lock washers (F) , flat washers (G). Check to make sure the table legs (B) are aligned properly. Once aligned, securely tighten the bolts (D&E) with wrench (H).

(Figure 1)

Figure 1

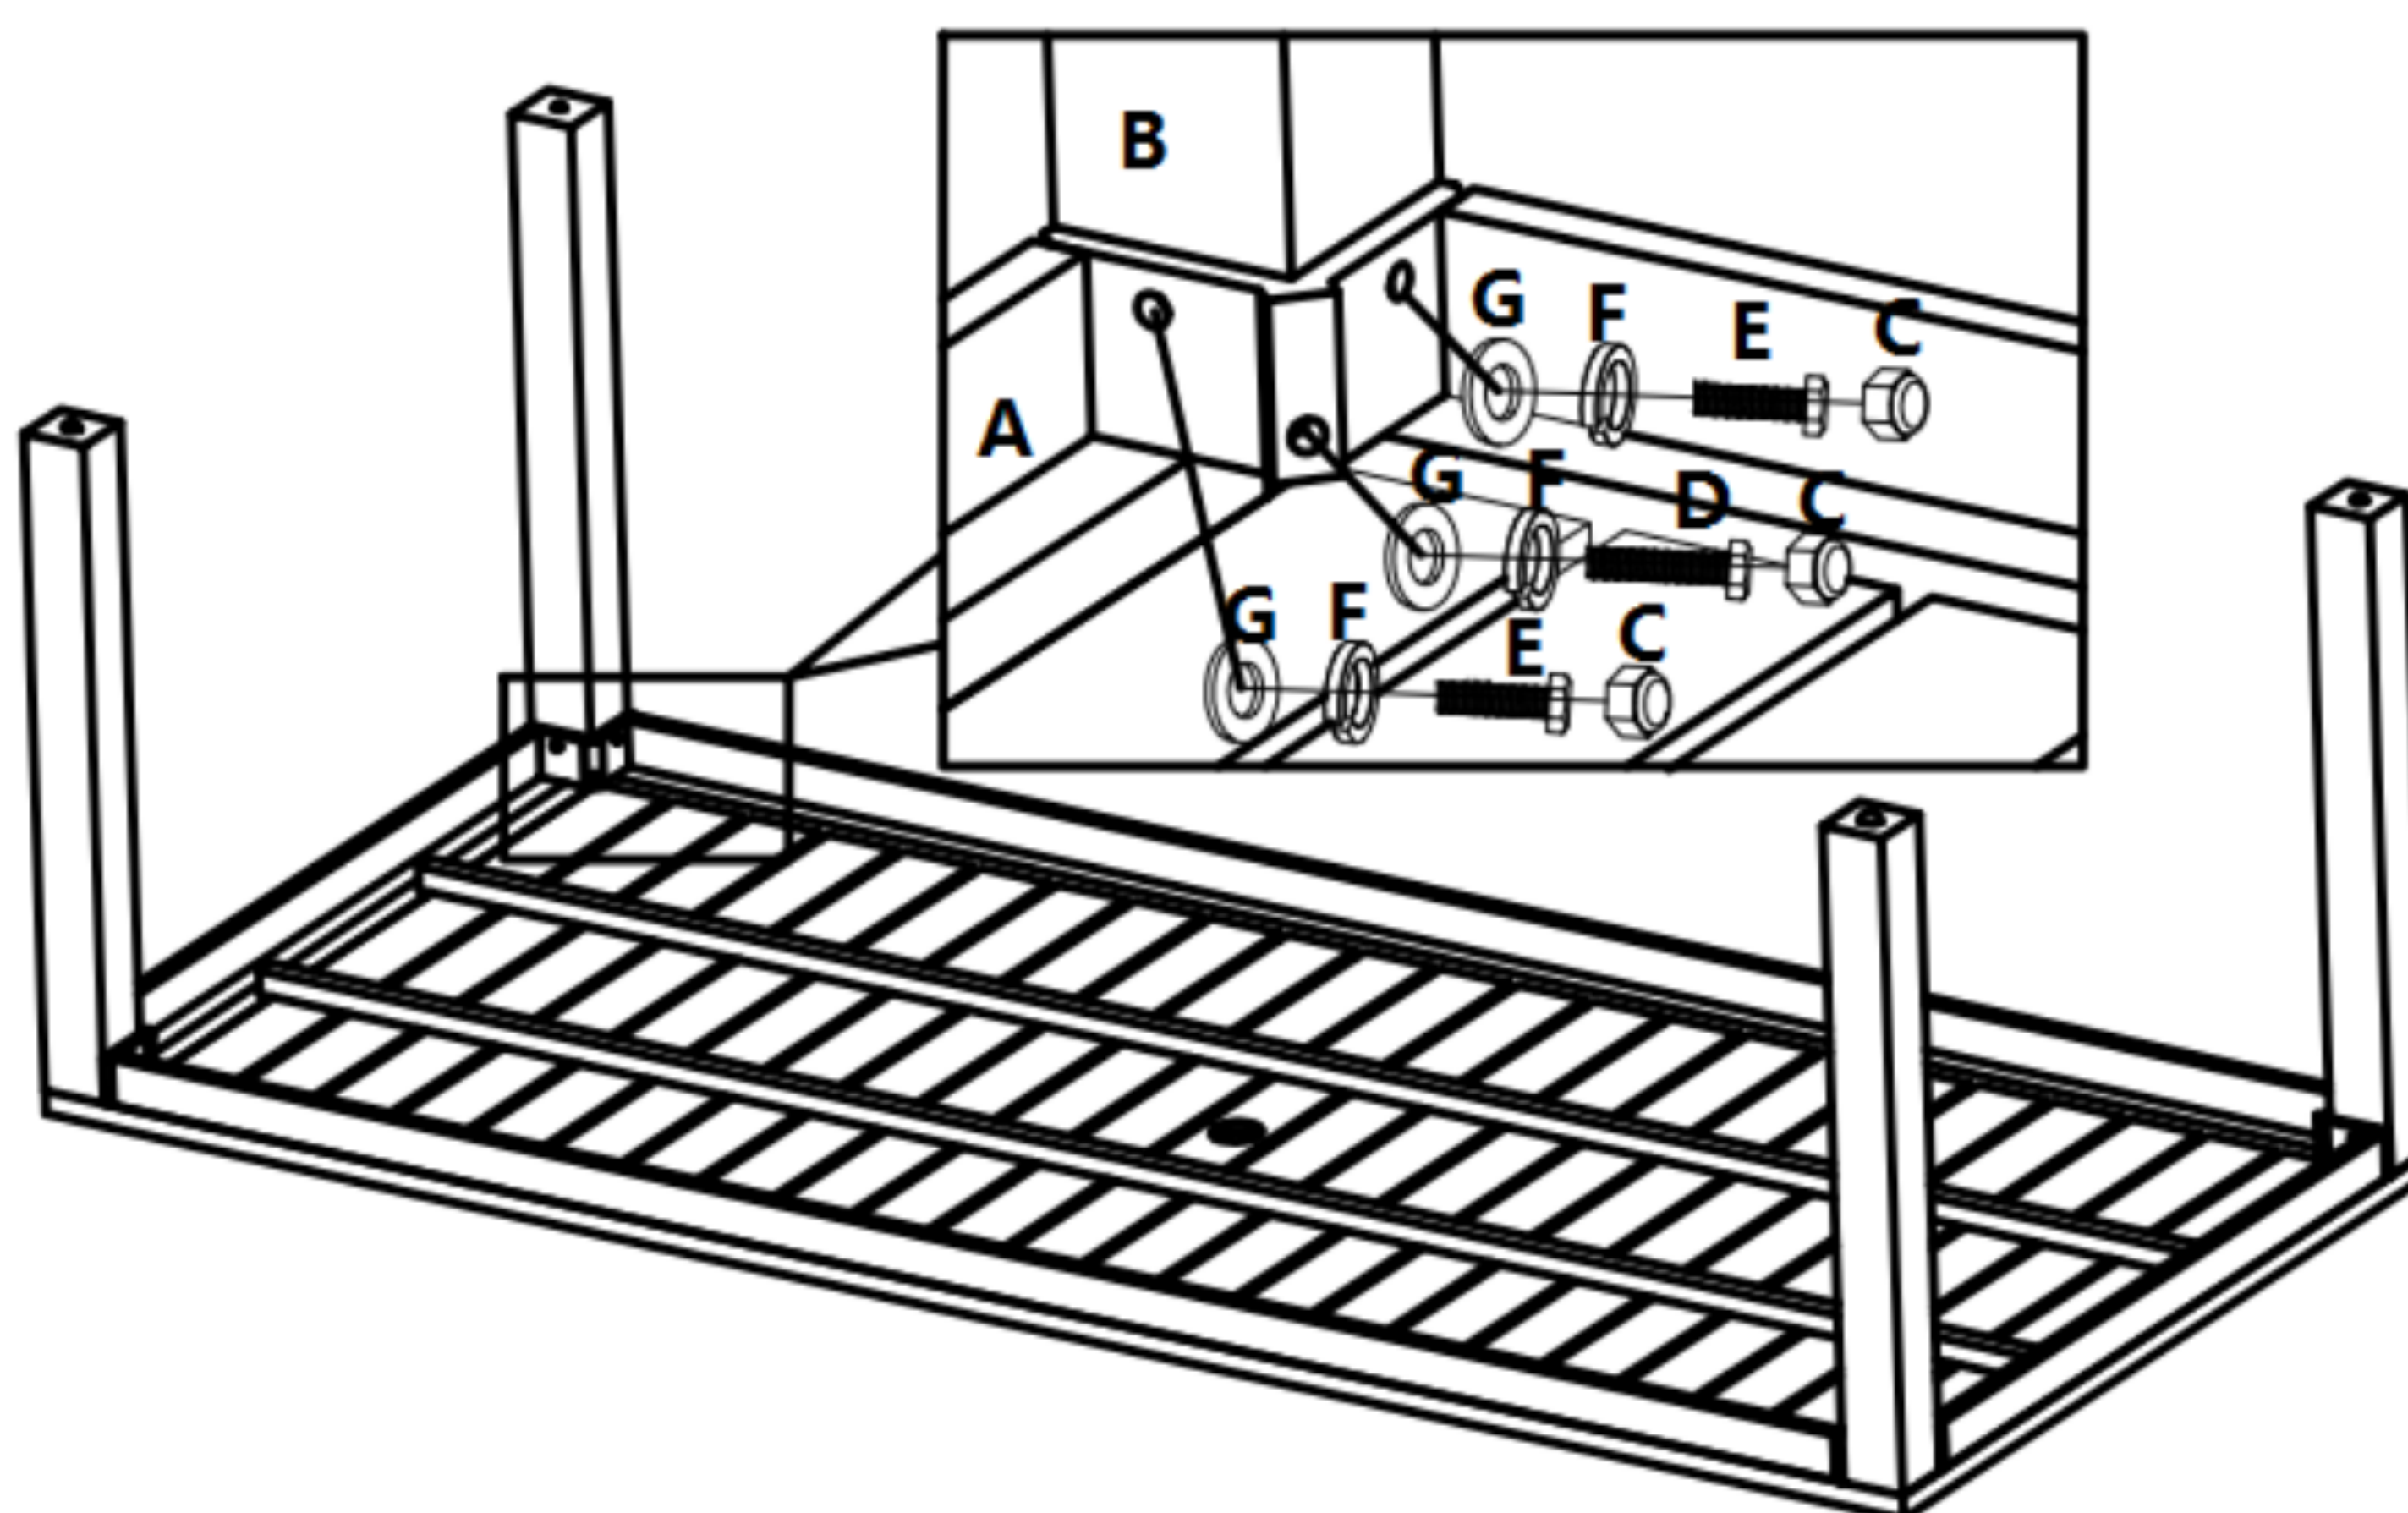

2 With the help of another person, carefully turn the dining table to the upright position. Cover all bolts (D&E) with bolt covers (C).

The dining table is ready for your enjoyment.

(Figure 2)

Figure 2

