

How to change the Valves/Igniter on the Pro90X – Pro60X



Warning: Before you begin make sure the item is removed from the propane tank.



To remove all the knobs from the front of the stove, just pull straight out






Remove all the screws
that secure the front face
plate.

Pull off and set aside.



Undo the bolts screw on the bottom of the valve connecting it to the manifold. The manifold will then fall off

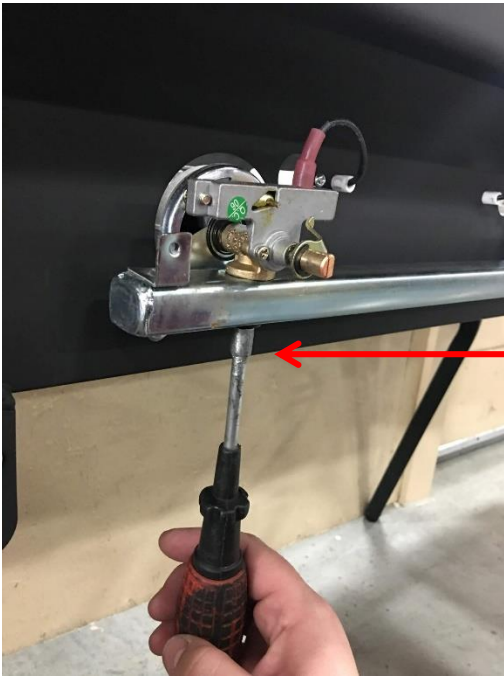

Remove the igniter wires to each of the valves.



Note: After putting the stove back together, you will want to make sure the ignition knob is aligned correctly with the prong on the ignitor.

You may even want to use a mallet and gently tap it on, to insure it will not strip out again.

Unscrew the valve from the burner. Please note that the spring and the vent will come off too.



If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.