


PRODUCT MANUAL MODEL TM-03

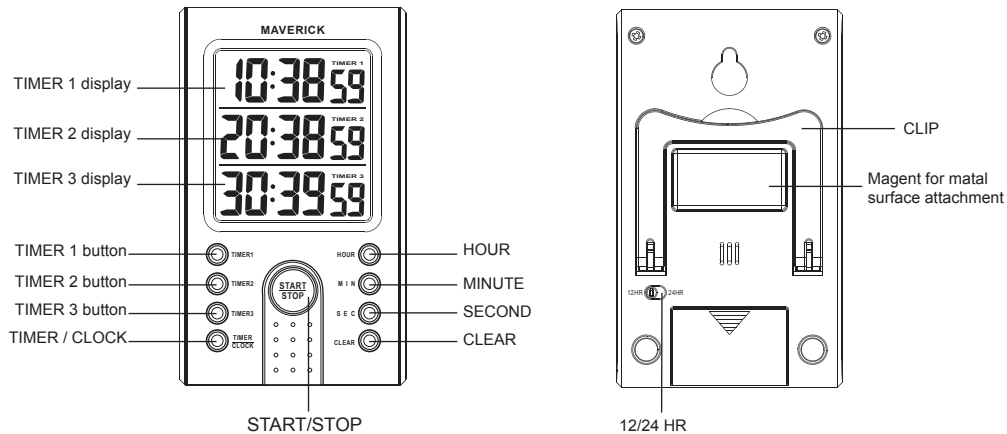

1. TO INSERT BATTERY

Slide and open the battery door of the unit, inserts batteries by following the + and - polarity signs inside the battery compartment.

2. TO SET CLOCK

- Press and hold "CLOCK/TIMER" button for 2 seconds and press "HR", "MIN", "SEC" buttons to set desired time.
- Press "CLOCK/TIMER" button again to leave clock set mode.

3. 12HR/24HR INTERNATIONAL TIME DISPLAY

- Slide the 12HR/24HR button to choose the desired display format.
- "AM" or "PM" will be displayed in the 12HR format.

4. TO OPERATE 1/10 SEC. STOPWATCH (COUNT-UP)

- Press "START" to begin counting upward in "CLOCK" mode. Press "STOP" to pause timing. To restart, press "START".
- Press "CLEAR" to reset digits to 00HR:00 MIN:00SEC.

5. TO SET TIMER 1 (COUNT DOWN TIMERS)

- Press "CLOCK/TIMER" button to change into "TIMER" mode.
- Press and hold "TIMER 1" button for 2 seconds, TIMER 1 flashes.
- Press "HR" "MIN" "SEC" button to set desired time.
- Press "TIMER 1" again to leave TIMER set mode.
- Press "START" button to begin count down.
- Press "STOP" button to pause timing. To restart, press "START" button again.
- Alarm Duration: 1 minute

6. TO SET TIMER 2 or TIMER 3 (COUNT DOWN TIMERS)

- Press and hold TIMER 2 or TIMER 3 for 2 seconds and operate the same as point 5 above.

7. TIMER UP FEATURE

- The timer will count up from 0:00:00 to tell you how long since the alarm sounded. To stop count-up, press "STOP" button.
- Press "CLEAR" button to reset the timer.

8. BUILT-IN MEMORY FUNCTION

- After alarm beep, press "START/STOP" button or "START/STOP/MEMORY" button to stop alarm.
- Press "CLEAR" button to reset digit to 00:00:00.
- Press "START/STOP" button or "START/STOP/MEMORY" button again, the last countdown timer will be recalled and shown on the display.

9. CARE OF YOUR PRODUCT

- Avoid exposing your timer to extreme temperature; water or severe shock.
- Avoid contact with any corrosive materials, such as perfume, alcohol, or cleaning agent.

LIMITED NINETY DAYS WARRANTY

Maverick Industries, Inc. warrants this product to be free of defects in parts, materials and workmanship for a period of ninety days, from date of purchase. Should any repairs or servicing under this warranty be required, contact Maverick Customer Service by mail or phone for instructions on how to pack and ship this product to Maverick's National Service Center located as follows:

Maverick Customer Service
94 Mayfield Ave.
Edison NJ 08837

www.maverickhousewares.com

Telephone: (732) 417-9666
Hours: Weekdays 8:30 AM- 4:30 PM

Do not send any parts or product to Maverick without calling and obtaining a Return Authorization Number and instructions.

This warranty is VOID if instructions for use are not followed; for accidental damage; for commercial use; for damage incurred while in transit; or if this product has been tampered with.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Printed in China