


# How To Replace Mantles


## STEP 1

Remove one glass panel by lifting glass from bottom with forefinger, pulling forward slightly, and lowering.

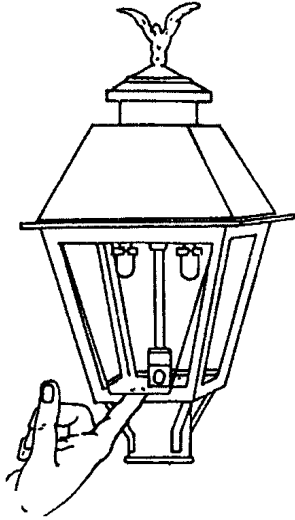


## STEP 2

WITH GAS TURNED OFF, hold a lighted match up to, but not touching, the mantles to burn off the protective coating. (This will flash slightly). Do not touch the match to the mantles.

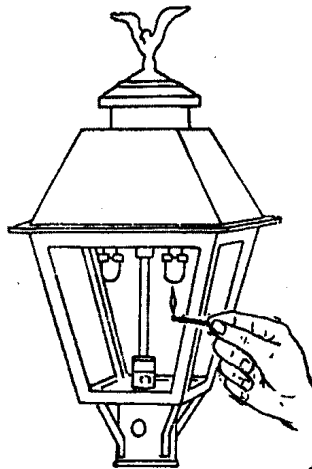


## STEP 3

By using a screwdriver through access hole in lower collar of lamp to reach valve, slowly turn the gas on and hold another lighted match up to, (but not touching) the mantles to light them. Then, when lit, turn the gas on full.

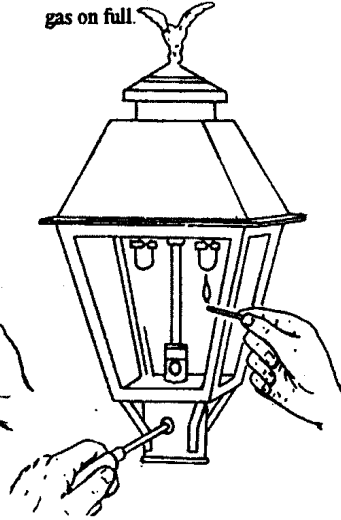


## STEP 4

Your gas lamp is factory set to burn at its most efficient point. However, this adjustment may be changed somewhat in shipment. To adjust this, raise or lower air adjustment until the mantle is burning at its brightest point.

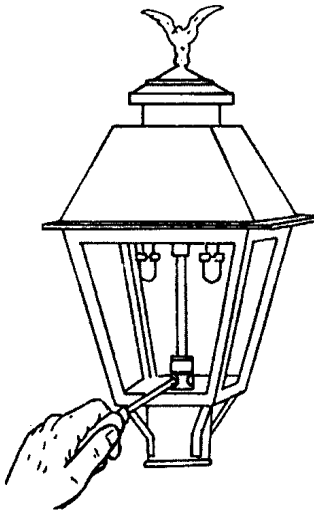

## STEP 5

Replace glass panel by fitting top edge into frame top, pressing glass against tabs inside of frame, and allowing glass to slide into frame bottom.

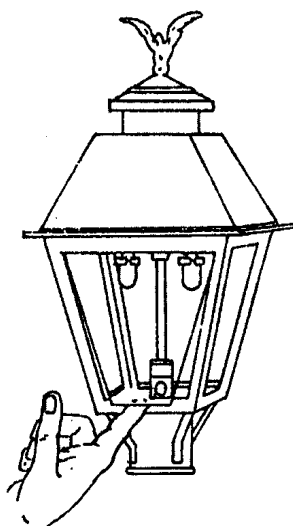

## STEP 6

After lamp has been burning for several minutes and if flame is visible around or above mantle, slowly turn the adjusting screw at the stem of the valve in a clockwise direction until excess flame disappears.

