

Comfort, Quality & Style Since 1998

FireSense®

## Wall Mount Electric Fireplace

Item#: 60757



UNIT MUST BE ON A DEDICATED  
ELECTRICAL CIRCUIT.

PLEASE READ THESE INSTRUCTIONS  
CAREFULLY BEFORE USING YOUR  
NEW Fireplace.



### WARNING FOR YOUR SAFETY

1. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
2. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



### CAUTION Risk of Electric Shock – Do not open.

No user – serviceable parts inside.



### WARNING

This product can expose you to chemicals including Diisononyl Phthalate (DINP), which is known to the State of California to cause cancer, and Di-(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



### ATTACH YOUR RECEIPT HERE

Keep a copy of your proof of purchase or order confirmation which will be needed if you need to contact us about warranty coverage.

Purchase Date: \_\_\_\_\_



### Questions, problems, missing parts?

Before returning to your retailer, our exceptional customer service is available.

Call us toll-free at (866) 985-7877 9 a.m. – 6 p.m., EST, Monday – Friday, email us at [cservice@welltraveled.net](mailto:cservice@welltraveled.net), or go online and live chat at [www.wtliving.com](http://www.wtliving.com).

Manual updated July 2018.



## TABLE OF CONTENTS

Table of Contents, Before You Begin	Page 2
Safety Information, Listing Approvals	Page 3
Safety Instructions	Page 4
Package Contents	Page 5
Preparation/Unpacking/Quick Guide	Page 6
Changing Rock/Log Set and Light Bulbs	Page 7
Product Dimensions	Page 8
Installation	Pages 9-10
Operation/Remote Features/Care and Maintenance	Page 11
Troubleshooting	Page 12
Warranty	Page 13



## BEFORE YOU BEGIN

Please read and understand this entire manual before attempting to assemble, operate or install this appliance. If you have any questions regarding the product, please call us toll-free at **(866) 985-7877 9 a.m. – 6 p.m., EST, Monday – Friday**, email us at **[cservice@welltraveled.net](mailto:cservice@welltraveled.net)**, or go online and live chat at **[www.wtliving.com](http://www.wtliving.com)**. *English & Spanish speaking.*

This manual contains important information about the assembly, operation and maintenance of this appliance. General safety information is presented in the first few pages and is also located throughout this manual. Keep this manual for future reference and to educate new users of this appliance.



## SAFETY

- Children of less than 8 years old should be kept away unless continually supervised.
- Children aged less than 8 years old shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged under 8 years old shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION: Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- Children shall not play with appliance. Cleaning and user maintenance shall not be done by children.
- When the power cord is damaged, it must be replaced by authorized agent or other trained professional to avoid danger.
- DO NOT position immediately above or below an electrical socket.
- WARNING: This fireplace is not equipped with a device to control the room temperature. Do not use this fireplace in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



### WARNING

#### To Reduce the Risk of Fire

1. Do not place any objects such as furniture, papers, clothes and curtains within 3 ft. / .91 m to the front of the fireplace and keep them away from the sides and rear when the fireplace is plugged in.
2. Do not place the fireplace near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the fireplace.
3. Always unplug the fireplace if it is not being used.
4. Avoid using an extension cord because the extension cord may overheat and cause a risk of fire. However, if you must use an extension cord, the cord should be N014 AWG minimum size and rated not less than 1875 watts.



### CAUTION Risk of Fire

Keep combustible materials such as furniture, papers, clothes and curtains at least .91 m / 3 ft from the front of the fireplace, and away from the sides and rear. Attach base before using.



### CAUTION Risk of Electric Shock – Do not open.

No user-serviceable parts inside.



### WARNING

This electric fireplace is tested and listed for use only with the optional accessories listed in these instructions. Use of accessories not specifically tested for this electric fireplace could void the heater warranty and/or result in a safety hazard.

### NOTICE

This electric fireplace meets the construction and safety standards of H.U.D. for application in manufactured homes when installed according to these instructions.



## LISITING APPROVALS

This heater has been tested in accordance with the CSA Standards.

Model Number	Length	Height	Depth
60757	30.55"	19.13"	5.67"
Description	Wall Mount Electric Fireplace		
Voltage	120V AC, 60Hz		
Watts:	Max 1400W		
Amps:	15Amp grounded circuit		



## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, to reduce the risk of fire, electric shock and injury to persons, always follow basic precautions, including the following:

1. Read all instructions before use.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handle when moving this heater.
3. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains 3 ft / .91 m or further away from the front, sides, and back of heater.
4. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is in operation it must not be left unattended.
5. Always unplug the heater when not in use.
6. Do not operate any heater with damaged cord or plug or after the heater has malfunctioned or has been dropped or damaged in any manner. Return heater to an authorized service facility for repair.
7. Do not use outdoors.
8. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations where water may be present. Never locate heater where it may fall into a bath tub or other water container.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
10. To disconnect heater, turn control to off, then remove plug from outlet.
11. Connect to properly grounded outlet only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
13. To prevent a possible fire, do not block air intake or exhaust in any manner.
14. Do not use on soft surfaces, like a bed, where openings may become blocked.
15. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
16. Use this heater only as described in manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. Avoid the use of an extension cord because the extension cord may overheat and there is a risk of fire.
18. Do not strike the heater glass.
19. Always use properly grounded outlets; it may break fused and polarized outlets.
20. Always disconnect power before performing any cleaning or maintenance, or relocating the heater.
21. When transporting or storing the heater, keep in a dry place, free from excessive vibration and store so as to avoid damage.
22. The flame effect is powered by a motor and it is normal for the motor to make some noise as it slowly rotates and helps to create the beautiful 3D flame effect. Some rooms have more or less furnishings than others resulting in varying noise amplification.
23. While every effort is made to ensure packing materials are kept outside of the plastic bag which covers your heater in the box, there is some chance that packing material may lodge itself in the heater part of the unit. If you notice this on inspection, please remove it.
24. When turning your heater on for the first time it is normal for the heater to emit a mild 'new heater' smell which quickly passes.
25. You may notice some light coming from under or from the sides of the unit. This is normal and the holes allow the unit to 'breathe'. Do not attempt to block these holes.
26. This heater is to be used on a 110 / 120 V, 11.2 A MP, grounded circuit. Do not use in an outlet controlled by a switch or dimmer switch. The cord supplied with the heater has a 2 blade plug with a round pin on the plug for grounding purposes. If a 3 slot receptacle/outlet is not available, you must use an adapter which must be properly grounded to the outlet box. Avoid plugging other appliances into the same circuit as heater.

### CAUTION


- RISK OF ELECTRIC SHOCK
- DO NOT OPEN THE UNIT
- NO USER-SERVICEABLE PARTS INSIDE
- HIGH TEMPERATURE
- KEEP ELECTRICAL CORDS, DRAPERY AND OTHER FURNISHINGS AT LEAST 3 FEET / .91 METER FROM FRONT OF THE HEATER AND AWAY FROM THE SIDES OF HEATER

### WARNING


- RISK OF FIRE - KEEP COMBUSTIBLE MATERIAL AWAY FROM TOP OF HEATER.
- SERVICING SHOULD BE DONE ONLY WHILE THE HEATER IS UNPLUGGED FROM
- POWER SUPPLY.

The flame effect on the wall hanging fireplace is created by LED surface mounted components that are designed to last the life of the product. Do not remove back cover of heater, no user serviceable parts are contained within.


## PACKAGE CONTENTS

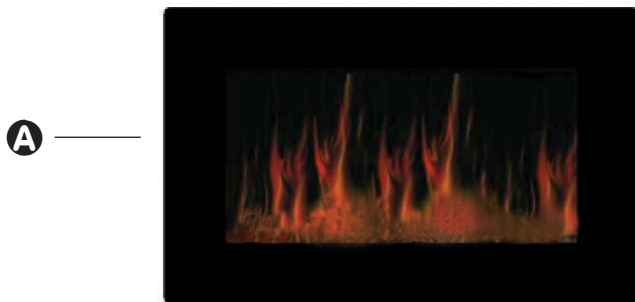

	DESCRIPTION	QUANTITY
<b>A</b>	Fireplace	1
<b>B</b>	Wall Mount Bracket	1
<b>C</b>	Remote Control	1

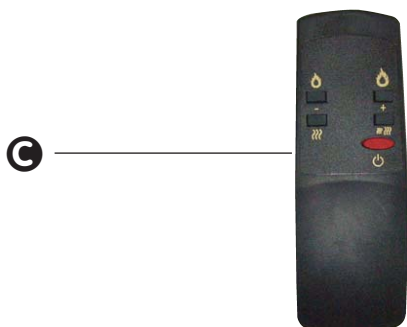

## HARDWARE CONTENTS



**E**

Mounting Screw

Qty: 4



## PREPARATION

Carefully unpack the fireplace. Make sure that all items are present, that there are no components left in the box, and that the fireplace is free from packing material. If any parts are missing, please contact Customer Service at (866)-985-7877, Monday-Friday, 9 a.m. – 6 p.m. EST or email at [cservice@welltraveled.net](mailto:cservice@welltraveled.net). *English & Spanish speaking.*

**Assembly Tool Required:** Phillip head screw driver, power drill, drill bit, and a tape measure. Unit must to be hung on wall stud for security and stability.



## INITIAL TESTING

Carefully remove the unit from the box and clear any clinging packing material. Prior to installing the unit, test to make sure the unit operates properly. To do this, plug the unit's power supply cord into a conveniently located 120 Volt grounded outlet.



## QUICK REFERENCE


- 1 Prior to plugging your heater into a power outlet, verify that the circuit breaker for the outlet is on.
- 2 The heater may emit a slight, harmless odor when first used. This odor is normal and it is caused by the initial heating of internal heater parts and will not persist.
- 3 If the heater does not emit heat, consult this manual for further information.



## POWER SUPPLY

This insert is for use on 120 Volts. The cord has a plug as shown in **A** in the "Grounding Methods" diagram at right. An adapter as shown in **C** is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding plug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. Do not use the adapter if a three-slot grounded receptacle is available.

To disconnect heater, turn controls off, then remove plug from outlet.

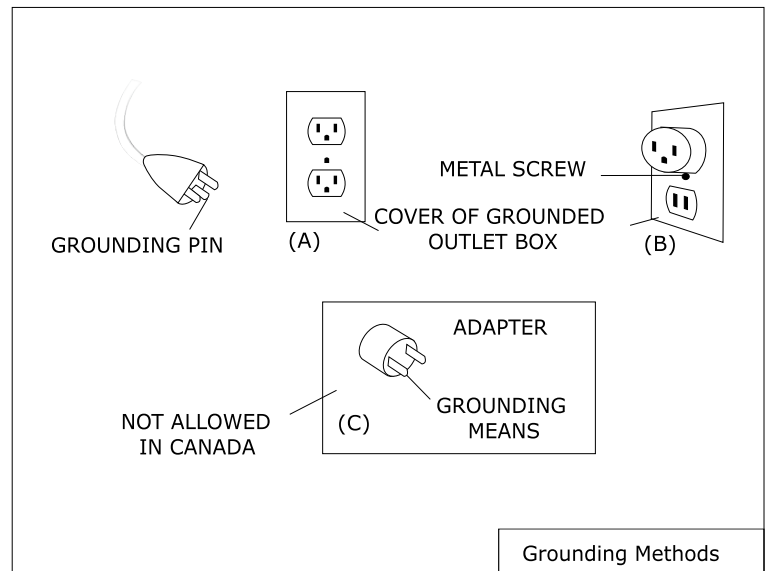




## TO CHANGE ROCK/LOG SET

**WARNING:** MAKE SURE FIREPLACE IS TURNED OFF AND AND UNPLUGGED FROM ELECTRICAL OUTLET BEFORE ATTEMPTING TO CHANGE THE LOG/ROCK SET.

- 1 Place fireplace on a flat, level surface. Remove 3 screws located on each side of glass face of fireplace. Remove glass face and set aside on a non-abrasive surface.

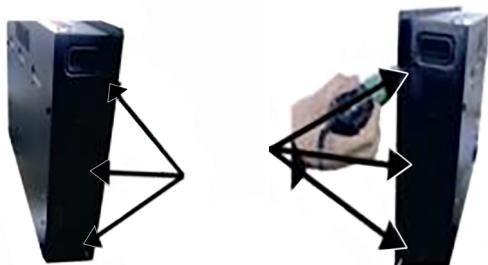

- 2 Remove retainer screws that attach the log or rock set to the front of fireplace.



- 3 Replace with the desired set (log/rock) and re-insert retainer screws, then tighten.




- 4 Replace glass face on front of fireplace, then re-insert the 6 screws removed in Step 1. Tighten gently but firmly.



## TO REPLACE LIGHT BULBS

**WARNING:** MAKE SURE FIREPLACE IS TURNED OFF AND AND UNPLUGGED FROM ELECTRICAL OUTLET BEFORE ATTEMPTING TO REPLACE LIGHT BULBS. DO NOT EXCEED 40 WATTS PER BULB. USE OF HIGHER-RATED BULBS MAY RESULT IN A FIRE, CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE.






This fireplace uses 2 clear 110 Volt, 40 Watt, E-12 socket base light bulbs (small base, chandelier candle-type bulbs). The access plate is located on the bottom of the unit. For convenience, if one bulb burns out, it may be easier to replace both bulbs at the same time.

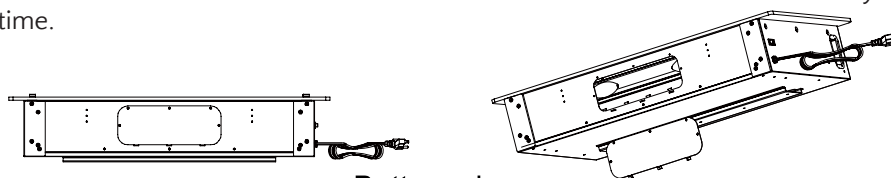

Bottom view

1. Turn off the power to the unit, and unplug it from the electrical outlet.
2. Let the fireplace cool if it has been operating.
3. Look for the access plate with the gold printing on the bottom of the unit.
4. Remove the 5 screws holding the access plate in position. Lift the access plate so the 3 positioning tabs come free of their slots. You should now see and be able to access the two 40-watt chandelier bulbs.
5. Remove and replace one or both bulbs.
6. Replace the access plate by re-inserting the positioning tabs in their slots and re-inserting the 5 screws to hold the plate. Tighten firmly but do not over-tighten.

# PRODUCT DIMENSIONS

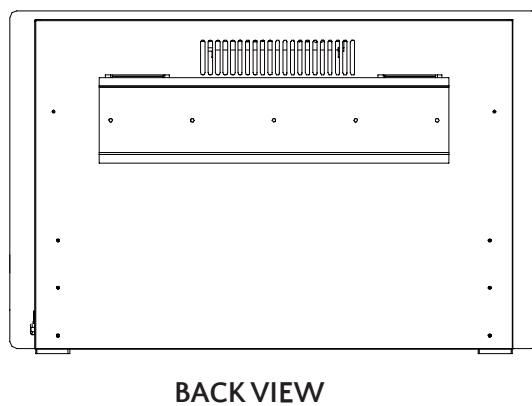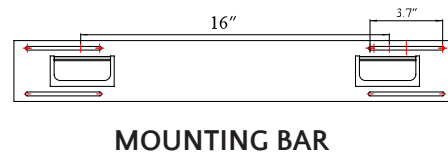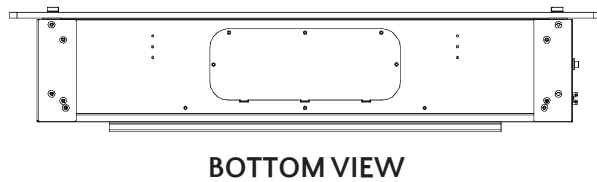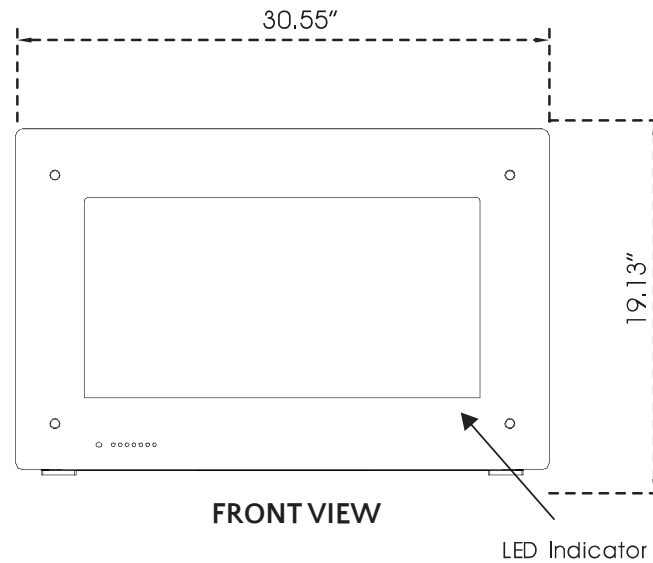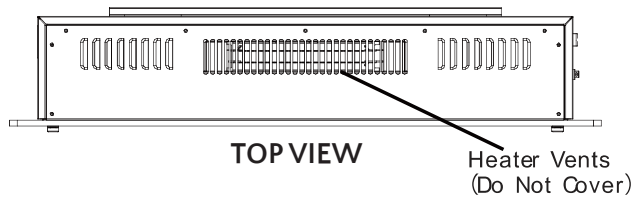

Mounting holes



## INSTALLATION WARNINGS



**WARNING:** Due to high temperatures, this electric fireplace should be located out of the flow of traffic in your living space. Keep combustible materials such as furniture, pillows, bedding, papers, clothing and curtains at least 36" from all sides and above the heater.

**WARNING:** Never locate this electric fireplace where it may fall into a bathtub or other water container.

**CAUTION:** Do not expose the electric fireplace to the elements (such as rain, etc.)

**WARNING:** To prevent contact with sagging or loose insulation, the electric fireplace must not be installed against a vapor barrier or exposed insulation. Overheating could occur and a fire could result.


**WARNING:** RISK OF FIRE! The power cord must not be pinched or positioned against a sharp edge. Secure cord to avoid tripping or snagging to reduce risk of fire, electric shock or personal injury. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.

**WARNING:** RISK OF FIRE! To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surfaces where openings may become blocked.

**WARNING:** RISK OF FIRE! Do not place insulation against the fireplace.

**WARNING:** This electric fireplace is tested and listed for use only with the approved optional accessories. Use of optional accessories not specifically tested for this electric fireplace will void the heater warranty and can result in a safety hazard.

**WARNING:** If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death. Do not store or use gasoline or other flammable vapors in the vicinity of this or any heater.

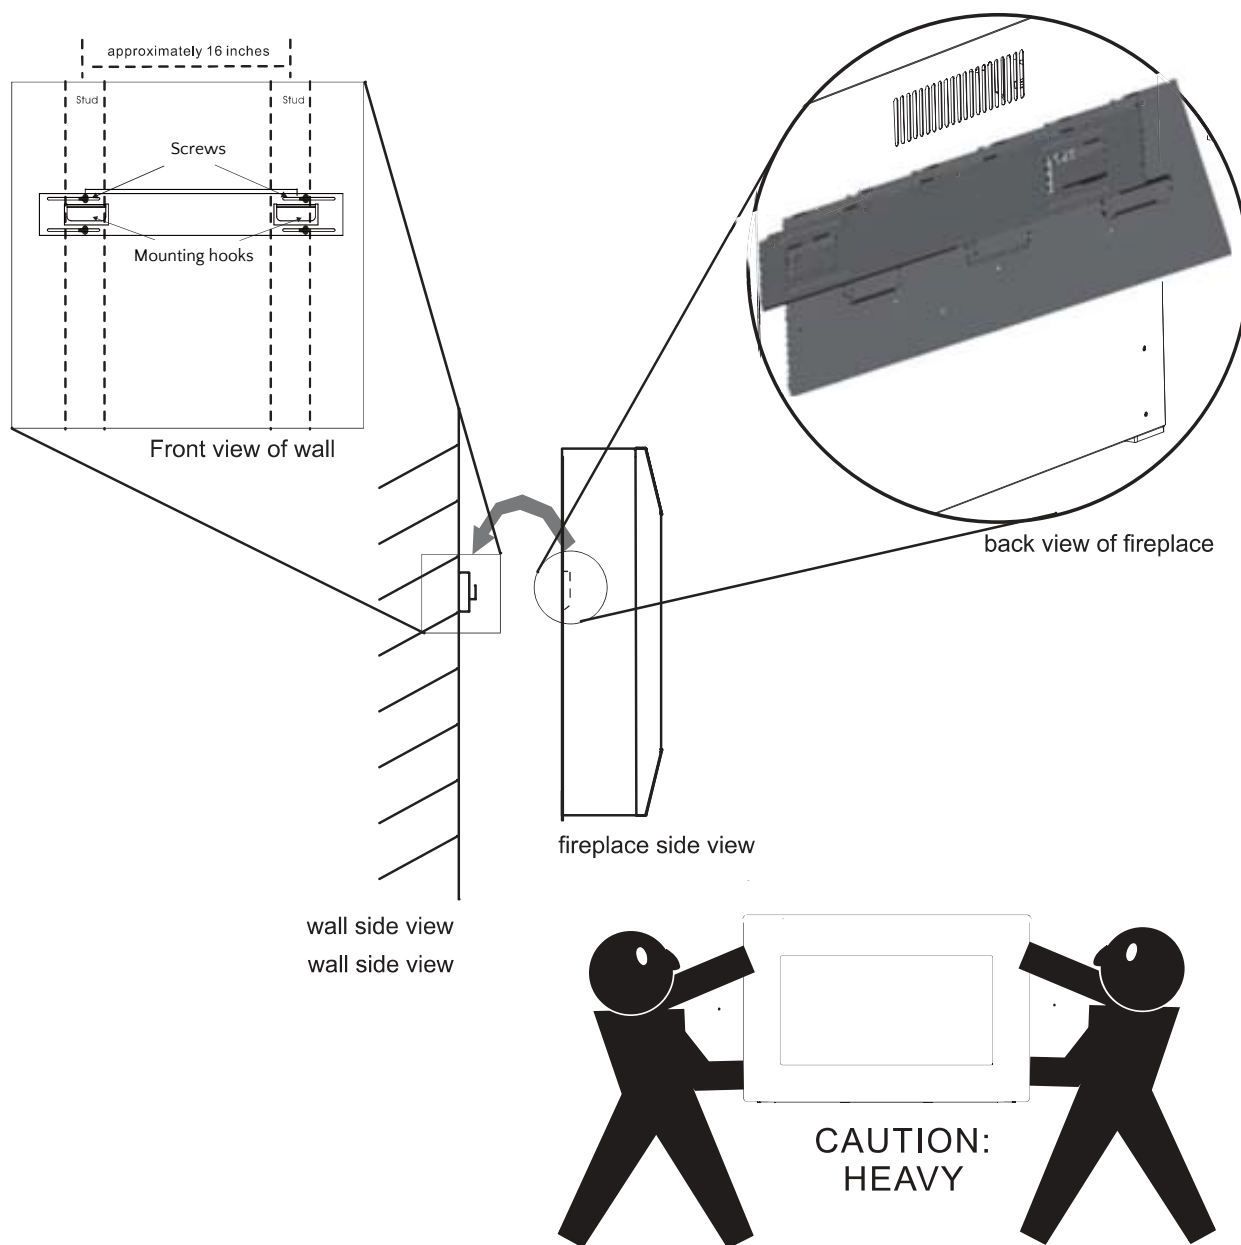

## ⚠ ATTENTION:

This fireplace must be mounted on a wall at a height above the floor between 0.5M (1.64 FT) and 2.5 M (8.2 FT).

## ⚠ WARNING:

Heater vents on this electric fireplace cannot be covered or obstructed in any way, as it may create a fire hazard.

## ⚠ ATTENTION:

Due to the many different materials used on different walls, it is highly recommended that you consult your local hardware store to determine what type of mounting screws are needed before you install this fireplace onto the wall.




## INITIAL STARTUP

Once the unit has been properly connected to a grounded electrical outlet, it is ready to operate. NOTE: Ensure the house circuit breakers for the power supply are turned on.


## MAIN POWER SWITCH

The Main Power Switch is located on the right side of the unit. The diagram at right illustrates the location of the switch. The "I" indicates ON and the "O" indicates OFF. Push the switch to "I" to turn on the unit and the flame effect. the red LED indicator will turn on.

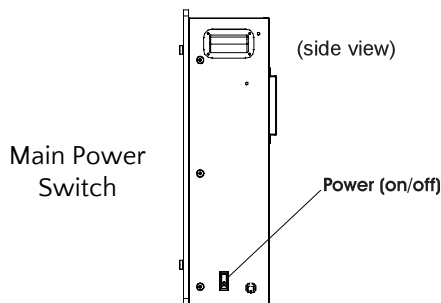

## OPERATION LOCATION

- The manual controls are located on the left side of the fireplace. You have the following controls:

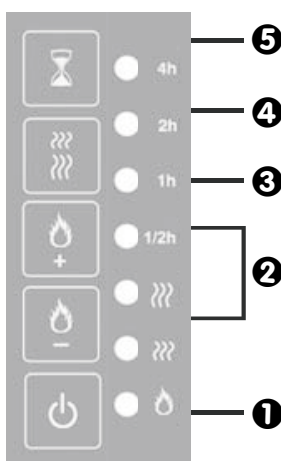

## CONTROLS

- Power ON/OFF: Power to the unit
- Flame brightness controls: Allows you to adjust the flame to suit your preference. Press to increase flame brightness and to decrease flame brightness. You must press the button several times to see the full flame effect.
- Low heat: 700 watts
- High heat: 1400 watts  
NOTE: Press the heater touchpad control twice to achieve high heat.
- Heater Timer: Allows you to leave your heater on while you sleep with an automatic timer for shut off. You can set your heater to be on for 30 minute increments starting at 1/2 hour up to a maximum of 7 1/2 hours. Press once for each 1/2 hour increment. After you reach 7 1/2 hours, the next press will shut off the feature.

## OPERATING BY REMOTE CONTROL

- Plug in your electric fireplace.
- Turn the unit's Main Power ON/OFF switch to the ON position! The remote control will NOT work if the Main Power Switch is at the OFF position.
- When operating the remote control, it must be pointed towards the front of the unit.
- The ON/OFF button at the lower right of the remote is the main ON/OFF power button (Figure 5). Pressing this button activates the power to the unit.
- To activate the heater, press the button. Press and release this button to cycle through LO, HI, and OFF.
- To adjust the flame height and ember bed brightness, press the and buttons. To increase the flame height and ember bed brightness, press the button; to decrease the flame height and ember bed brightness, press the button. There are five levels of flame effects.
- To turn off the fireplace, press the ON/OFF button once. NOTE: This remote control must be within 8 meters or 26 feet of the fireplace to be effective.



**NOTE:** Make sure you have installed fully-charged batteries in your remote control.

## CARE AND MAINTENANCE

- Before using, wipe with a clean, soft, dry cloth.
- Avoid rubbing or scratching the surface with rough or abrasive objects.
- Turn heater OFF and unplug from outlet. Use a vacuum or duster to keep heat and vent area clean from dust and dirt. The exterior should be cleaned with a damp cloth or duster.
- Do not use abrasive cleaners, liquid sprays, or any other cleaner that may scratch the surface.



## TEMPERATURE LIMITING CONTROL

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, (115 degrees Celsius) the heater will automatically turn off. To reset: Unplug unit from wall, wait for 5 minutes, plug back in and continue to use.



## TROUBLESHOOTING

Symptom	Possible Causes	Corrective Action
Fireplace doesn't work	Fireplace inner components are overheating or the home circuit breaker has tripped.	Reset switch: turn master switch off, wait 5 minutes, then turn back on.
Flame is not moving	Wiring may be loose or the flame motor may be defective.	Call customer service for assistance.
Dim or poorly visible flame, or glass pebbles aren't glowing	LED lights are burnt out or the wiring is loose.	Call customer service for assistance.
Flame sputters	Flame motor is defective.	Call customer service for assistance.
Remote control does not work	<ul style="list-style-type: none"> <li>Low battery</li> <li>Master switch is in "OFF" position</li> </ul>	Change the battery for remote control. Check to make sure the master switch is turned on.
Circuit breaker trips or fuse blows when the unit is on	Improper circuit current rating.	Call customer service for instructions.
Heater does not provide heat when turned on	Thermal switch has been tripped. Circuit breaker has been tripped.	<ul style="list-style-type: none"> <li>Turn the unit off and unplug the unit for 5 minutes. Plug back in and turn on the unit.</li> <li>Turn off circuit breaker that supplies electricity to the unit, wait 5 minutes, then flip circuit breaker back on.</li> </ul>
Appliance turns off and will not turn on	<ul style="list-style-type: none"> <li>Appliance has overheated and its safety device has caused the thermal switch to disconnect.</li> <li>House circuit breaker has tripped.</li> </ul>	<ul style="list-style-type: none"> <li>Unplug the appliance, allow to cool for 15 minutes, then plug back in.</li> <li>Reset the house circuit breaker.</li> </ul>

*Comfort, Quality & Style Since 1998*



## 1 YEAR LIMITED WARRANTY

### Customers in the Contiguous US

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application if model is not designated as a commercial model. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

- THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE
- PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT
- FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY
- IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.
- SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.



### Important Notice

**Do NOT return to place of purchase**—for customer service and warranty issues contact our Customer Service Center at: **(866) 985-7877, 9 a.m. – 6 p.m., EST, Monday – Friday**, email us at **[cservice@welltraveled.net](mailto:cservice@welltraveled.net)**, or go online and live chat at **[www.wtliving.com](http://www.wtliving.com)**.



#### Distributed By:

Well Traveled Living  
716 S 8th Street, Amelia Island, FL 32034  
[wtliving.com](http://wtliving.com) | [cservice@welltraveled.net](mailto:cservice@welltraveled.net)  
(866) 985-7877