
# **Assembly Instructions**

#### **BEFORE YOU BEGIN:**

- 1. Identify all parts in the box against the "Parts" List.
- 2. Remove all protective material carefully and avoid cutting the surface of the furniture while removing wrapped material.

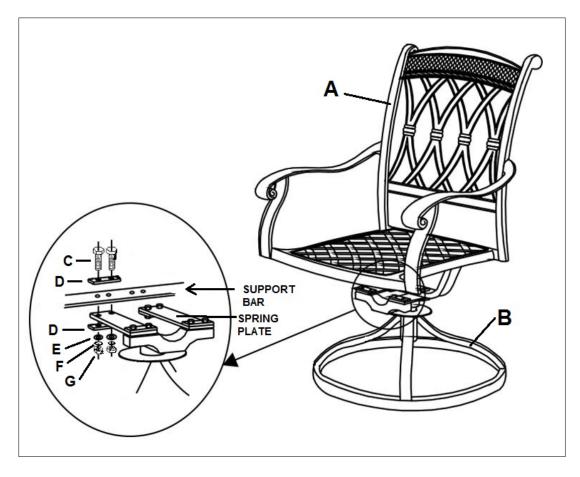

Part		Description	Qty	Part		Description	Qty
A		Seat	1	D	0	Plate Keeper	6
				Е	$\bigcirc$	Flat Washer	8
В		Base	1	F	0	Lock Washer	8
С	Chinim	Bolt	8	G	CO	Nut	8

# **Assembly Instructions**

#### (FOR 201660-3)

### **ATTENTION:**

1. DO NOT use power tools or over-tighten hardware during assembly.\*

\*Aluminum is soft metal, so over-tightening may strip threads or break the parts.

2. Please read these instructions carefully before assembling.

3. During assembly, place furniture against soft surfaces to avoid scratching the paint/ metal.

## **ASSEMBLY STEPS:**

\*\*NOTE: Some hardware is already loosely screwed on to the spring plate of the **BASE (B).** Hardware needs to be removed and reattached in Step 3.

- 1. Place the SEAT (A) upside-down on a non-abrasive, soft surface.
- 2. Note the "FRONT" arrow labels on both the **spring plate** of the **BASE** (**B**) and on the **support bar** under the **SEAT**. When assembling the hardware to connect the base to the seat, make sure BOTH arrows are pointed in the SAME direction towards the front of the chair.
- 3. Align the holes of the **spring plate, support bar, and PLATE KEEPERS** (**D**) in the order as shown in the diagram. Glide the **BOLTS** (**C**) through the aligned holes, and then fasten the parts together using a **FLAT WASHER** (**E**), **LOCK WASHER** (**F**) and **NUT** (**G**).
- 4. Tighten all bolts and nuts completely.
- 5. Flip the chair right side up. Test the swivel rocker gently. If the rocker does not rock properly, double check the assembly procedure, especially Step 2 and 3.
- 6. If needed, you may use the adjustable feet to level out the chair.

### **CARE INSTRUCTIONS:**

**Please DO NOT use acid or alkaline washing liquids to clean this product.** Harsh cleaners can cause the powder-coated finish to stain and fade. Use a soft towel with mild liquid soap and water to clean the product, and dry with a soft cloth.