


Assembly Instructions

BEFORE YOU BEGIN:

1. Identify all parts in the box against the “Parts” List.
2. Remove all protective material carefully and avoid cutting the surface of the furniture while removing wrapped material.

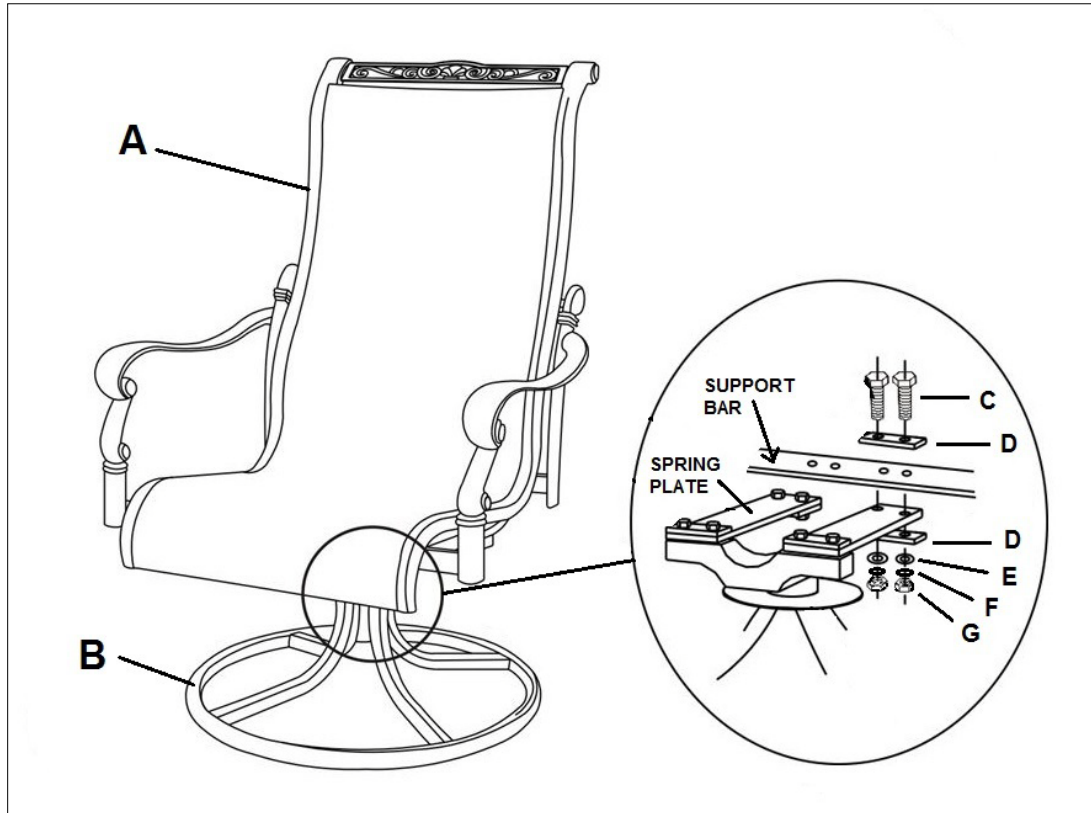

| Part | | Description | Qty | Part | | Description | Qty |
|------|--|-------------|-----|------|--|--------------|-----|
| A | | Seat | 1 | D | | Plate Keeper | 6 |
| | | | | E | | Flat Washer | 8 |
| B | | Base | 1 | F | | Lock Washer | 8 |
| C | | Bolt | 8 | G | | Nut | 8 |

Assembly Instructions

(FOR 301110-3)

ATTENTION:

1. **DO NOT** use power tools or over-tighten hardware during assembly.*

*Aluminum is soft metal, so over-tightening may strip threads or break the parts.

2. Please read these instructions carefully before assembling.

3. During assembly, place furniture against soft surfaces to avoid scratching the paint/ metal.

ASSEMBLY STEPS:

****NOTE:** Some hardware is already loosely screwed on to the spring plate of the **BASE (B)**. Hardware needs to be removed and reattached in Step 3.

1. Place the **SEAT (A)** upside-down on a non-abrasive, soft surface.
2. Note the “FRONT” arrow labels on both the **spring plate** of the **BASE (B)** and on the **support bar** under the **SEAT**. When assembling the hardware to connect the base to the seat, make sure **BOTH** arrows are pointed in the **SAME** direction towards the front of the chair.
3. Align the holes of the **spring plate, support bar, and PLATE KEEPERS (D)** in the order as shown in the diagram. Glide the **BOLTS (C)** through the aligned holes, and then fasten the parts together using a **FLAT WASHER (E), LOCK WASHER (F)** and **NUT (G)**.
4. Tighten all bolts and nuts completely.
5. Flip the chair right side up. Test the swivel rocker gently. If the rocker does not rock properly, double check the assembly procedure, especially Step 2 and 3.
6. If needed, you may use the adjustable feet to level out the chair.

CARE INSTRUCTIONS:

Please DO NOT use acid or alkaline washing liquids to clean this product. Harsh cleaners can cause the powder-coated finish to stain and fade. Use a soft towel with mild liquid soap and water to clean the product, and dry with a soft cloth.