



EXCLUSIVE ISLAND COLLECTION

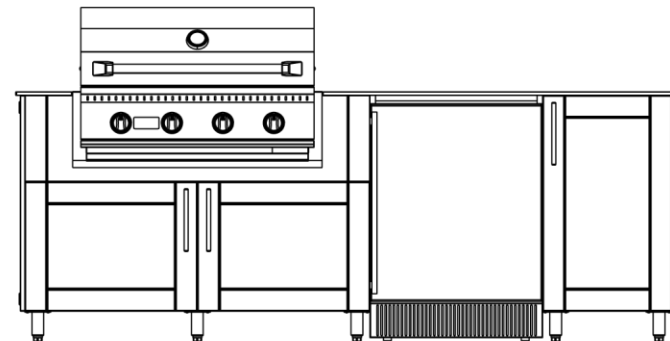
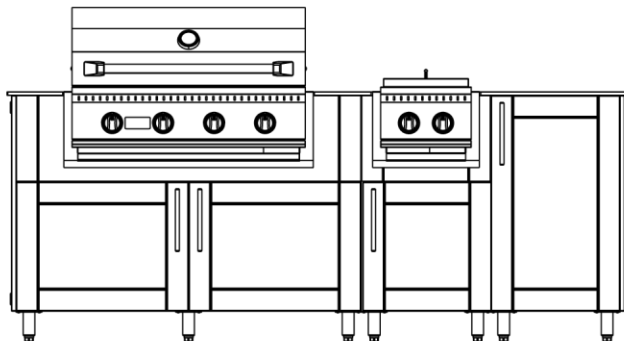
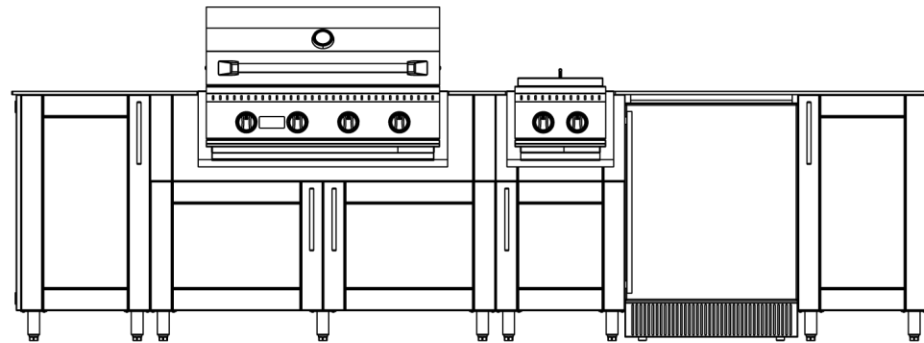


Table of Contents

Steps for a Successful Installation	03
128 Inch Island	04
Tools & Hardware	05
Components	06
Leg Installation	08
Island Installation	09
Countertop Installation	12
92 Inch Island	15
Tools & Hardware	16
Components	17
Leg Installation	19
Island Installation	20
Countertop Installation	22
86 Inch Island	25
Tools & Hardware	26
Components	27
Leg Installation	29
Island Installation	30
Countertop Installation	32
Care & Maintenance	35

Steps for a Successful Installation

1. Prepare the Site

- 1.1 Your outdoor kitchen should always be installed on a stable surface (patio/deck/balcony/rooftop) which should be as near to level as drainage requirements allow.
- 1.2 All cabinets come standard with adjustable stainless steel legs. However, in instances of extreme slope, or very large kitchens, footings may be needed to compensate if it falls out of the adjustable range of the legs.
- 1.3 Your kitchen has been designed to be freestanding and does not need to be affixed to the ground/wall. For extreme environments, such as high wind areas, we suggest that your kitchen be secured to an appropriate support structure. Please consult with your contractor/engineer for specifics.
- 1.4 Verify with your contractor/engineer to ensure that the surface is designed to support the weight of the kitchen.

2. Planning for Appliances


- 2.1 Your island cabinetry is made from weatherproof combustible materials and therefore, each gas appliance requires an insulated heat jacket. Check your specific island configuration for the necessary parts.
- 2.2 Please review the owner's manuals provided with your appliances before installation and ensure the hook-up is done by a licensed professional in accordance with local codes.



ATTENTION: WeatherStrong recommends using a licensed professional to handle all gas and electric connections.


3. Planning for Services (Gas/Electrical/Plumbing)

- 3.1 Vent holes are included in most cabinets to make service planning and implementation as easy as possible.
- 3.2 Local codes have specific requirements and restrictions for all services. Please ensure that planning and installation is performed by a locally licensed tradesperson.

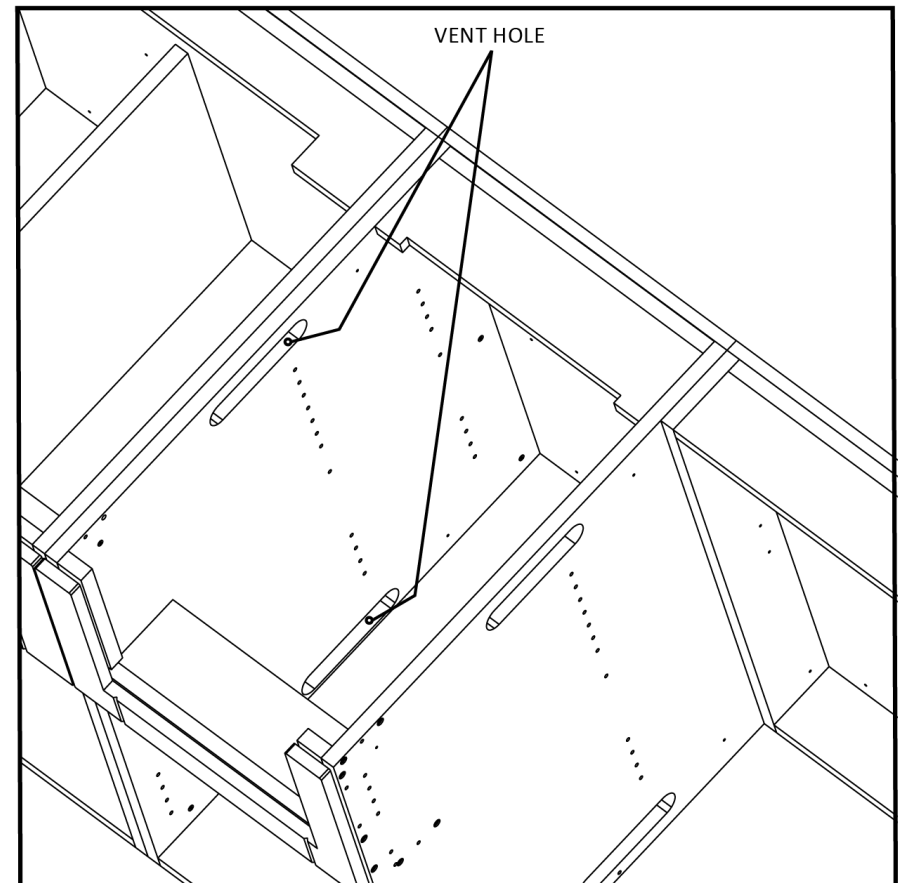




EXCLUSIVE ISLAND COLLECTION

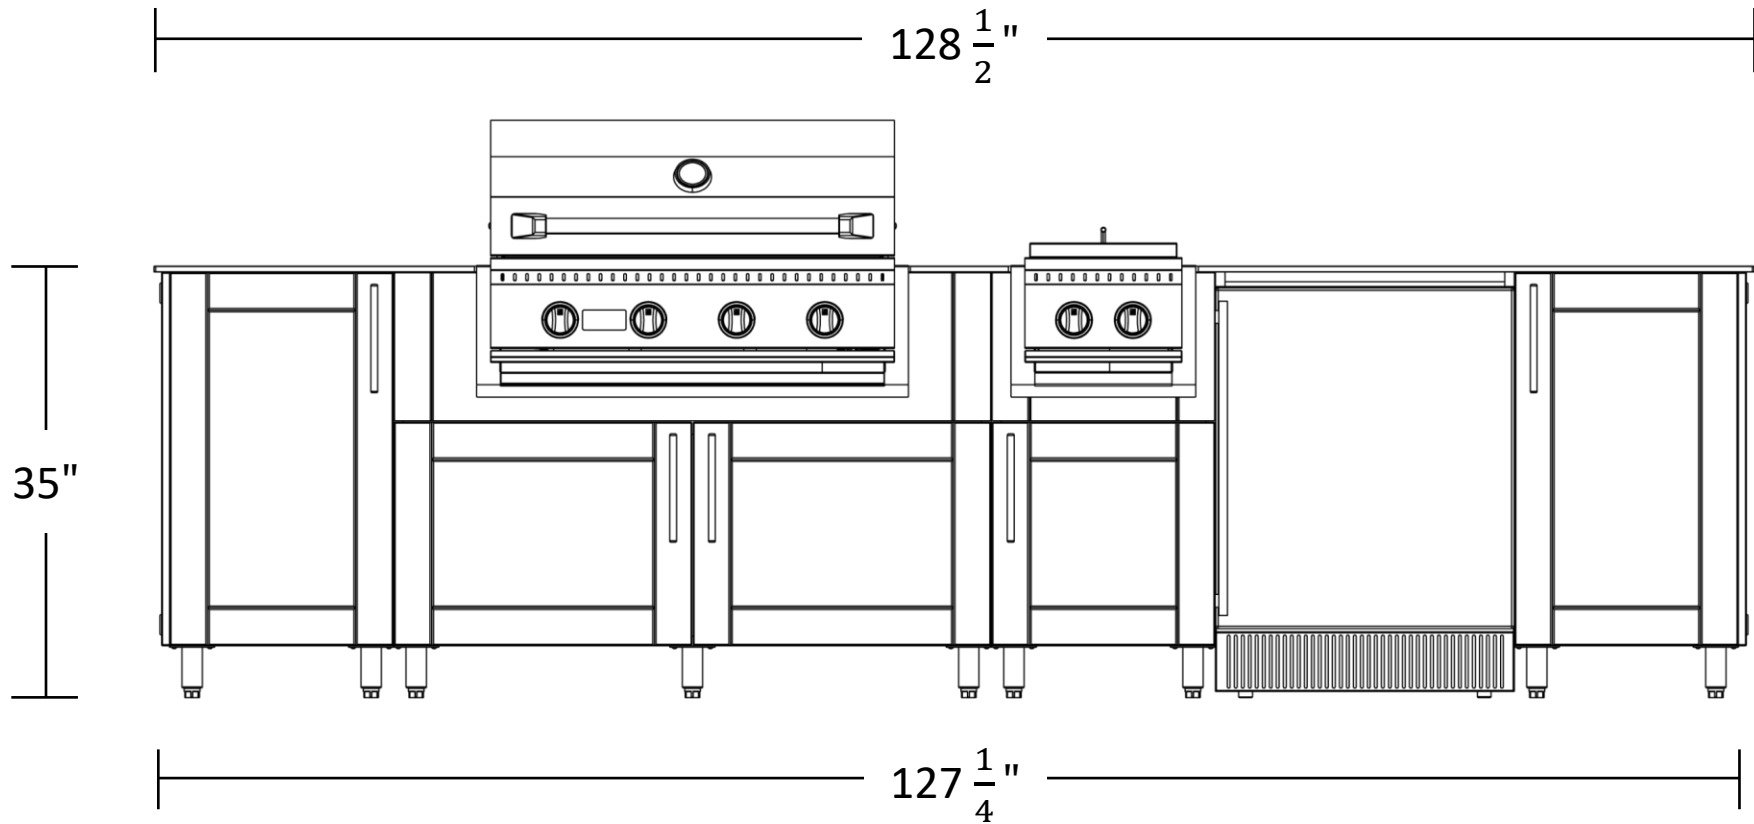


128 Inch Island

— Island Installation —

Tools Required

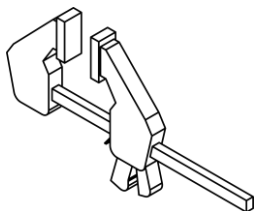

2 x C-Clamps

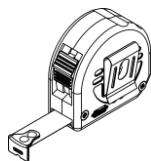


Tape Measure




Electric Drill with Philips
and Square bit

Hardware Included



18 x #8 Screws
(Attachment Screws)

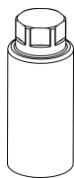

17 x Legs

— Countertop Installation —


Tools Required



Box Level




Pencil

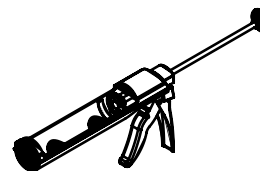

Caulking Gun




Outdoor Rated Adhesive

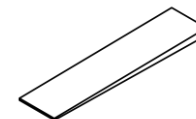


Shims

CAUTION: Safety glasses and gloves recommended


Island Components

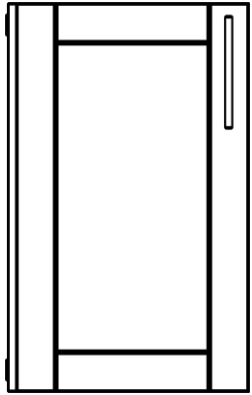


Left 18" Base Propane
Pull-out or Roll-out Tray

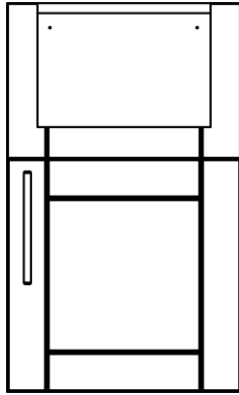


18" Side Burner Base

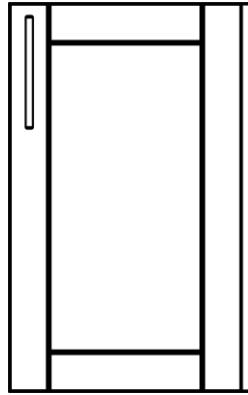

Right 18" Base Waste
Basket Pull-out

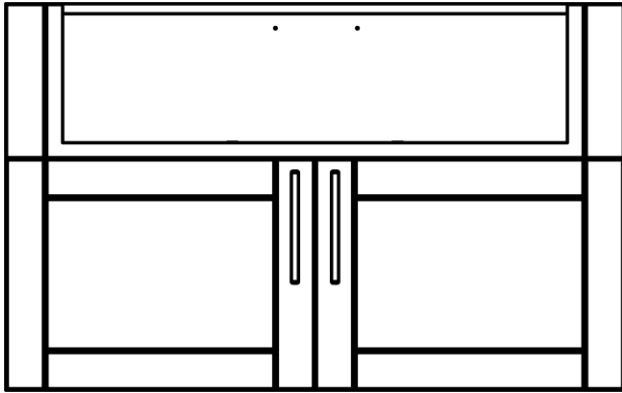


48" Grill Base

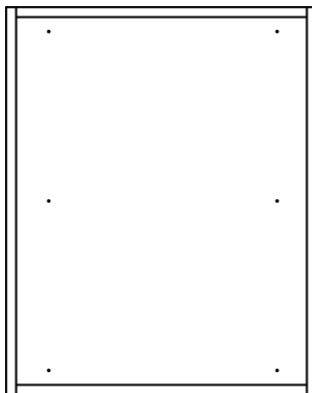


Refrigerator Backer

Countertop Components


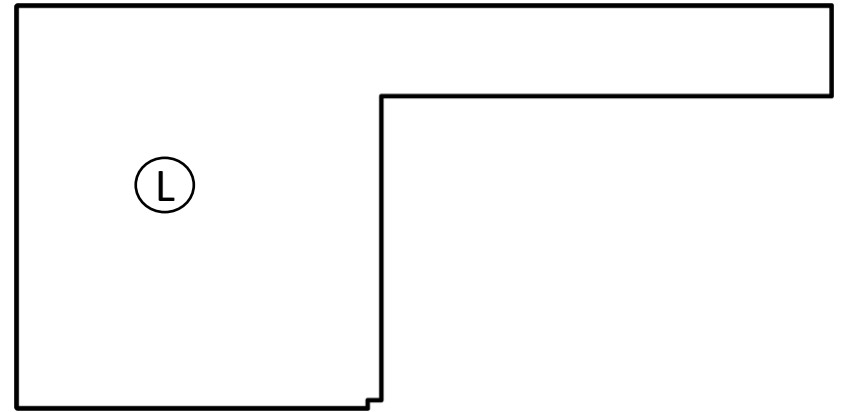


Left Counter Segment

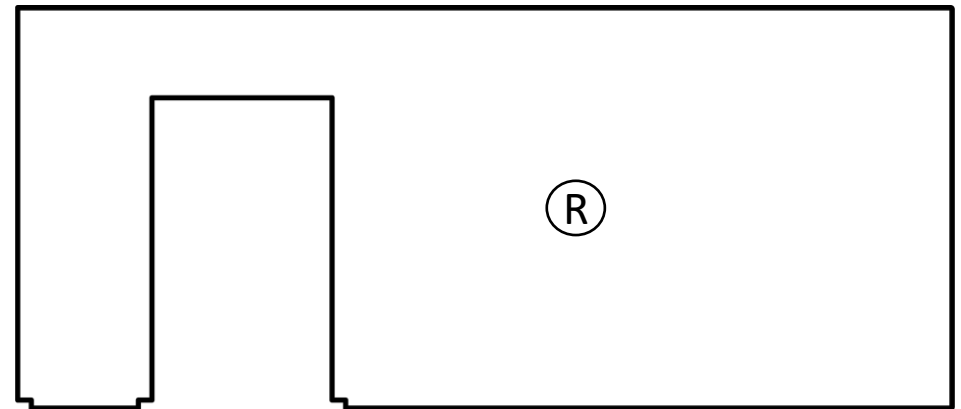


Right Counter Segment

STEP 1

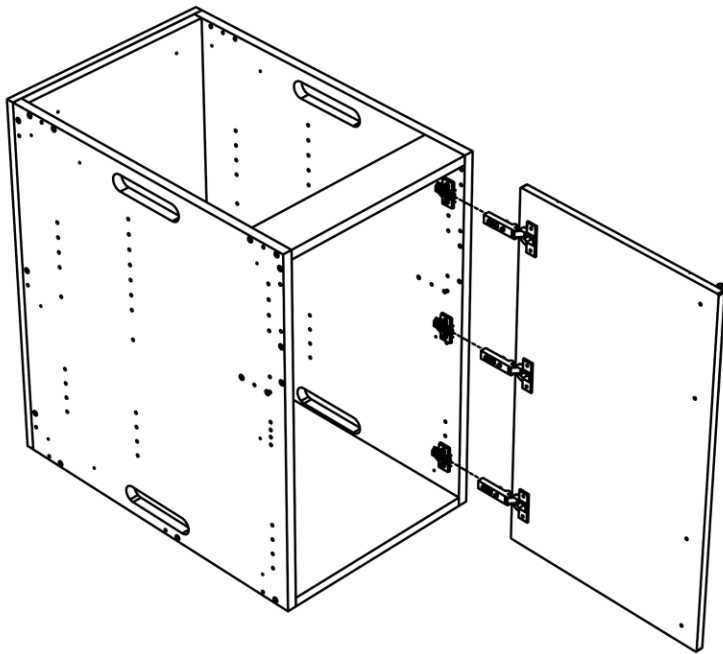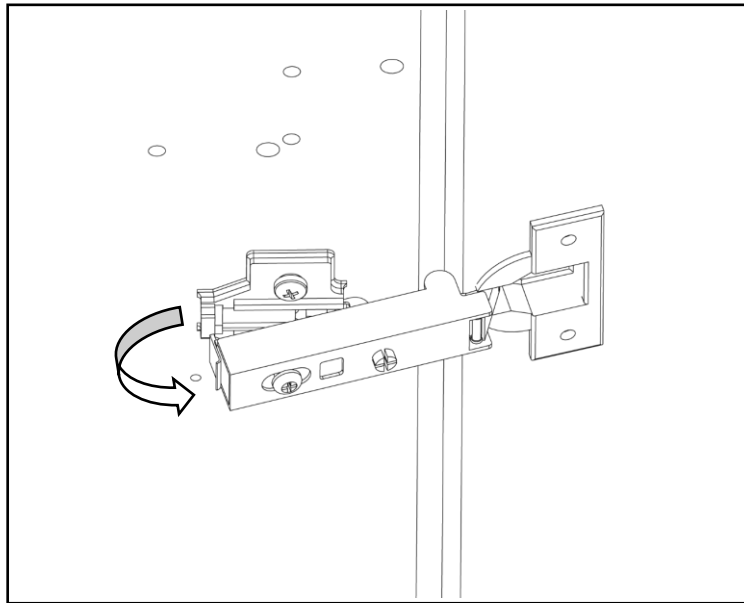

Find the latch on the back of each hinge and pull it towards you to disconnect each Soft-Close Hinge from its Hinge Plate. Once you have disconnected each Soft-Close Hinge, carefully remove the door and place it to the side, laying it on a protected surface to avoid any unnecessary damage. Repeat for all doors.


STEP 2

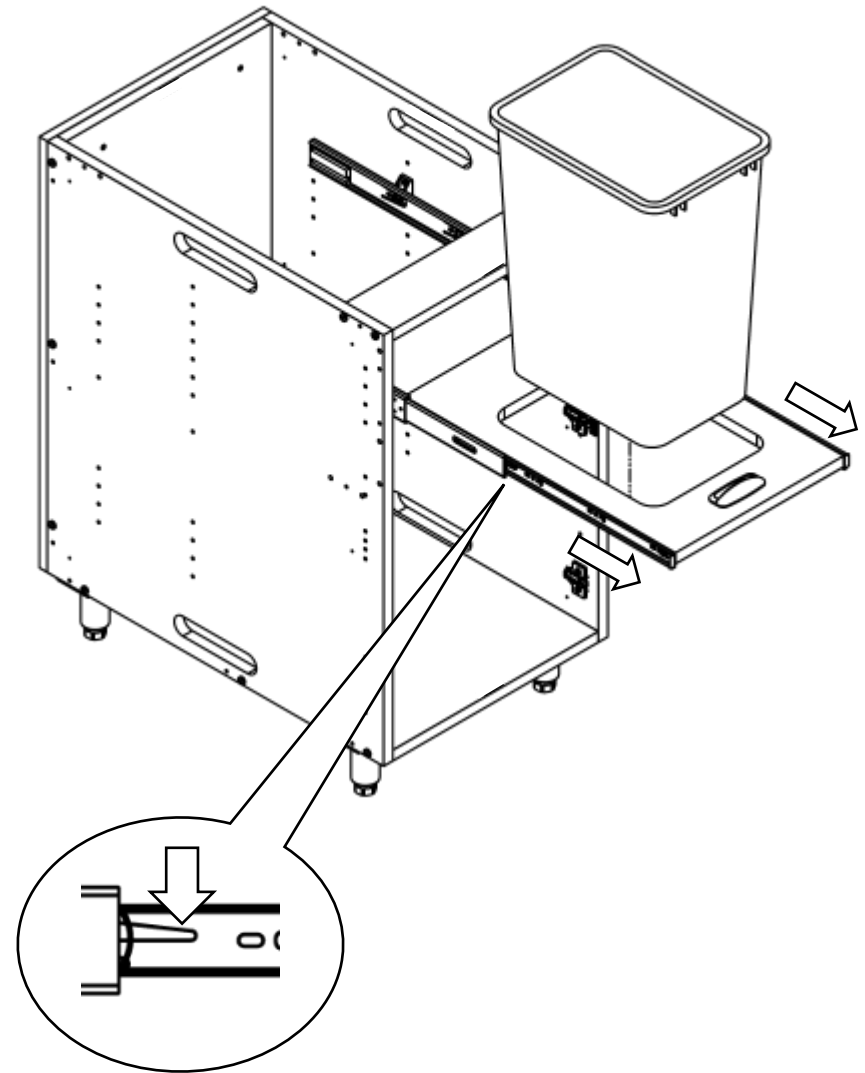

Remove waste basket and then, carefully remove the waste basket pull-out by pressing down on the white tab pull runner member and pulling apart from larger runner member. Repeat step for other cabinet with either propane pull-out or roll-out tray.

STEP 3


REQUIRES
4 Legs per Cabinet

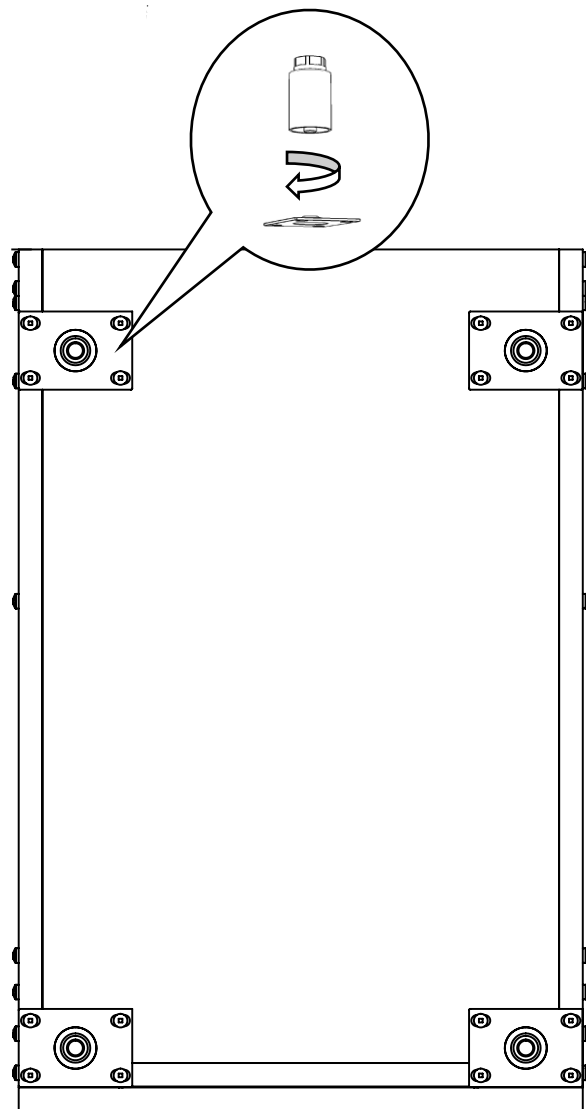

Carefully lay the cabinet on its back. Then, screw on the 4 adjustable legs. Repeat for each 18" Bases and 18" Side Burner Base.

STEP 4

REQUIRES
5 Legs


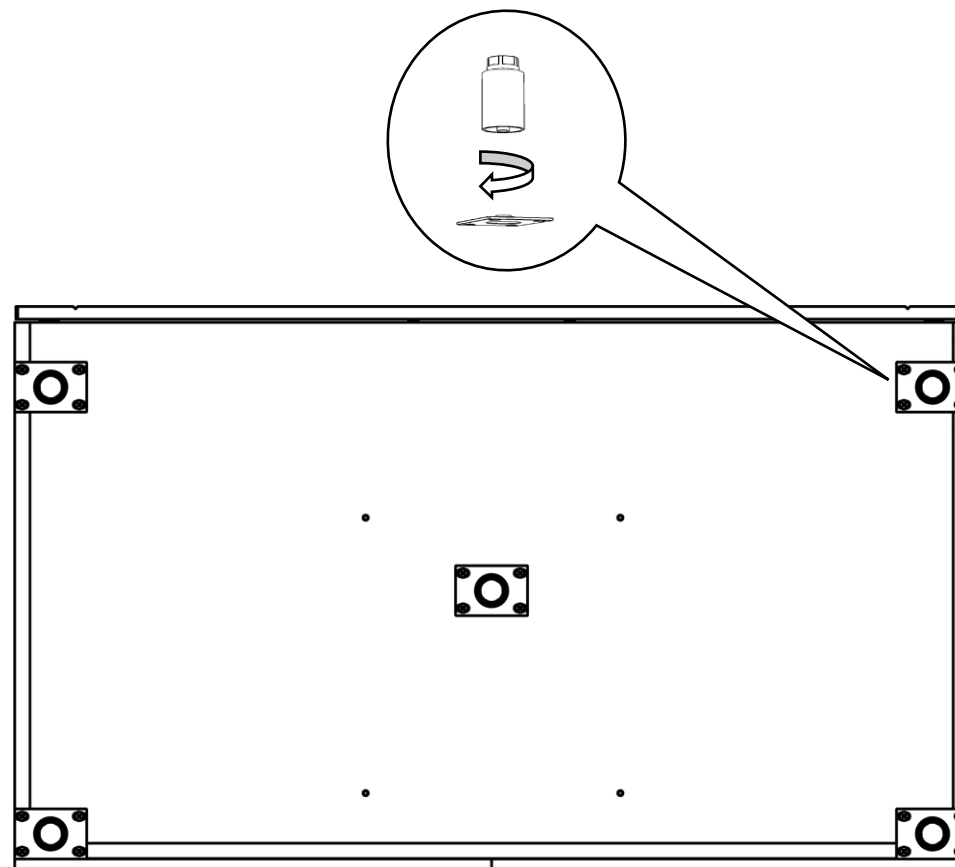


Carefully lay the 48" Grill Base on its back. Then, screw on the 5 adjustable legs.
Pro Tip: Make sure the adjustable end of each leg is loose before standing the cabinet upright. This will make leveling the cabinets easier.

STEP 5

REQUIRES
2x C-Clamps, Drill, & Box Level
6 x Attachment Screws

Flush Back Panels
Before Tightening
Attachment Screws

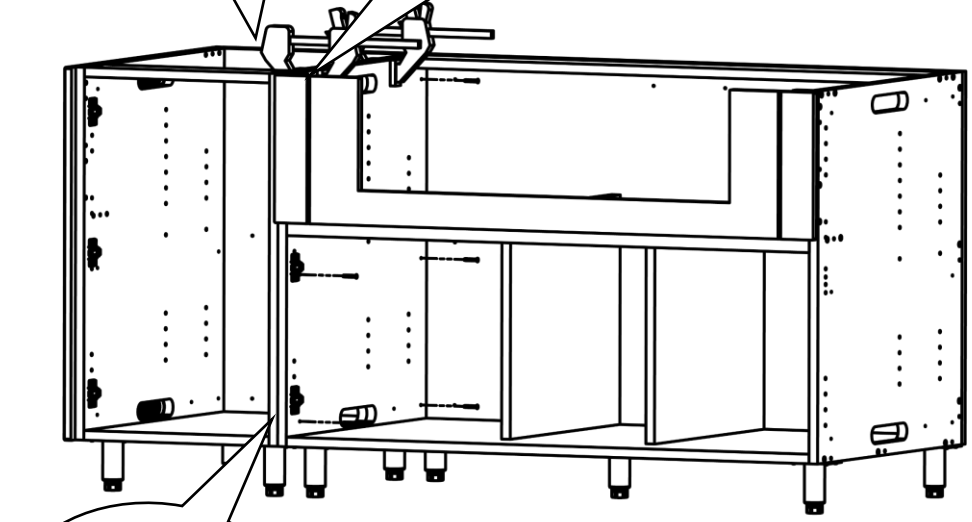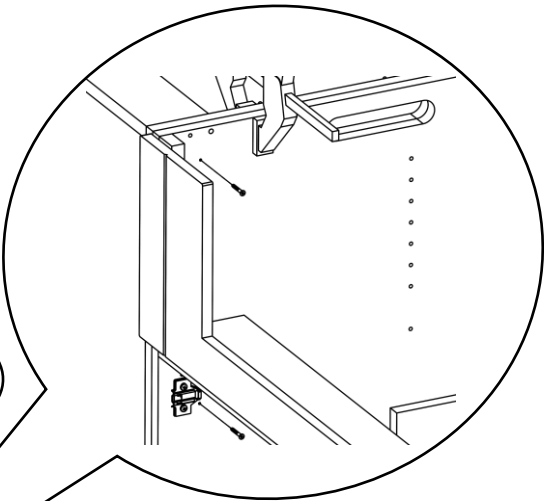


Flush
Front &
Top Edges

Align the attachment screw holes of the right side of the 18" Base cabinet to the left side of the 48" Grill Base cabinet. Then, temporarily hold each cabinet together using C-clamps. Lastly, use the 6 attachment screws to connect each cabinet together.

STEP 6

REQUIRES
2x C-Clamps, Drill, & Box Level
6 x Attachment Screws

Flush Back Panels
Before Tightening
Attachment Screws

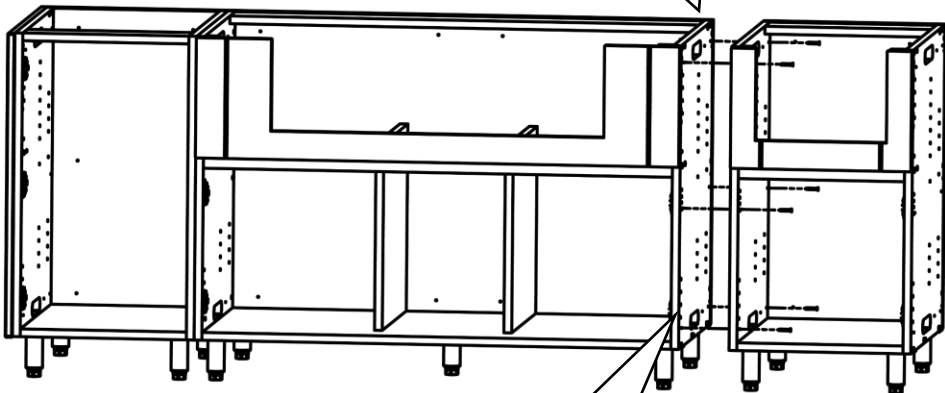


Flush
Front &
Top Edges

Align the attachment screw holes of the left side of the 18" Side Burner Base cabinet to the right side of the 48" Grill Base cabinet. Then, temporarily hold each cabinet together using C-clamps. Lastly, use the 6 attachment screws to connect each cabinet together.

STEP 7


REQUIRES

2x C-Clamps, Drill, & Box Level
6 x Attachment Screws

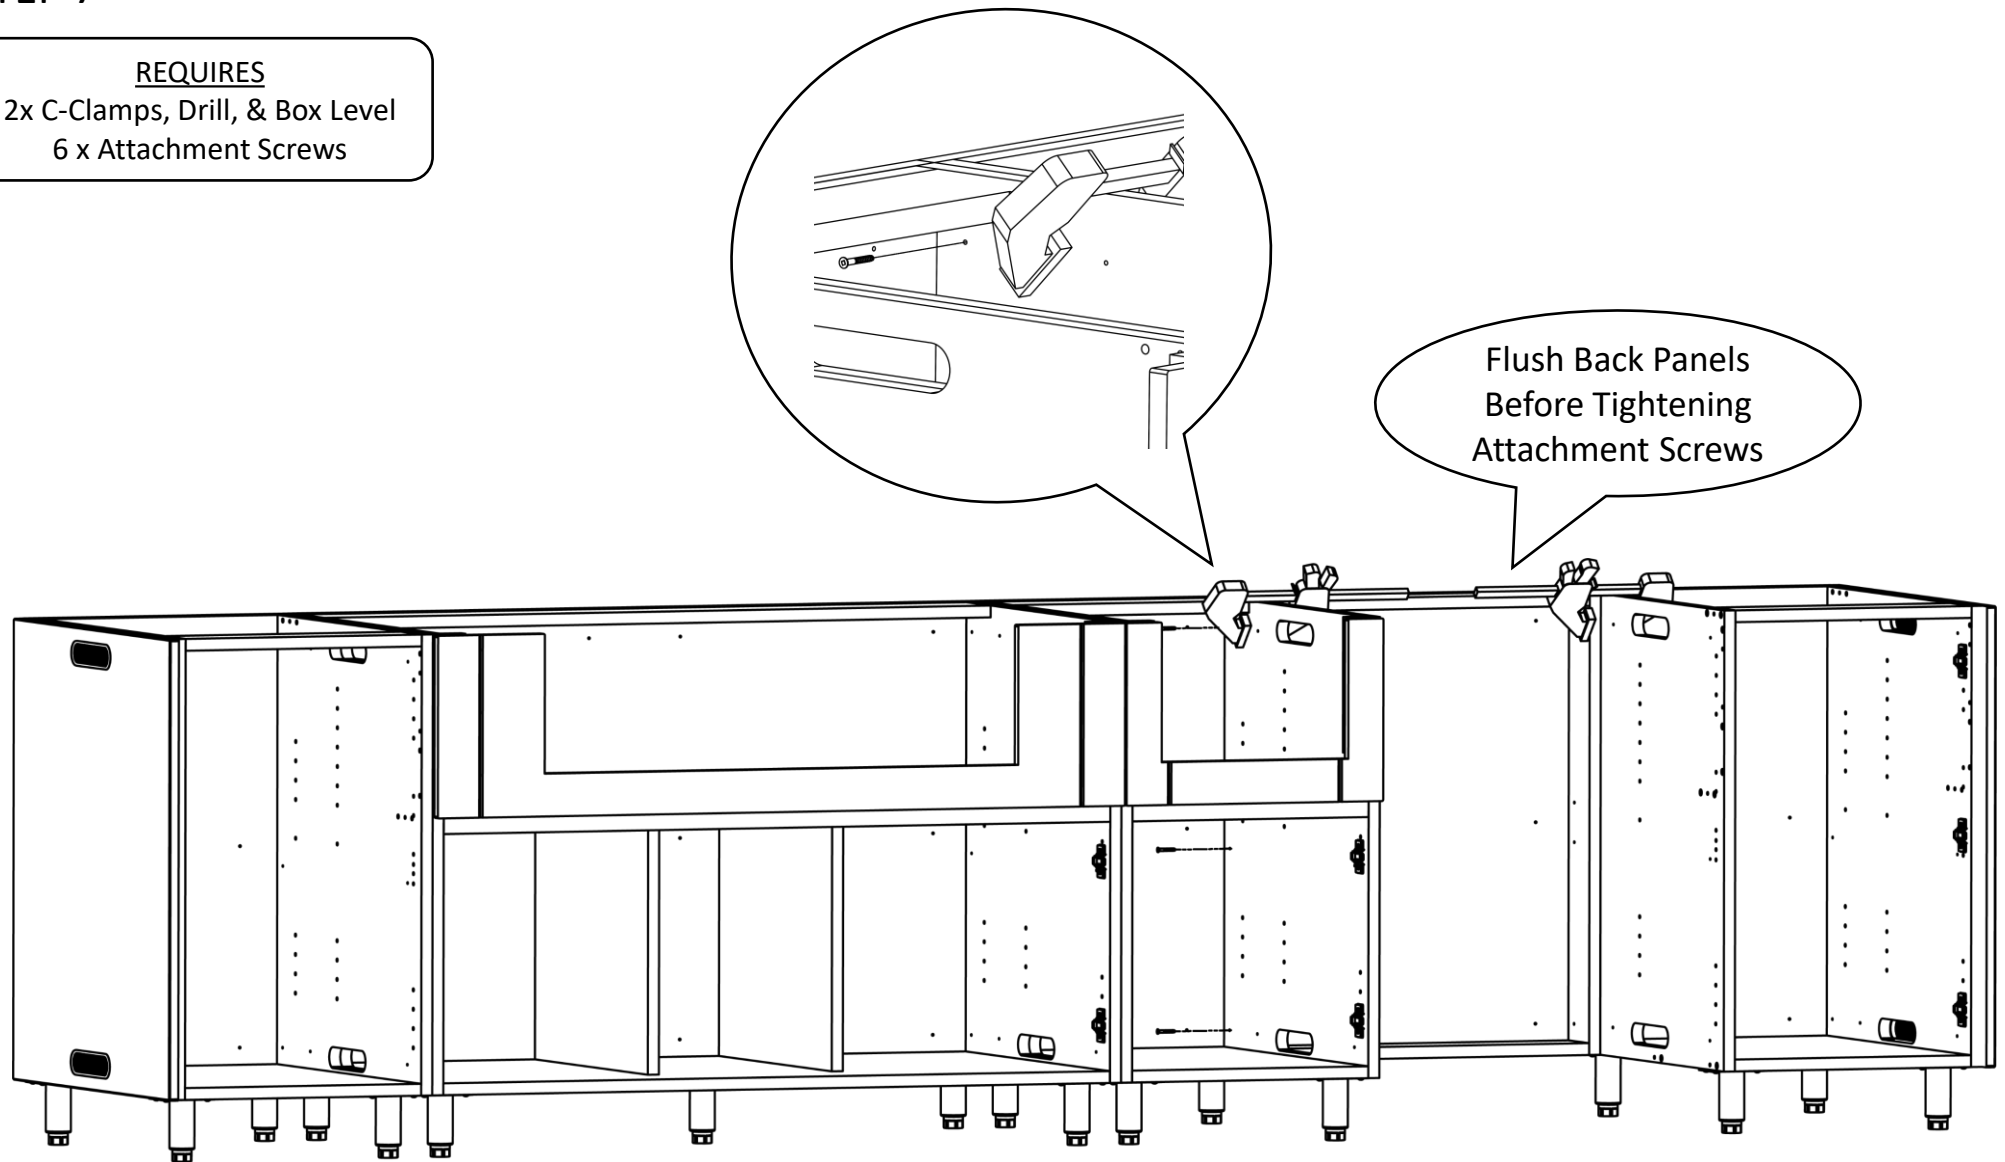


Align the finished back of the Refrigerator Backer to the finished back of the adjacent cabinets and temporarily secure it in place using C-clamps. Use the 6 attachment screws to connect the Refrigerator Backer to both cabinets.

STEP 8

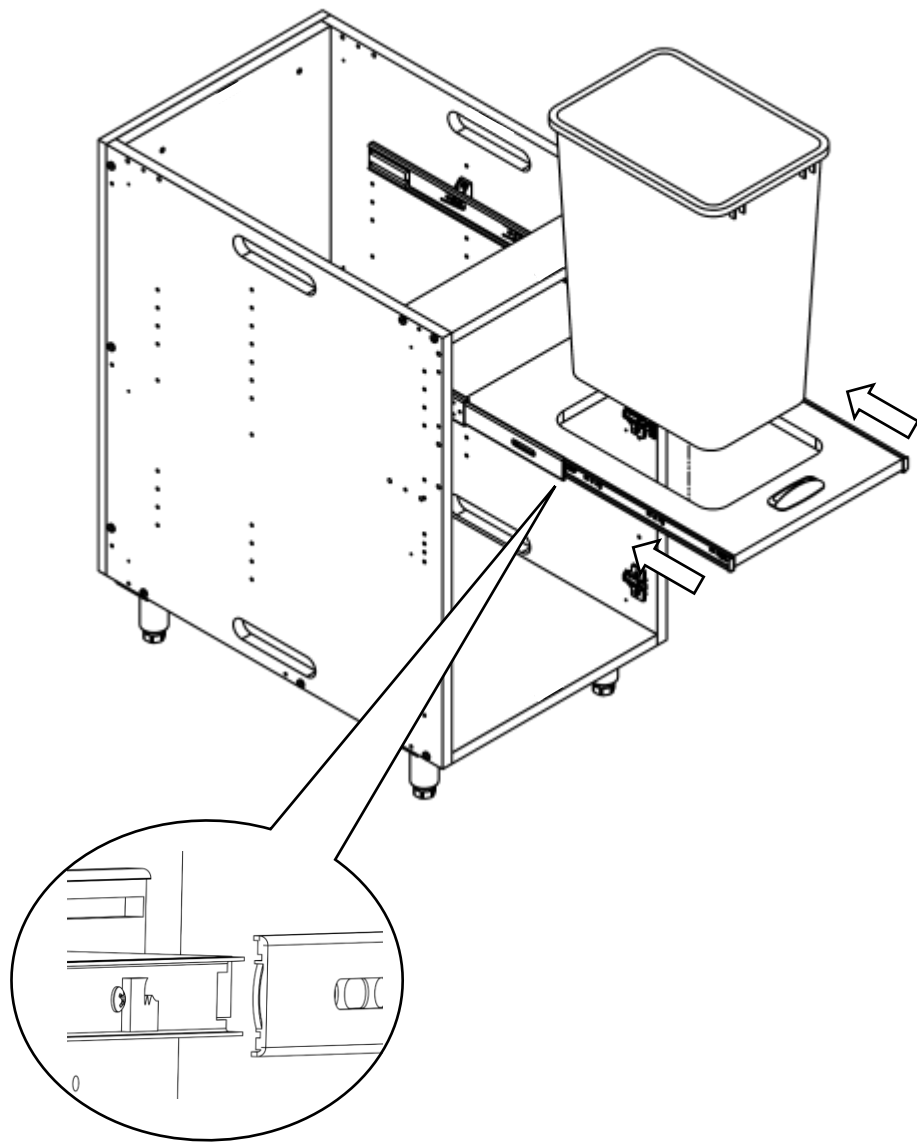

Carefully slide the waste basket pull-out into the larger runner members by inserting the smaller runner members into the plastic guides at the front of the larger members. You should hear a 'click' when fully inserted. Then put waste bin back in. Repeat step for other cabinet with either propane pull-out or roll-out tray.


STEP 9

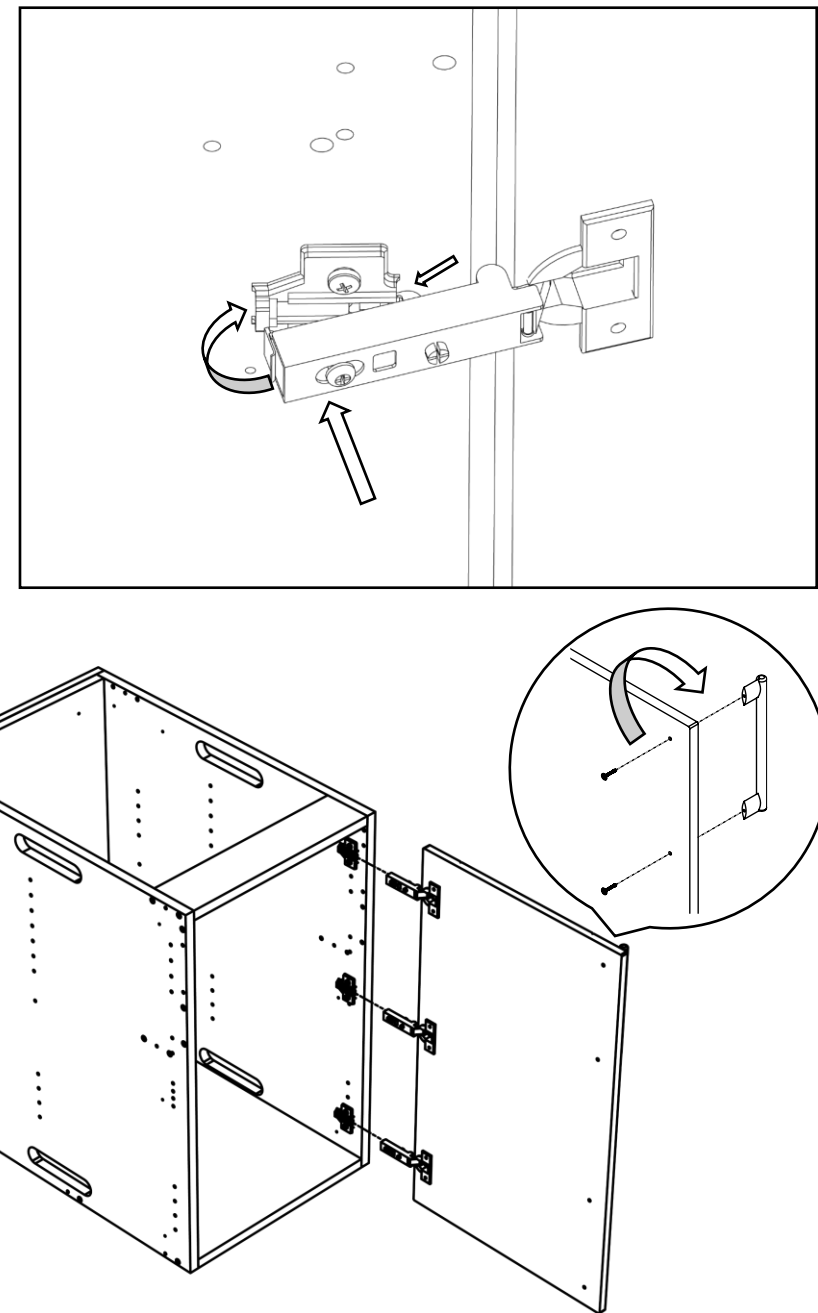

Reattach all doors by locating the small "hooks" on the underside of the Soft-Close Hinge and hook them under the front of the Hinge Plate, then press the back of the hinge towards the plate until it "clicks" into place. Repeat for the remaining hinges.

STEP 10


REQUIRES
Box Level

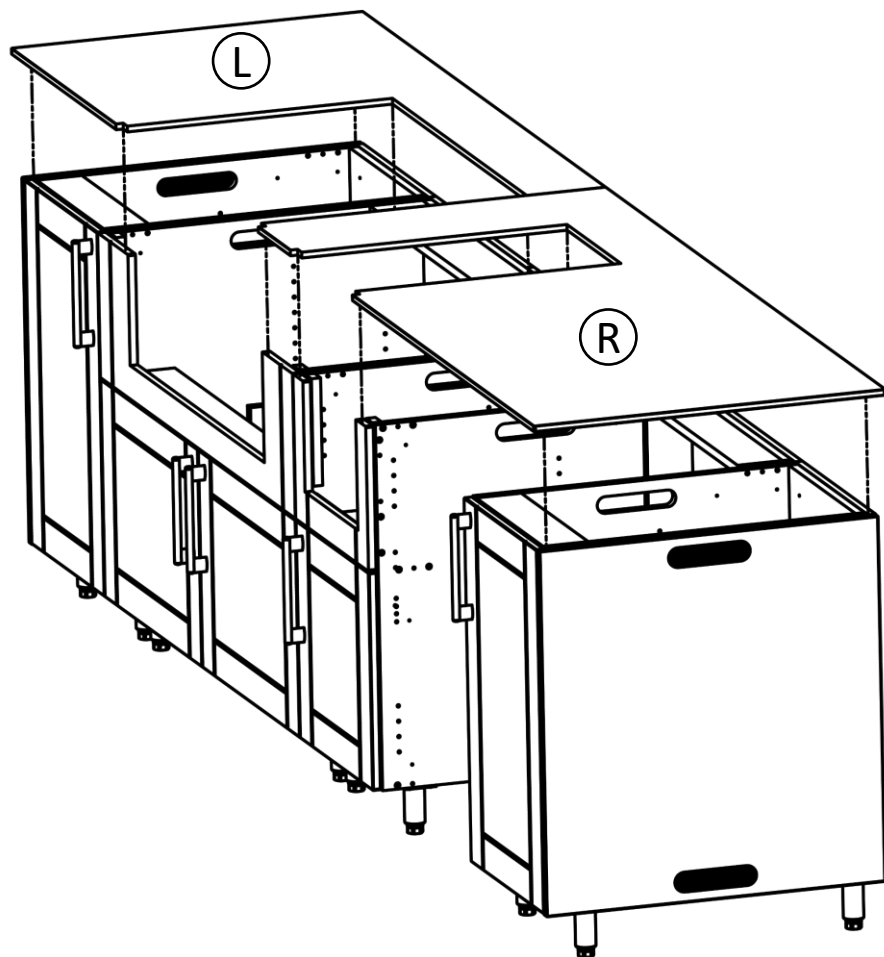

Ensure the top of the island is level before proceeding. Place the countertop components on the island with the letters facing up. Make sure the Grill Liner notches in the countertop are lined up with the apron front cutouts.

STEP 11


REQUIRES
Tape Measure

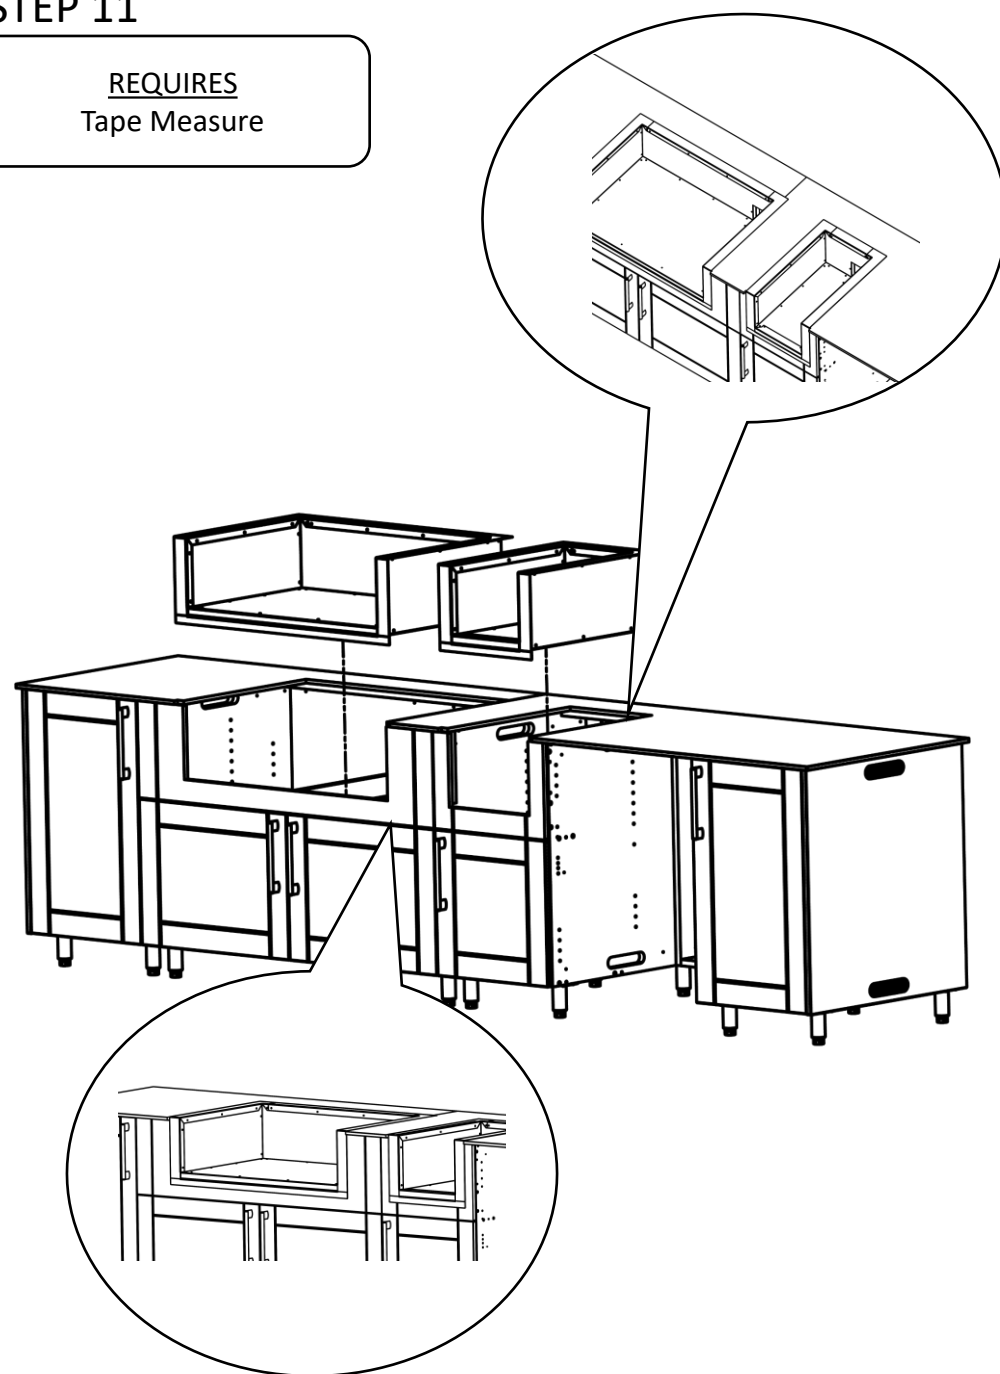

Carefully insert the Grill Liner(s), ensuring the front of the Liner(s) is flush against the cabinet Apron Front. Make sure the countertop components fit tight in the back. Shims may be necessary to properly align the tops. The back edge and both ends should overhang approximately 5/8"

STEP 12


REQUIRES
Pencil

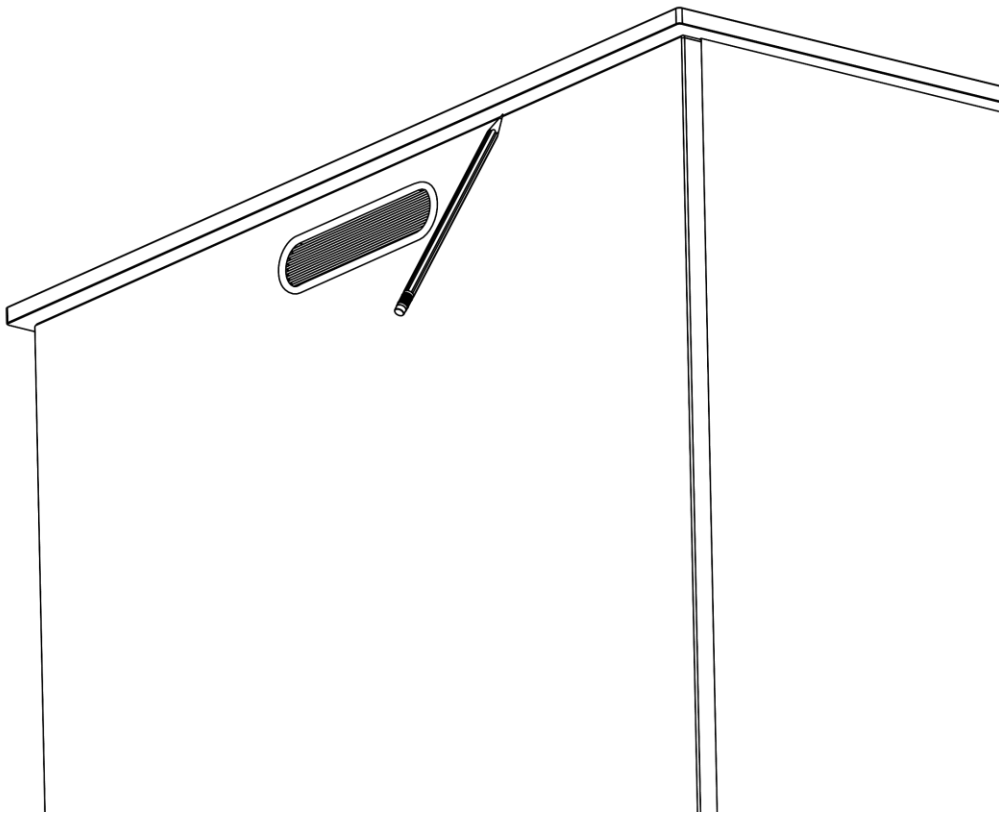

Once the countertop and Grill Liners are positioned correctly, use a pencil to mark the underside of the countertop.

STEP 13


REQUIRES
Adhesive

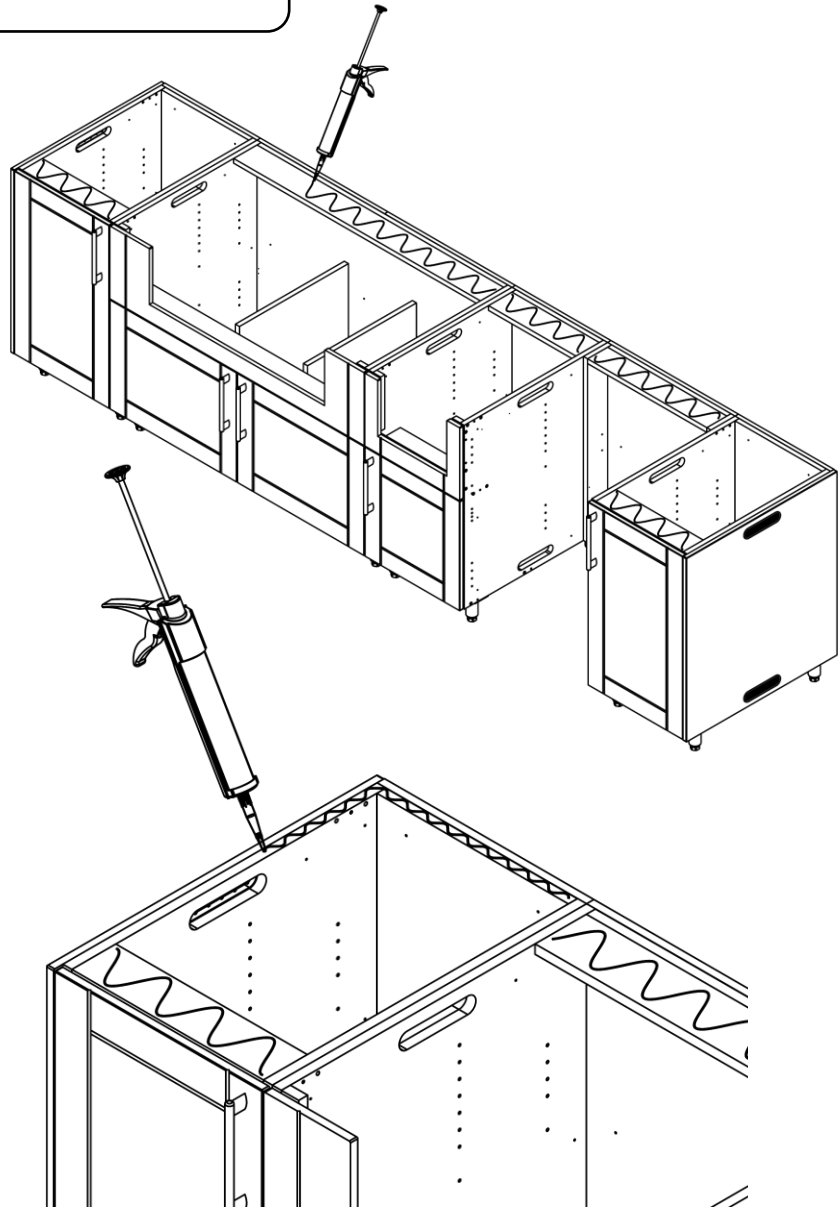

Remove Grill Liner and the countertop components and set them aside. Apply Outdoor Rated Construction Adhesive liberally to the front and back rails and along the top edge of the cabinets, as shown. Ensure all adhesive is applied to the 3/4" All-Weatherboard® not the 5/8" HDPE.

STEP 14


REQUIRES
Box Level

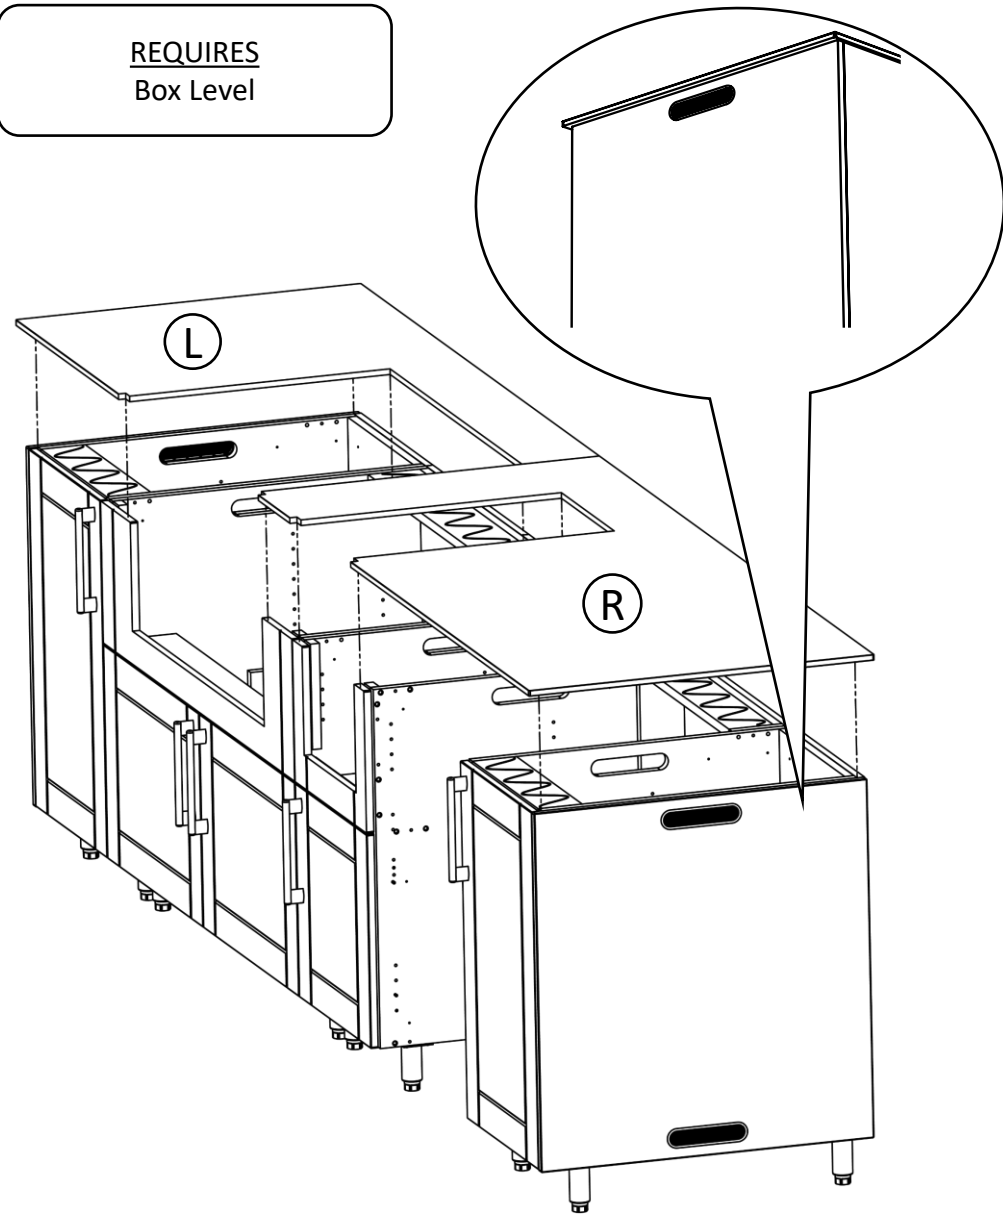

Carefully replace the countertop components using the pencil reference marks made in Step 10. Make sure the countertop pieces fit tightly together and are level; shim if necessary. Use blue painter's tape to hold the pieces together. Allow 24 hours for the adhesive to fully cure before reinstalling the Grill Liner.

STEP 15


IMPORTANT! For the gas and electric hook-up, use a certified professional. If access holes are required for hoses or cables, use standard wood drill bits and hole saws.

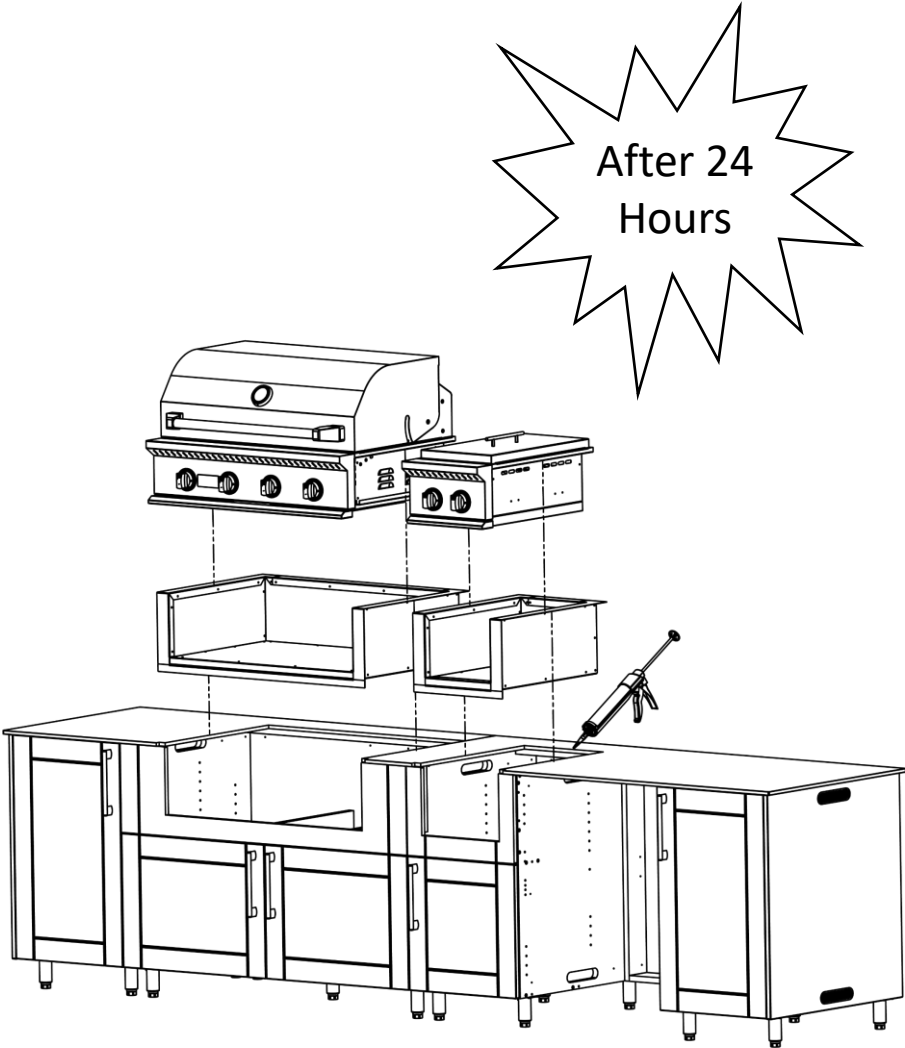

Once the adhesive has fully cured, you can install the Grill Liner. First, run a bead of outdoor rated clear silicone caulk around the countertop cutout and install the Grill Liner. The outdoor rated clear silicon caulk will stop water from entering the cabinet and is flexible enough to cope with the expansion of the Grill Liner when it gets hot. You must also use a bead of outdoor rated clear silicon caulk to seal the grill head into the Grill Liner.




EXCLUSIVE ISLAND COLLECTION

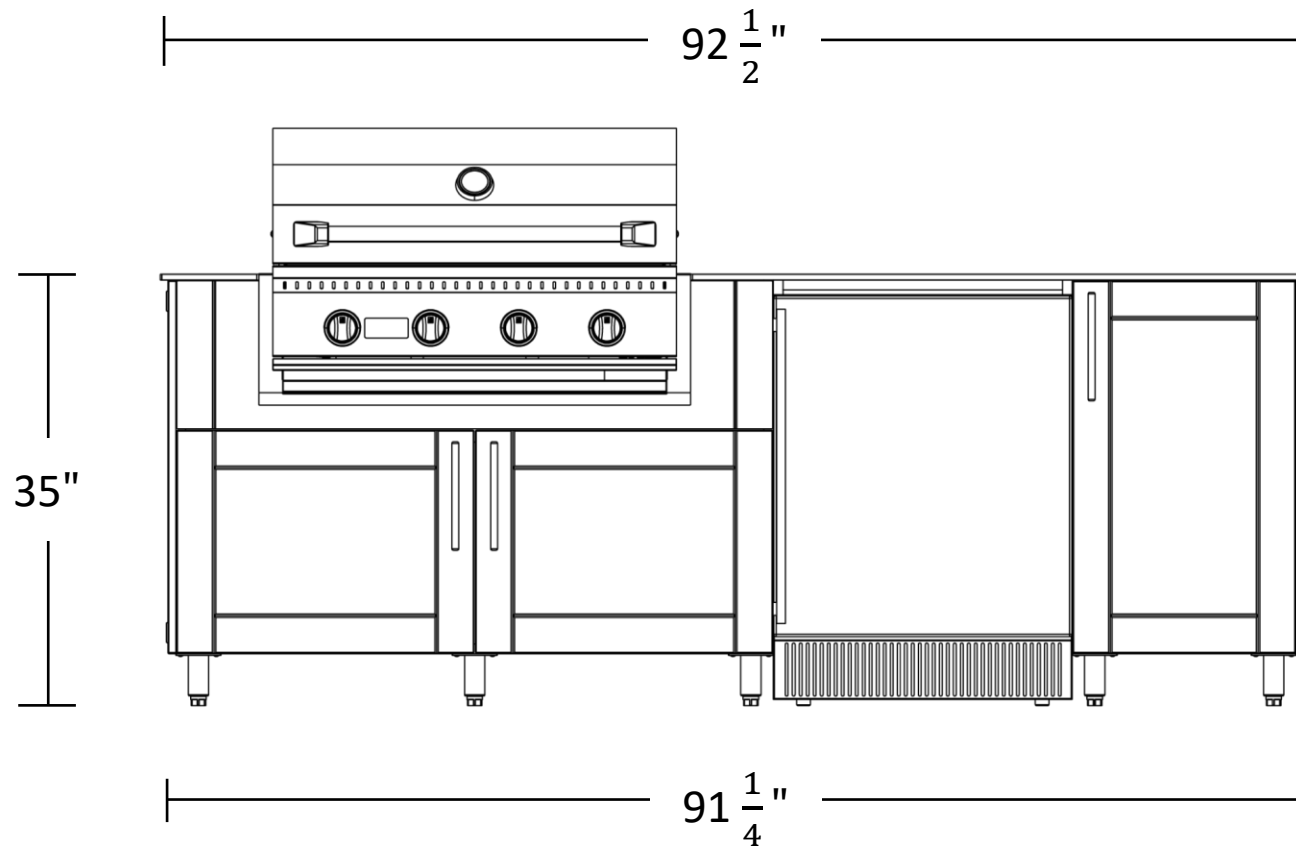


92 Inch Island

— Island Installation —

Tools Required

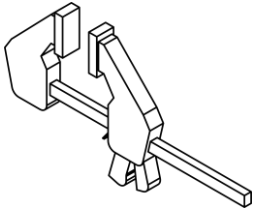

2 x C-Clamps

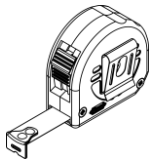


Tape Measure



Electric Drill with Philips
and Square bit

Hardware Included



6 x #8 Screws
(Attachment Screws)



9 x Legs

— Countertop Installation —


Tools Required




Box Level




Pencil

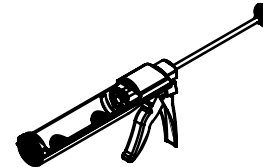

Caulking Gun

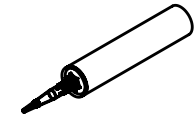


Outdoor Rated Adhesive

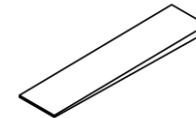


Shims

CAUTION: Safety glasses and gloves recommended


— Island Components —

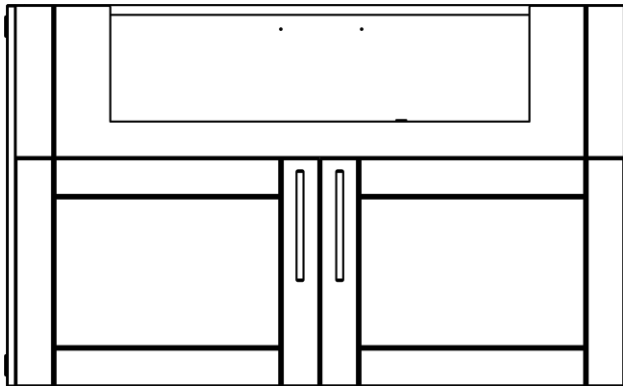

48" Grill Base

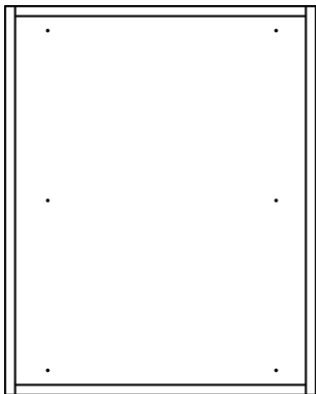


Refrigerator Backer

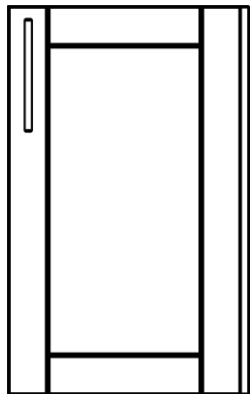


18" Base Propane Pull-out or Roll-out Tray

— Countertop Components —


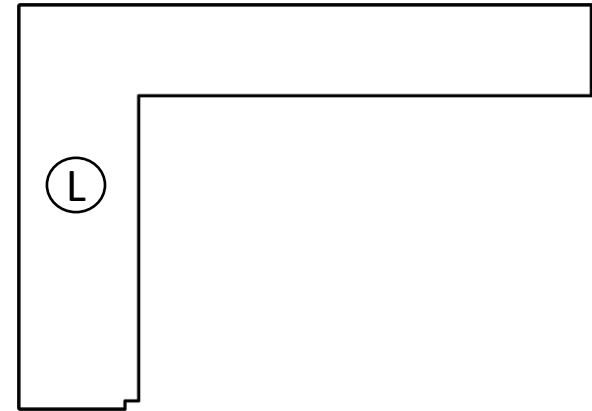


Left Counter Segment

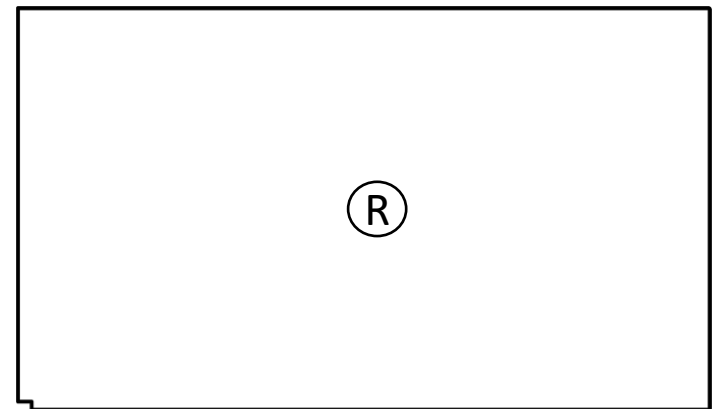


Right Counter Segment

STEP 1

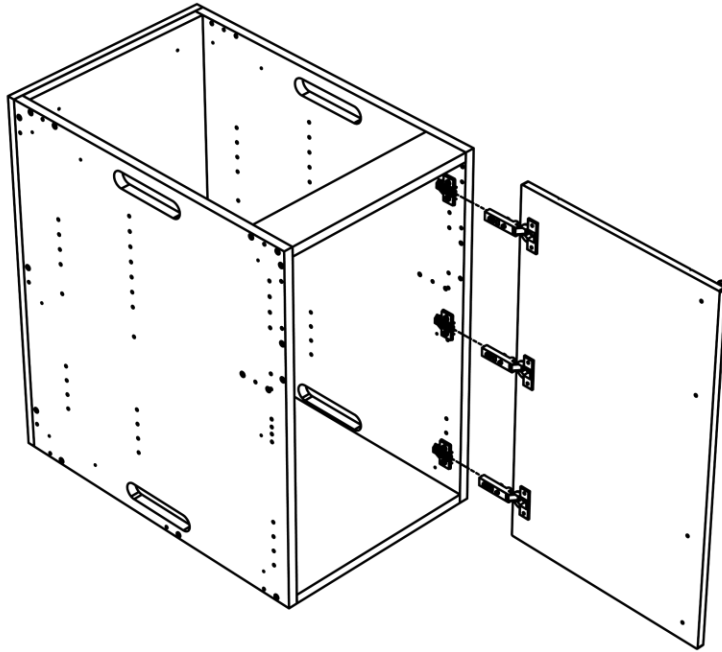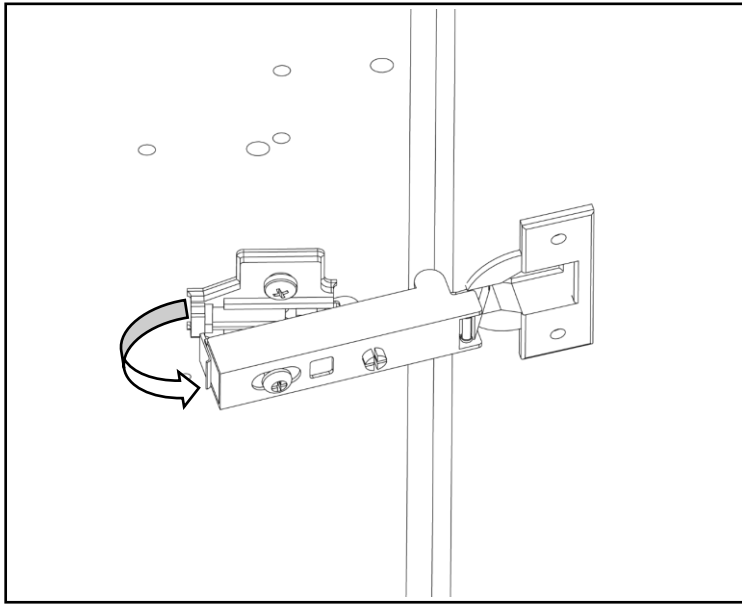

Find the latch on the back of each hinge and pull it towards you to disconnect each Soft-Close Hinge from its Hinge Plate. Once you have disconnected each Soft-Close Hinge, carefully remove the door and place it to the side, laying it on a protected surface to avoid any unnecessary damage. Repeat for all doors.

STEP 2

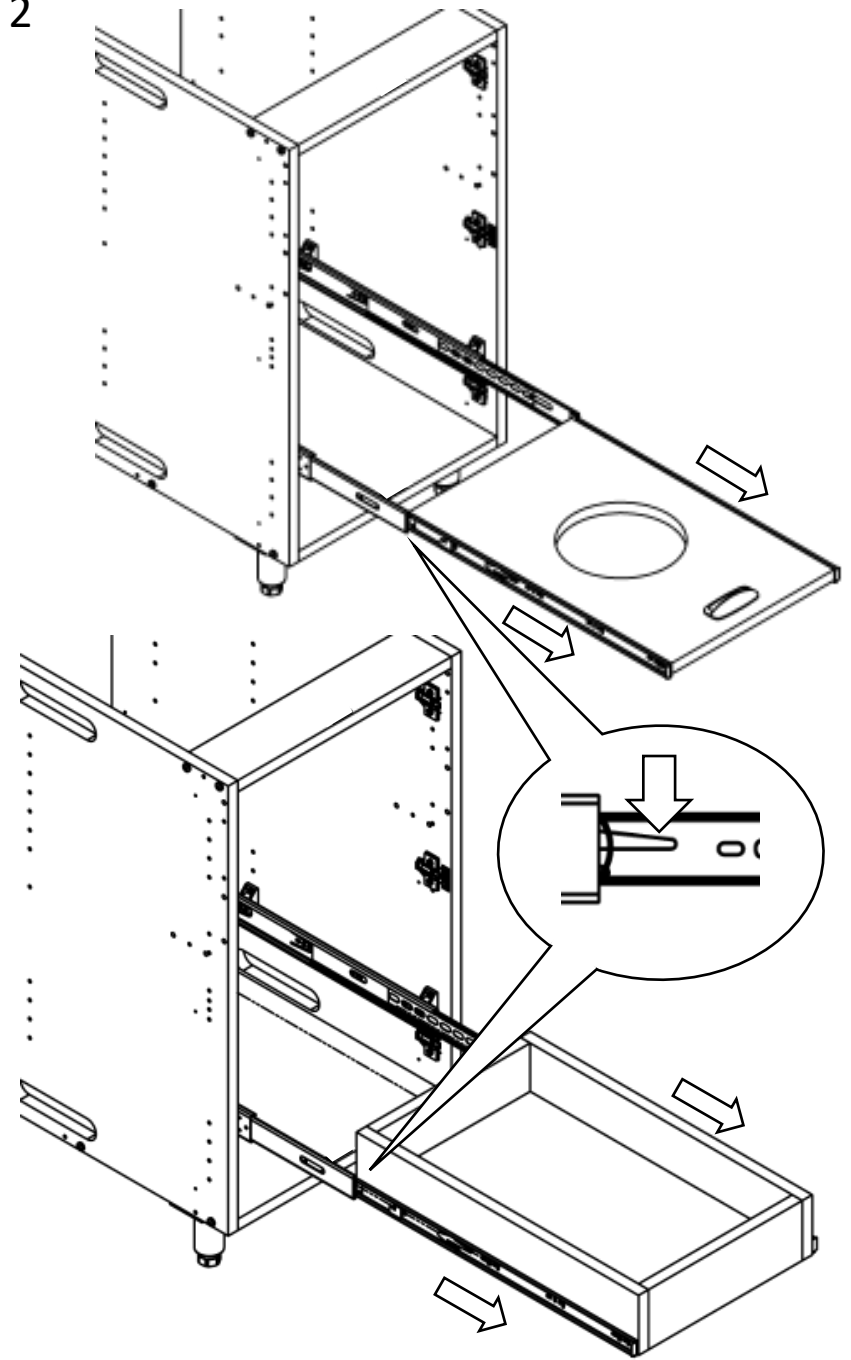


Carefully remove the propane pull-out or roll-out tray by pressing down on the white tab pull runner member and pulling apart from larger runner member.

STEP 3

REQUIRES

4 Legs per Cabinet

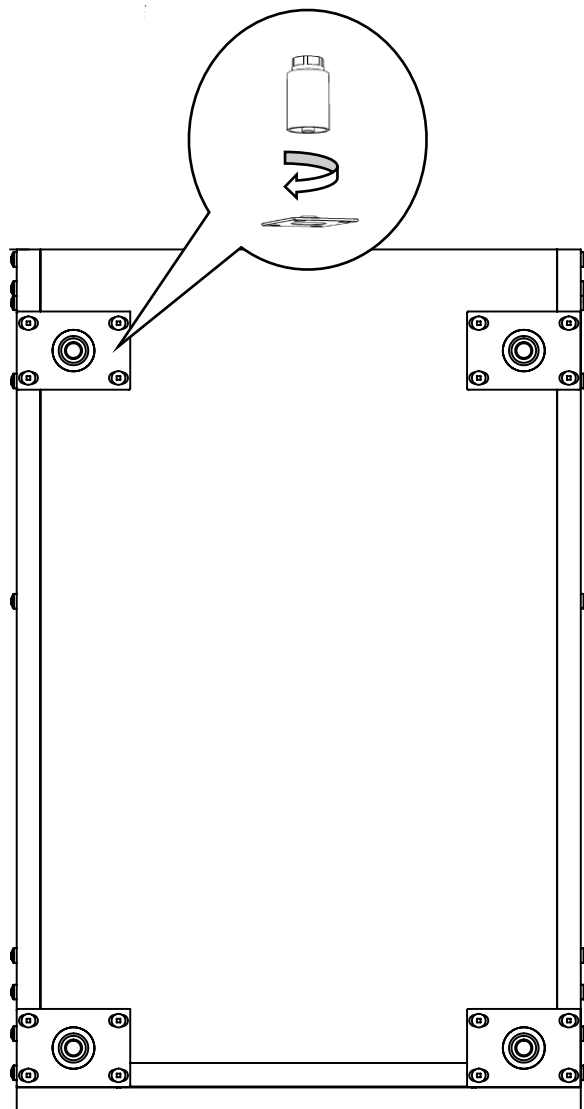


Carefully lay the cabinet on its back. Then, screw on the 4 adjustable legs. Repeat for each 18" Bases and 18" Side Burner Base.

STEP 4

REQUIRES

5 Legs

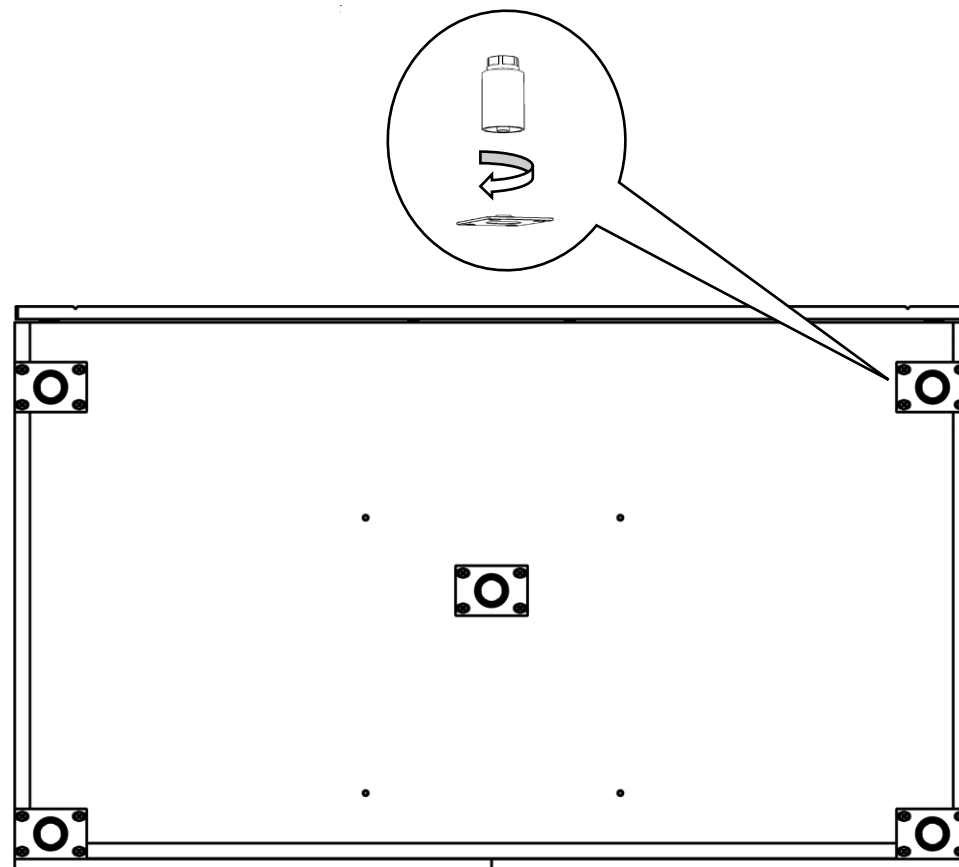


Carefully lay the 48" Grill Base on its back. Then, screw on the 5 adjustable legs.
Pro Tip: Make sure the adjustable end of each leg is loose before standing the cabinet upright. This will make leveling the cabinets easier.


STEP 5

REQUIRES

2x C-Clamps, Drill, & Box Level
6 x Attachment Screws

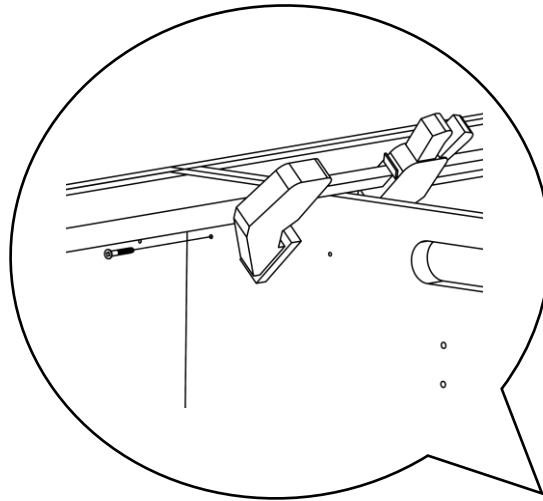


Flush Back Panels
Before Tightening
Attachment Screws

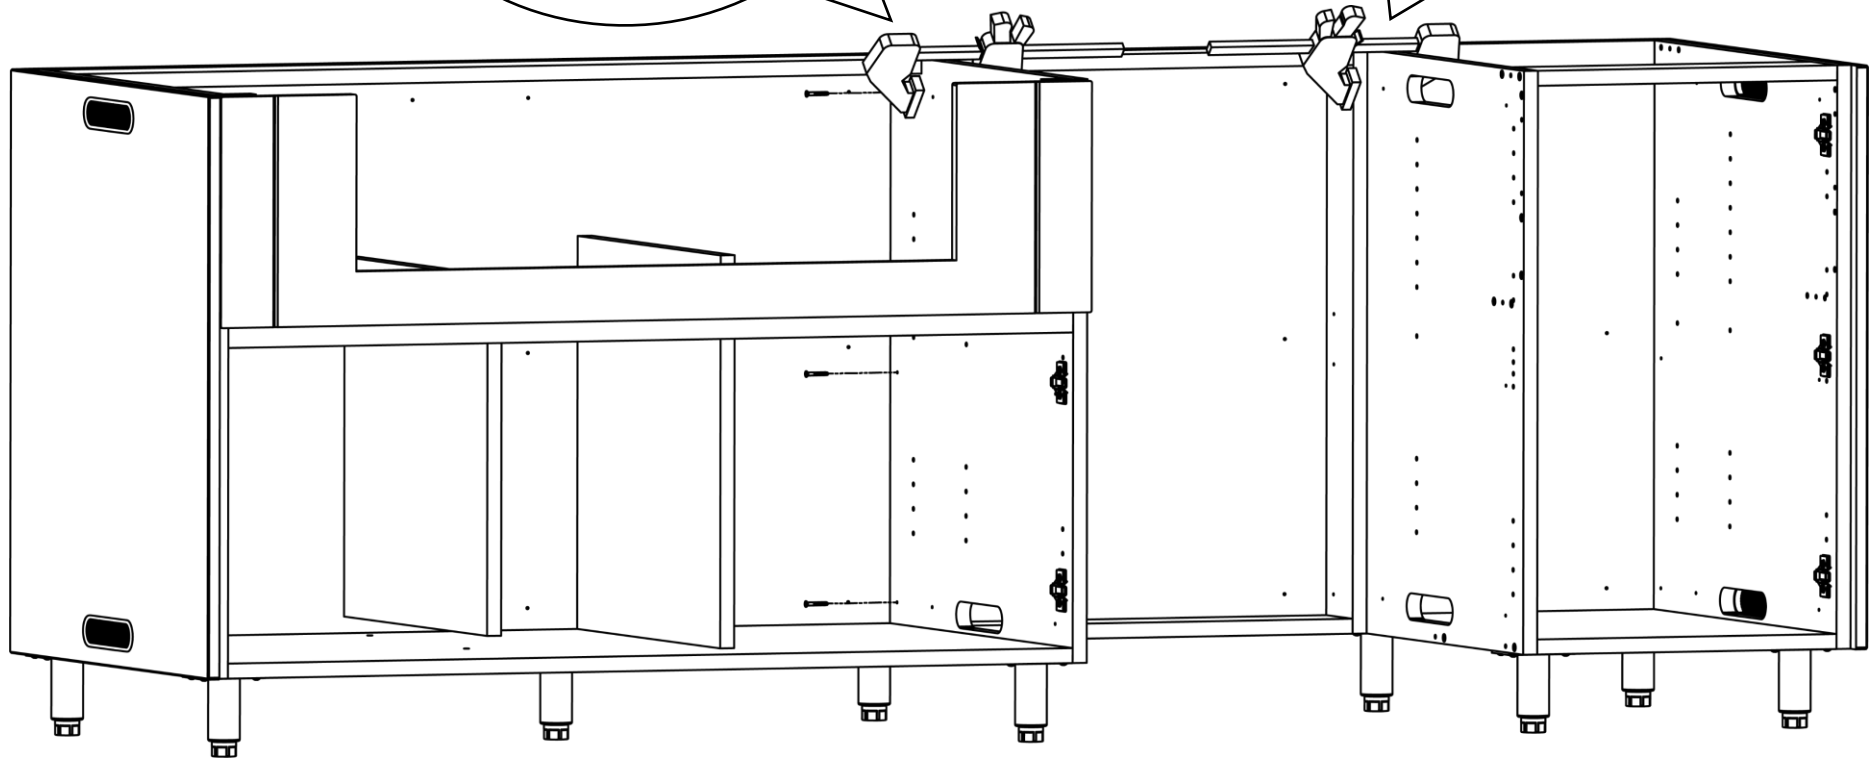



Align the finished back of the Refrigerator Backer to the finished back of the adjacent cabinets and temporarily secure it in place using C-clamps. Use the 6 attachment screws to connect the Refrigerator Backer to both cabinets.

STEP 6

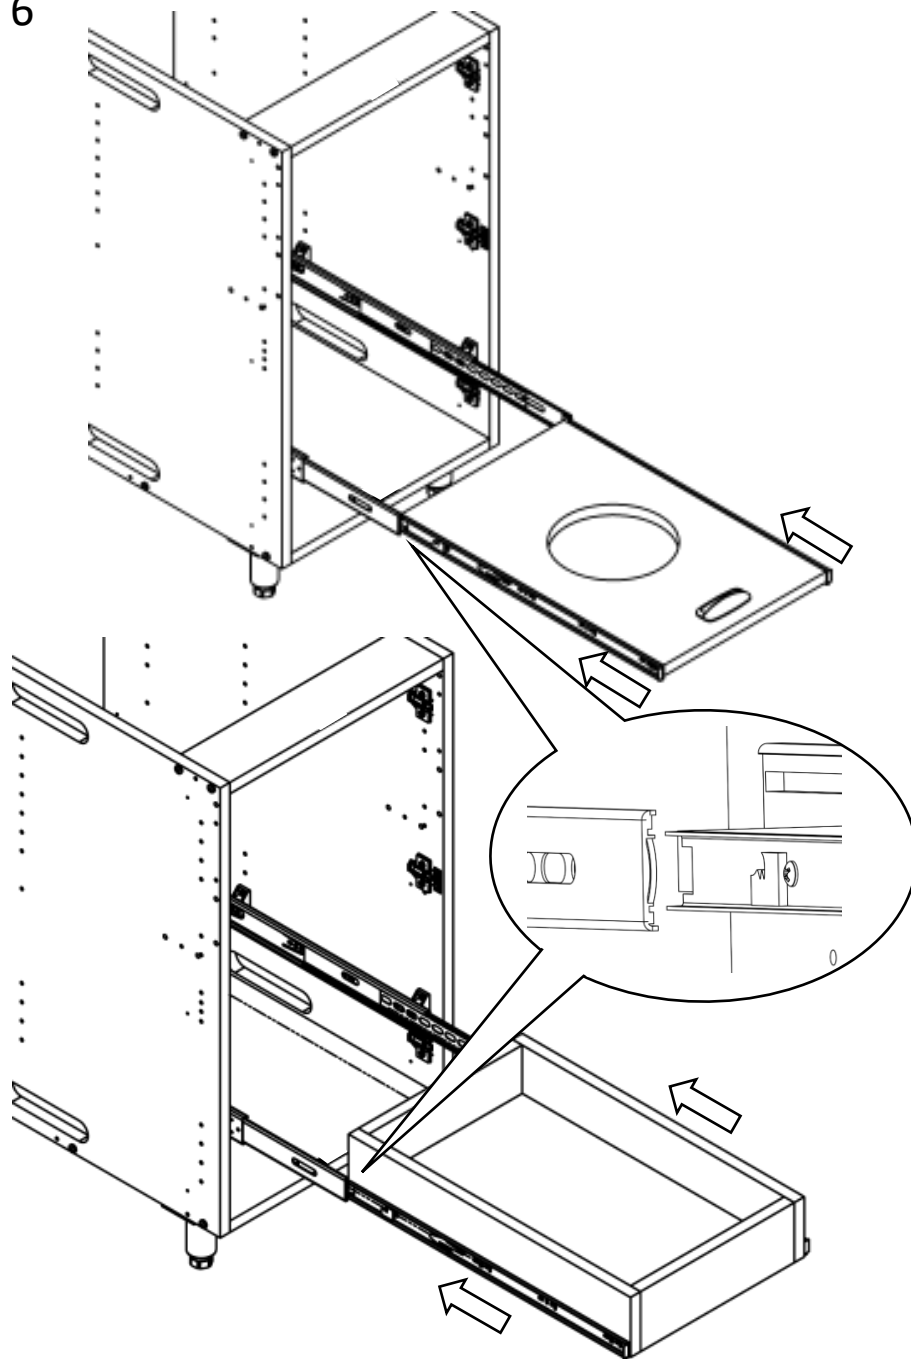

Carefully slide the propane pull-out or roll-out tray into the larger runner members by inserting the smaller runner members into the plastic guides at the front of the larger members. You should hear a 'click' when fully inserted.


STEP 7

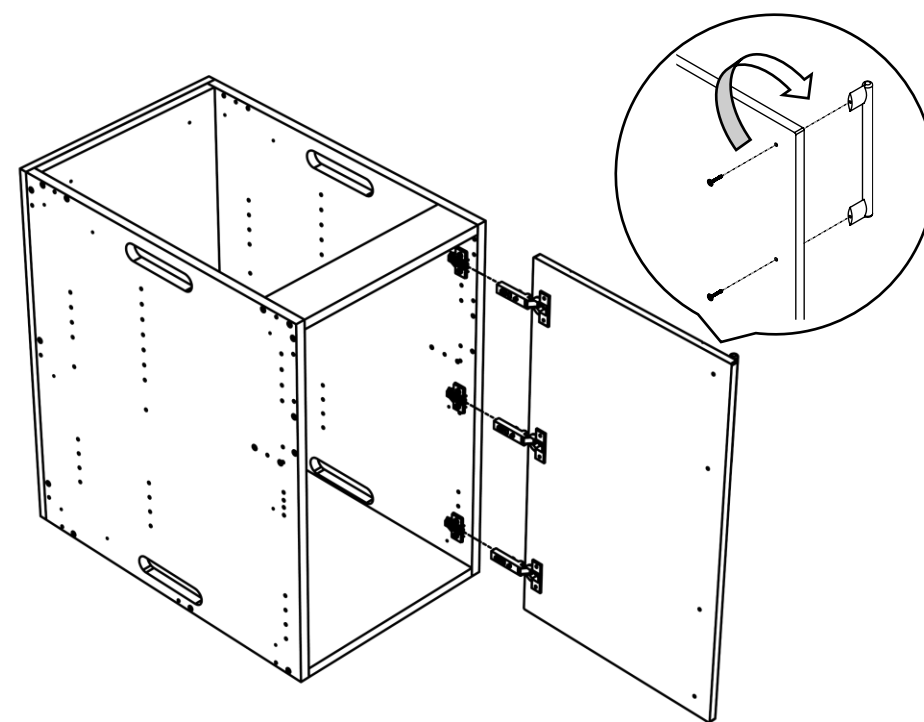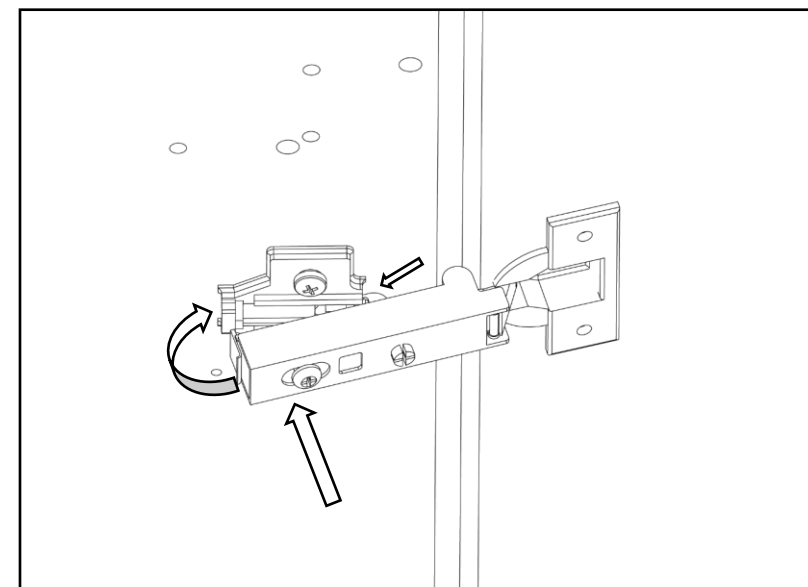

Reattach all doors by locating the small "hooks" on the underside of the Soft-Close Hinge and hook them under the front of the Hinge Plate, then press the back of the hinge towards the plate until it "clicks" into place. Repeat for the remaining hinges.

STEP 8


REQUIRES
Box Level

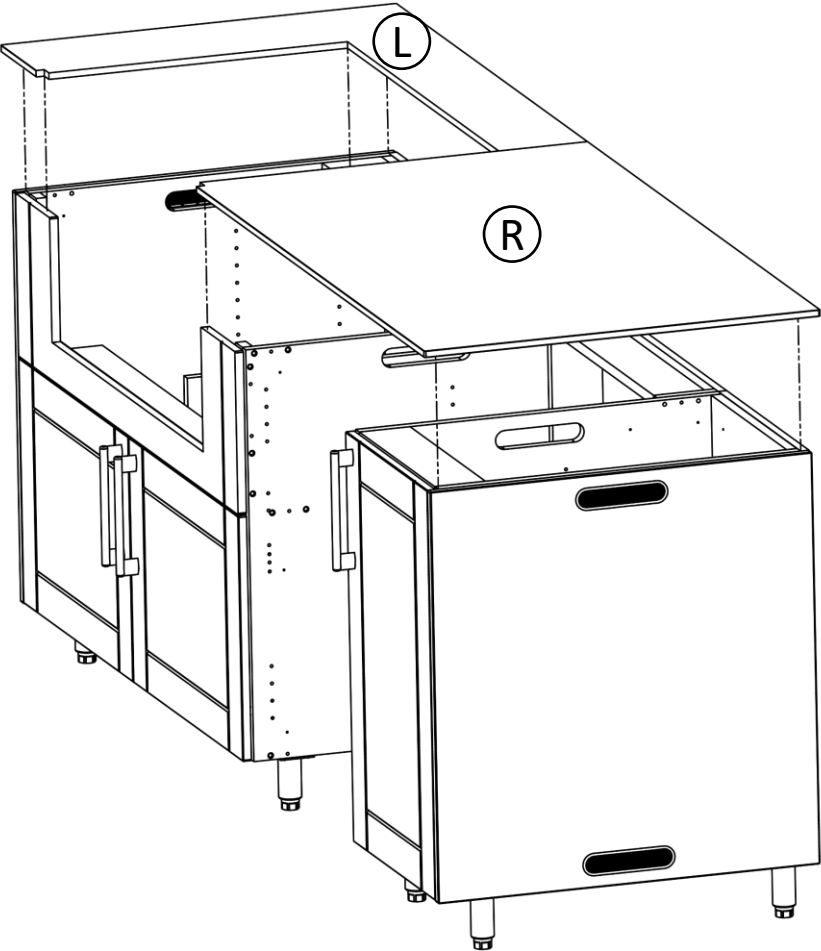

Ensure the top of the island is level before proceeding. Place the countertop components on the island with the letters facing up. Make sure the Grill Liner notches in the countertop are lined up with the apron front cutouts.

STEP 9


REQUIRES
Tape Measure

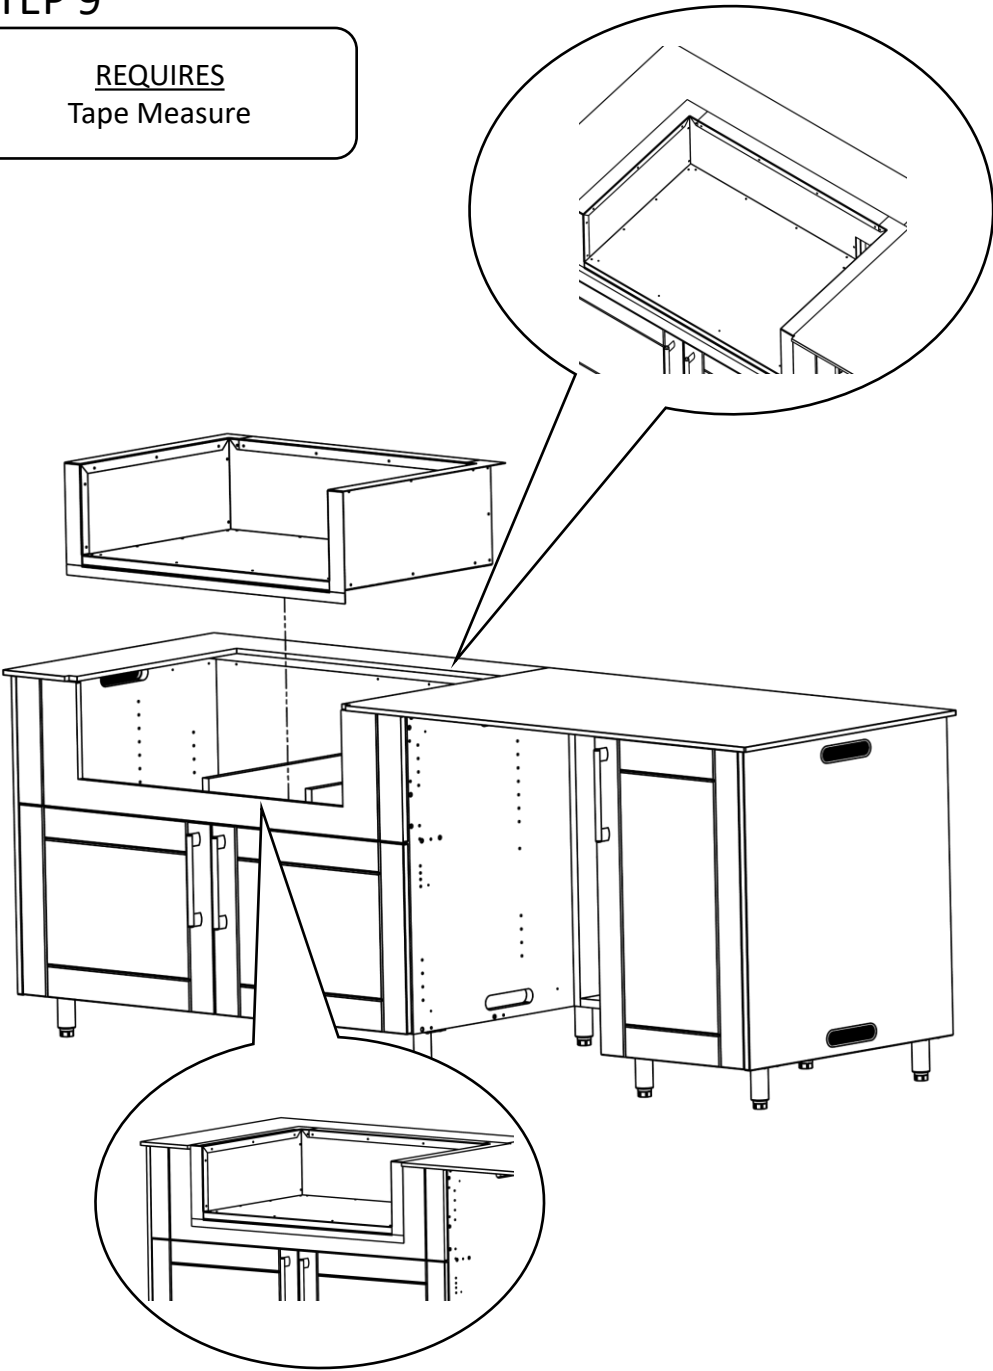

Carefully insert the Grill Liner(s), ensuring the front of the Liner(s) is flush against the cabinet Apron Front. Make sure the countertop components fit tight in the back. Shims may be necessary to properly align the tops. The back edge and both ends should overhang approximately 5/8"

STEP 10


REQUIRES
Pencil

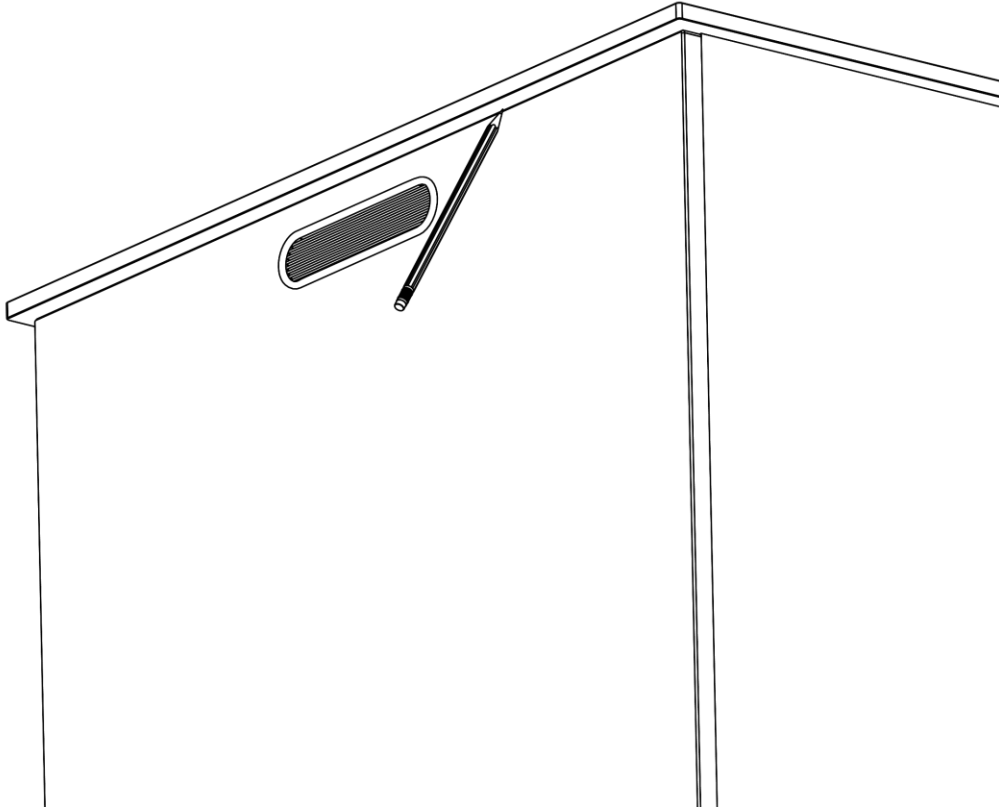

Once the countertop and Grill Liners are positioned correctly, use a pencil to mark the underside of the countertop.

STEP 11


REQUIRES
Adhesive

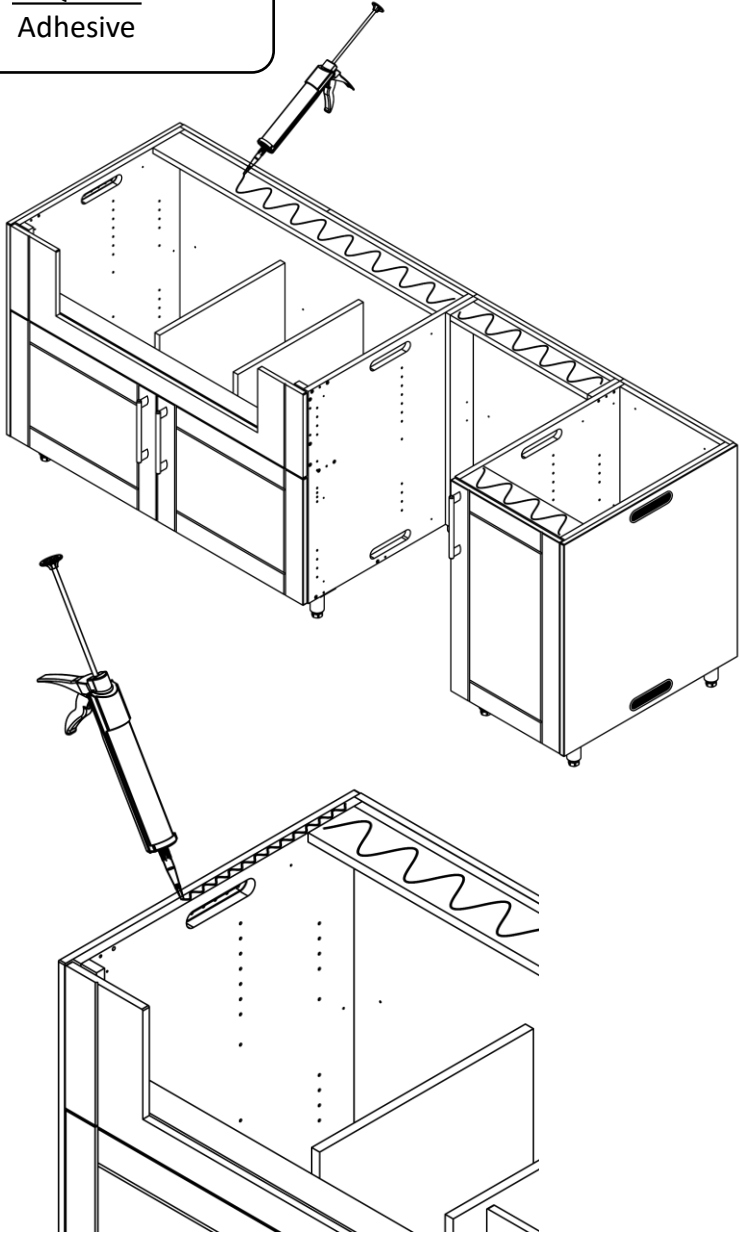

Remove Grill Liner and the countertop components and set them aside. Apply Outdoor Rated Construction Adhesive liberally to the front and back rails and along the top edge of the cabinets, as shown. Ensure all adhesive is applied to the 3/4" All-Weatherboard® not the 5/8" HDPE.

STEP 12


REQUIRES
Box Level

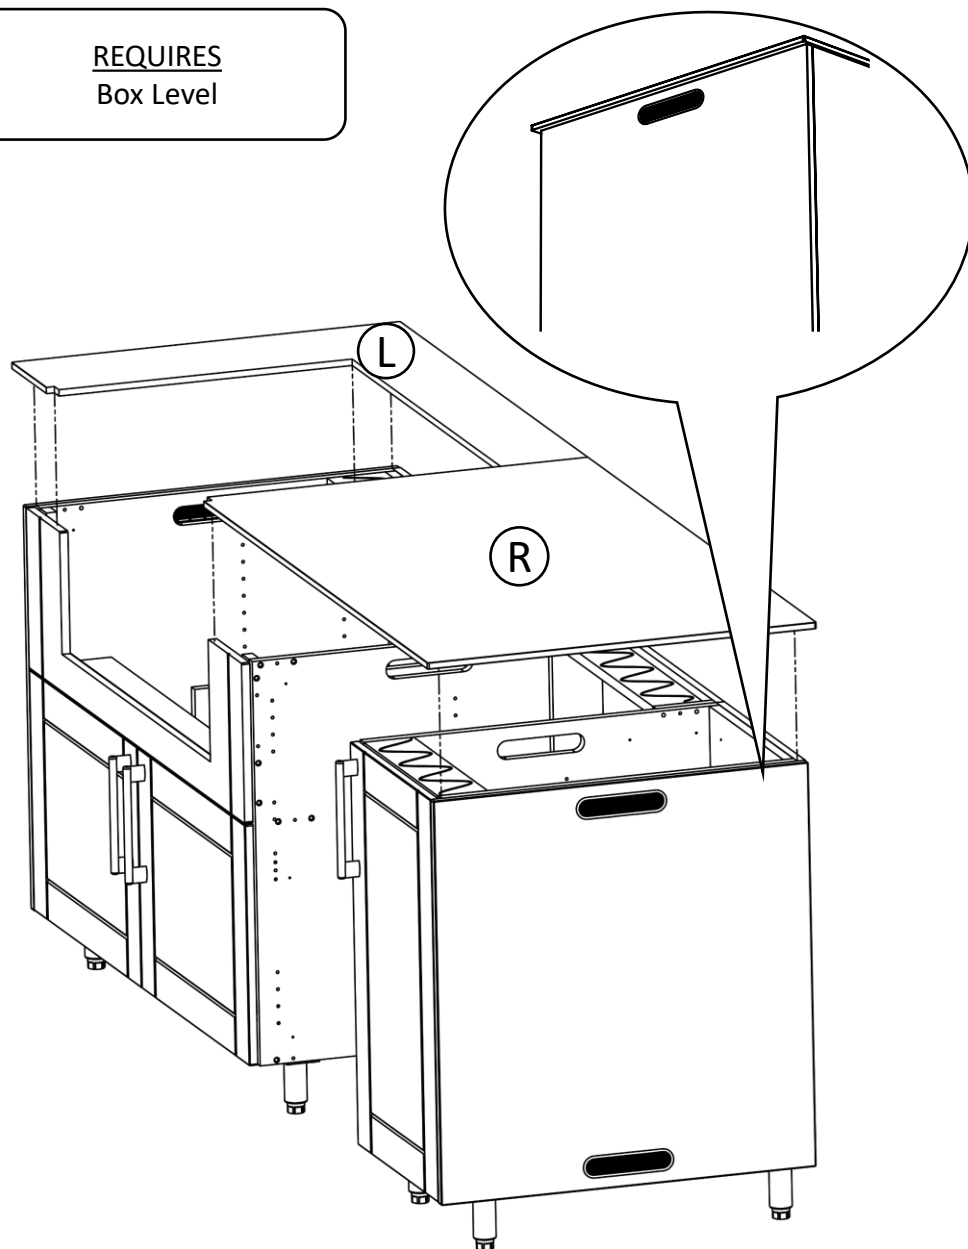

Carefully replace the countertop components using the pencil reference marks made in Step 8. Make sure the countertop pieces fit tightly together and are level; shim if necessary. Use blue painter's tape to hold the pieces together. Allow 24 hours for the adhesive to fully cure before reinstalling the Grill Liner.

STEP 13


IMPORTANT! For the gas and electric hook-up, use a certified professional. If access holes are required for hoses or cables, use standard wood drill bits and hole saws.

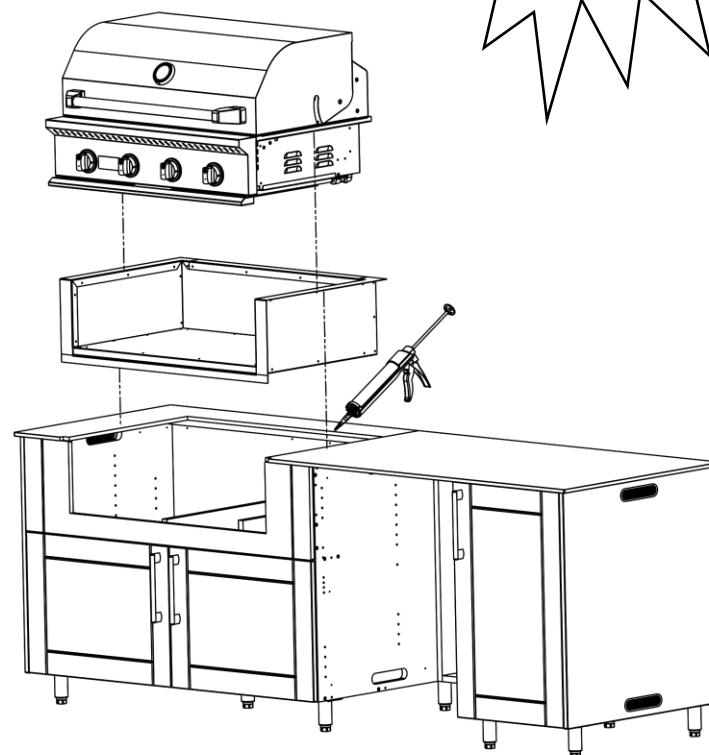

Once the adhesive has fully cured, you can install the Grill Liner. First, run a bead of outdoor rated clear silicone caulk around the countertop cutout and install the Grill Liner. The outdoor rated clear silicon caulk will stop water from entering the cabinet and is flexible enough to cope with the expansion of the Grill Liner when it gets hot. You must also use a bead of outdoor rated clear silicon caulk to seal the grill head into the Grill Liner.




EXCLUSIVE ISLAND COLLECTION

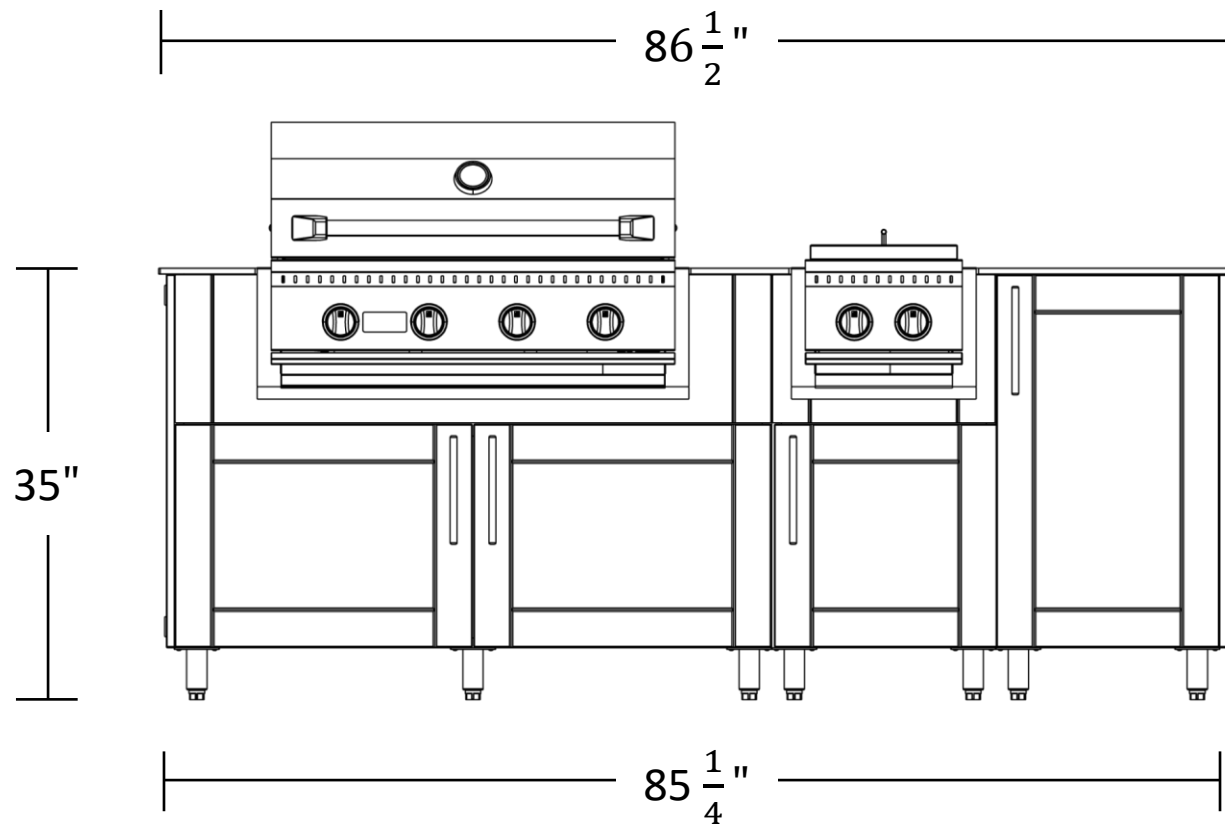


86 Inch Island

—— Island Installation ——

Tools Required

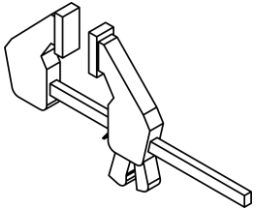

2 x C-Clamps

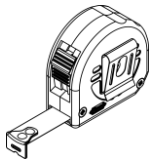


Tape Measure



Electric Drill with Philips
and Square bit

Hardware Included



12 x #8 Screws
(Attachment Screws)



13 x Legs

—— Countertop Installation ——


Tools Required




Box Level




Pencil

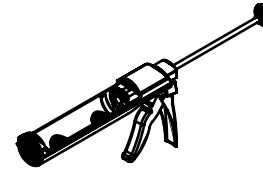

Caulking Gun

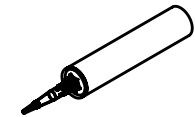


Outdoor Rated Adhesive

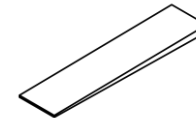


Shims

CAUTION: Safety glasses and gloves recommended


— Island Components —

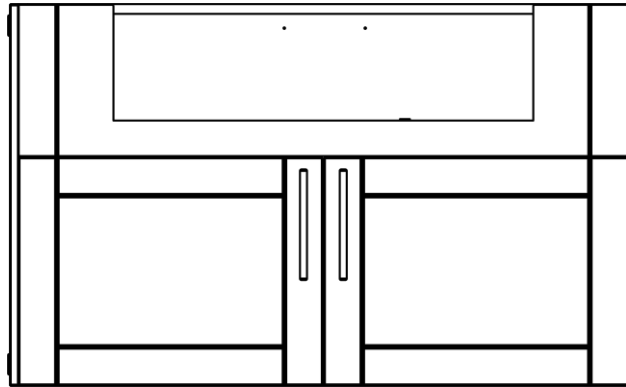

48" Grill Base

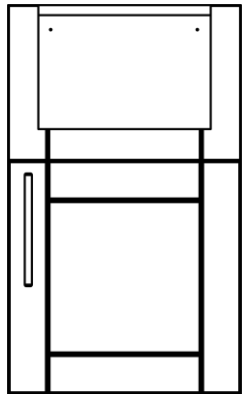


18" Side Burner Base

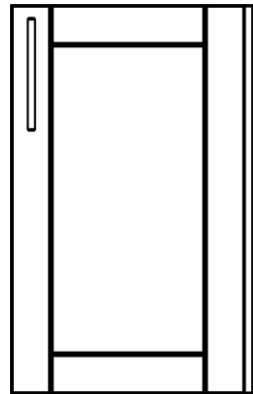


18" Base Propane Pull-out or Roll-out Tray

— Countertop Components —


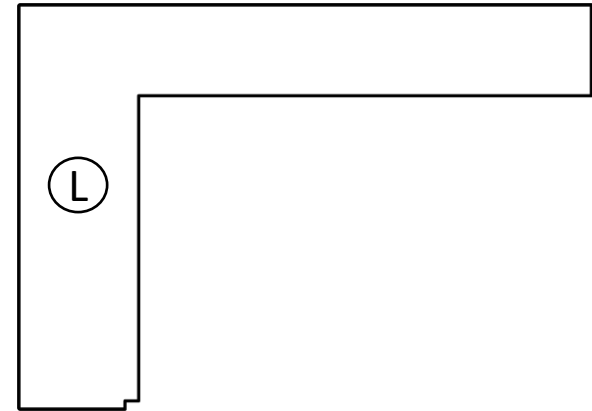


Left Counter Segment

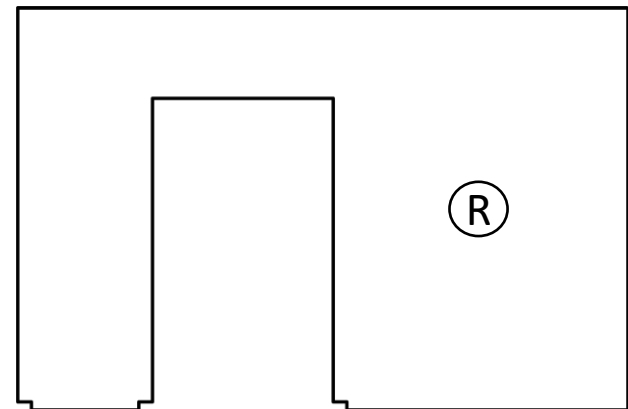


Right Counter Segment

STEP 1

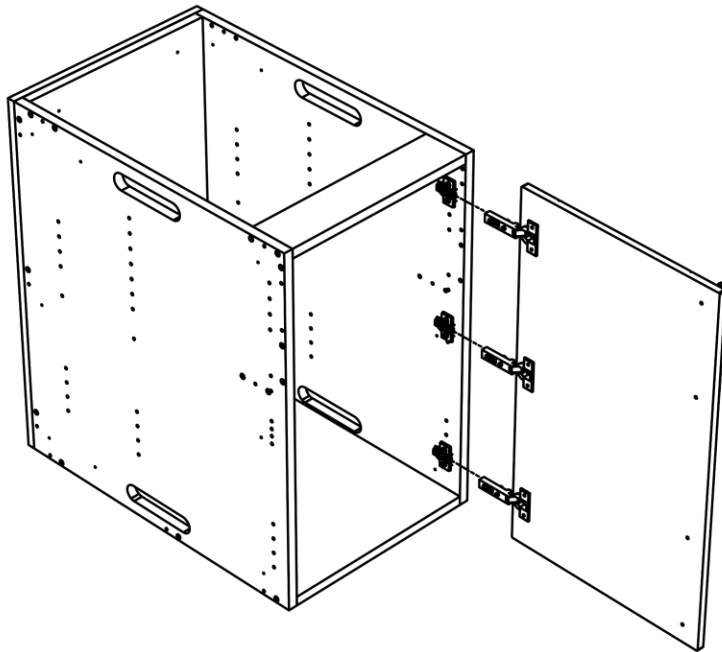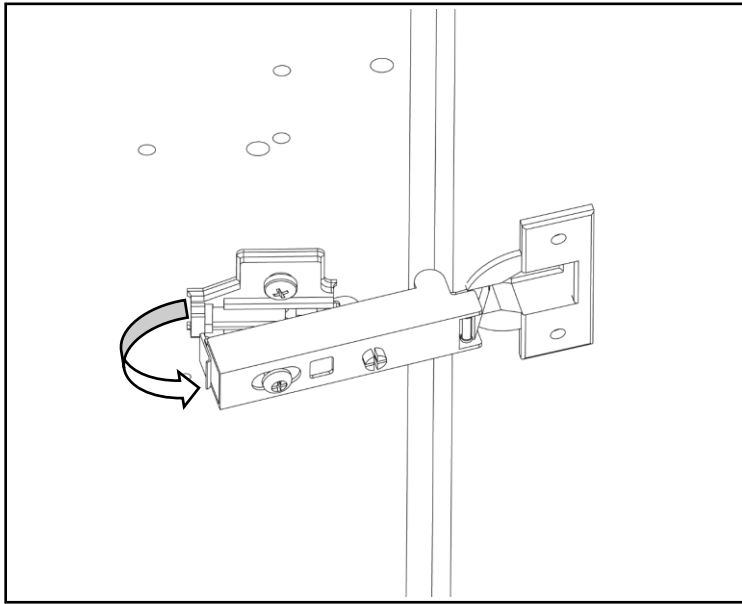

Find the latch on the back of each hinge and pull it towards you to disconnect each Soft-Close Hinge from its Hinge Plate. Once you have disconnected each Soft-Close Hinge, carefully remove the door and place it to the side, laying it on a protected surface to avoid any unnecessary damage. Repeat for all doors.


STEP 2

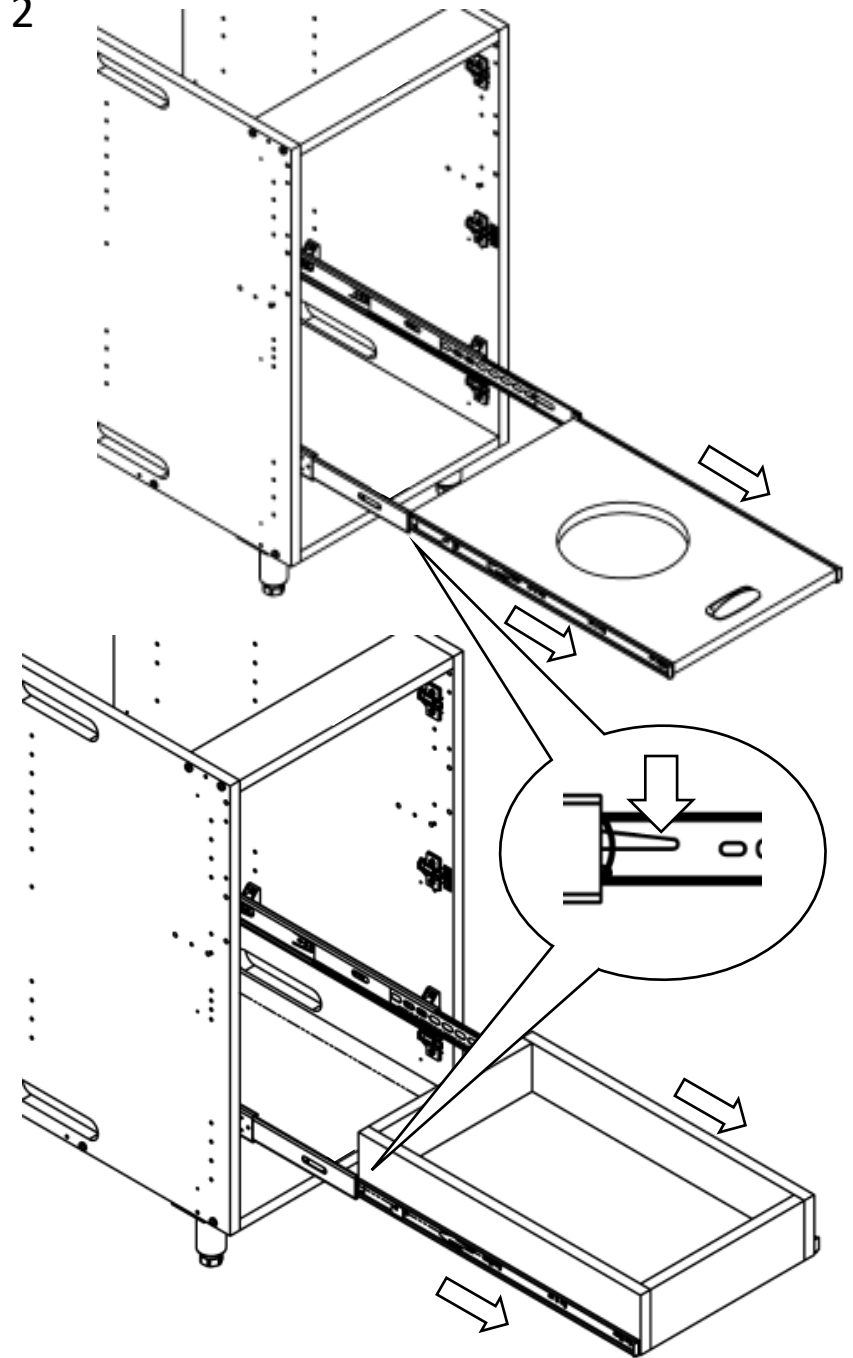

Carefully remove the propane pull-out or roll-out tray by pressing down on the white tab pull runner member and pulling apart from larger runner member.

STEP 3


REQUIRES
4 Legs per Cabinet

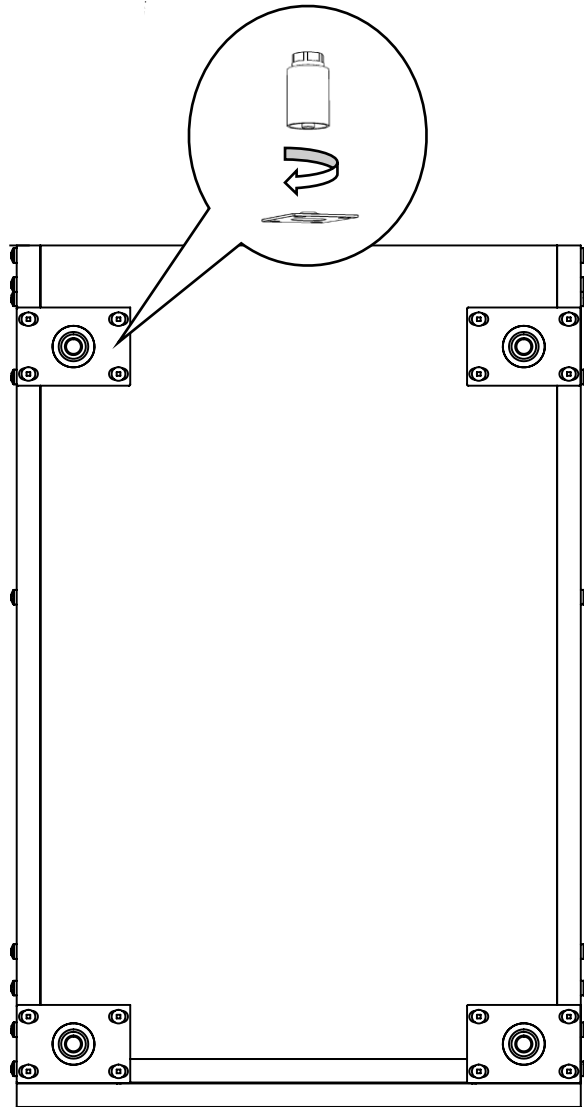

Carefully lay the cabinet on its back. Then, screw on the 4 adjustable legs. Repeat for each 18" Bases and 18" Side Burner Base.

STEP 4

REQUIRES
5 Legs


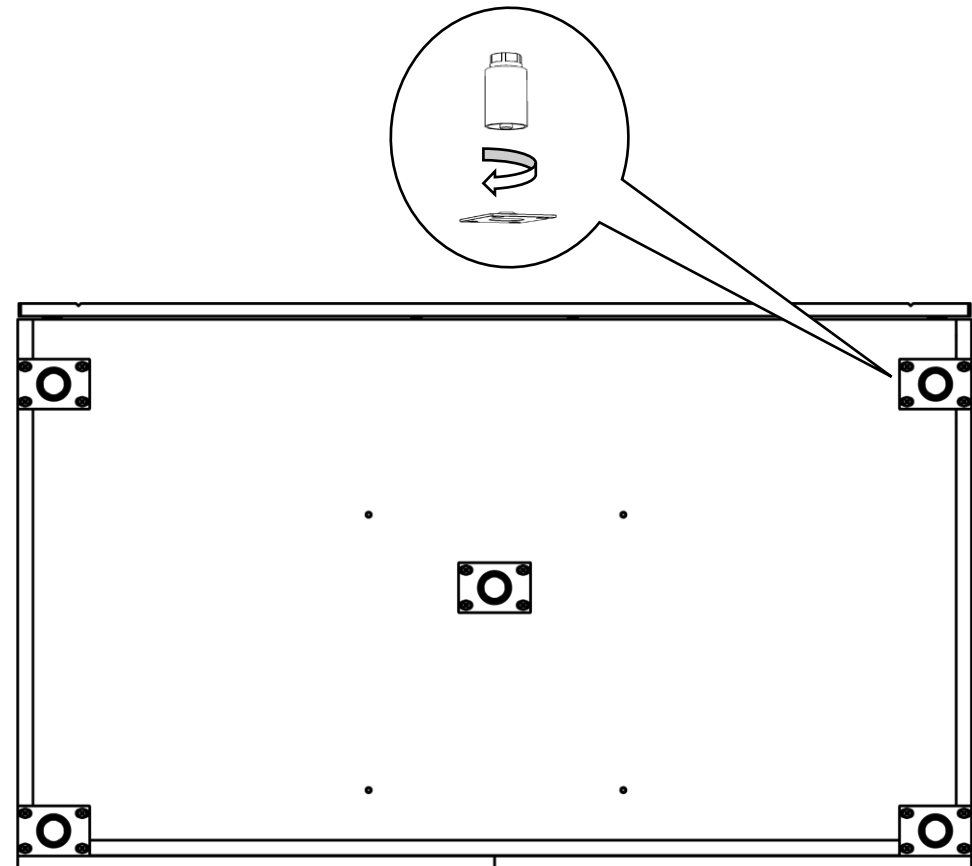


Carefully lay the 48" Grill Base on its back. Then, screw on the 5 adjustable legs.
Pro Tip: Make sure the adjustable end of each leg is loose before standing the cabinet upright. This will make leveling the cabinets easier.

STEP 5

REQUIRES

2x C-Clamps, Drill, & Box Level
6 x Attachment Screws

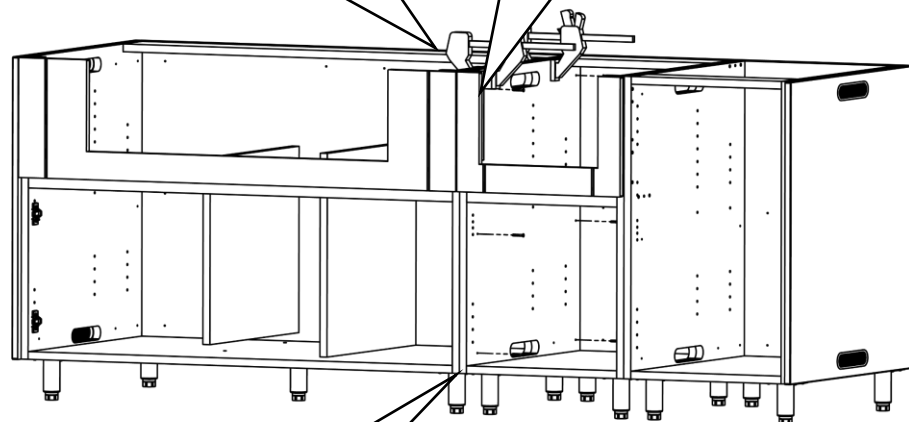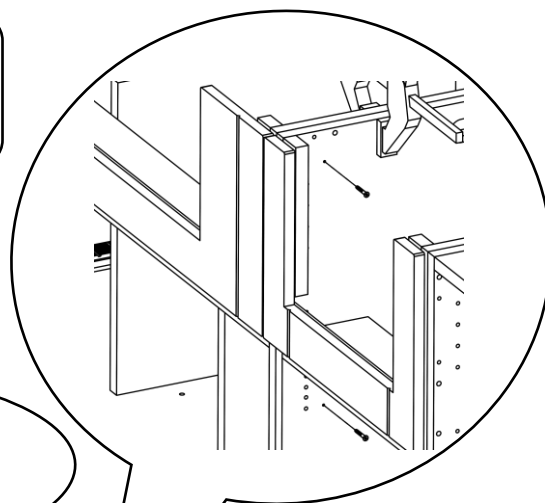



Flush
Front &
Top Edges

Align the attachment screw holes of the left side of the 18" Side Burner Base cabinet to the right side of the 48" Grill Base cabinet. Then, temporarily hold each cabinet together using C-clamps. Lastly, use the 6 attachment screws to connect each cabinet together.

STEP 6

REQUIRES


2x C-Clamps, Drill, & Box Level
6 x Attachment Screws

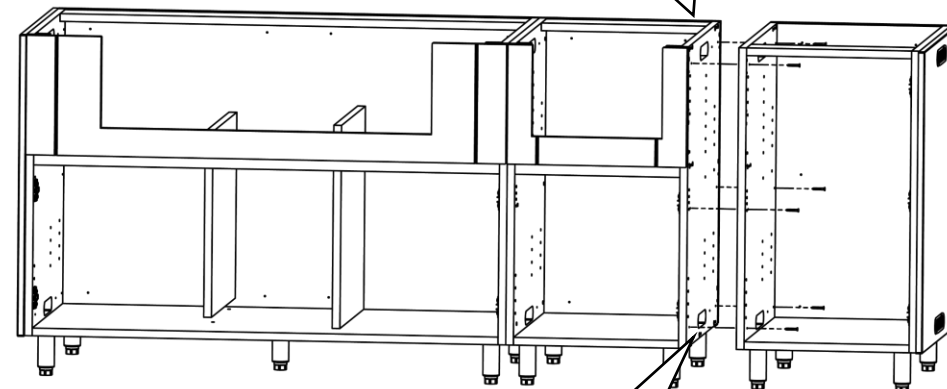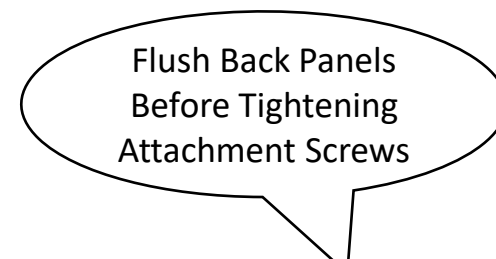

Flush
Front &
Top Edges


Align the attachment screw holes of the right side of the 18" Side Burner Base cabinet to the left side of the 18" Base cabinet. Then, temporarily hold each cabinet together using C-clamps. Lastly, use the 6 attachment screws to connect each cabinet together.

STEP 7

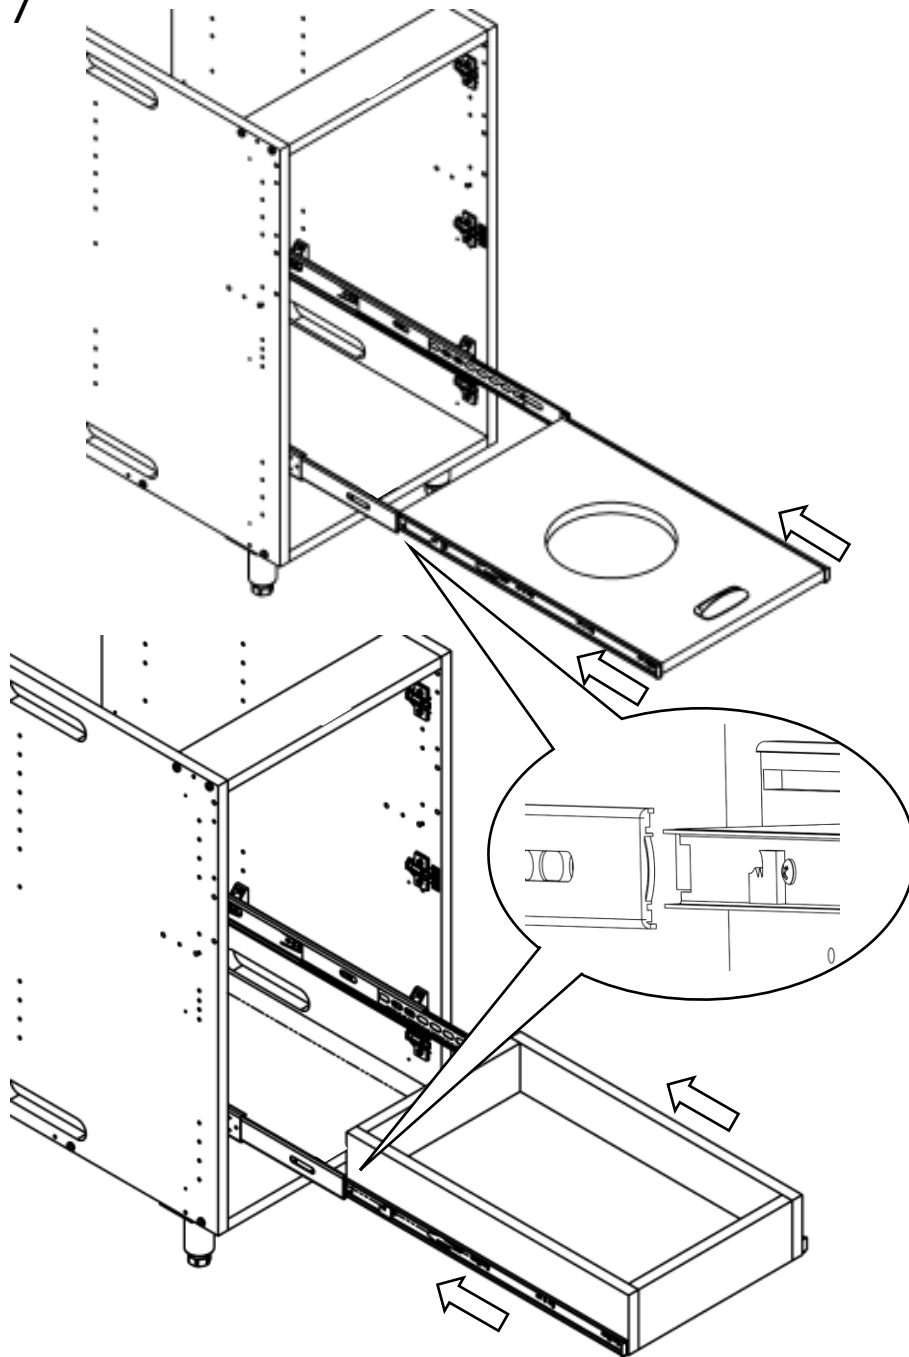

Carefully slide the propane pull-out or roll-out tray into the larger runner members by inserting the smaller runner members into the plastic guides at the front of the larger members. You should hear a 'click' when fully inserted.


STEP 8

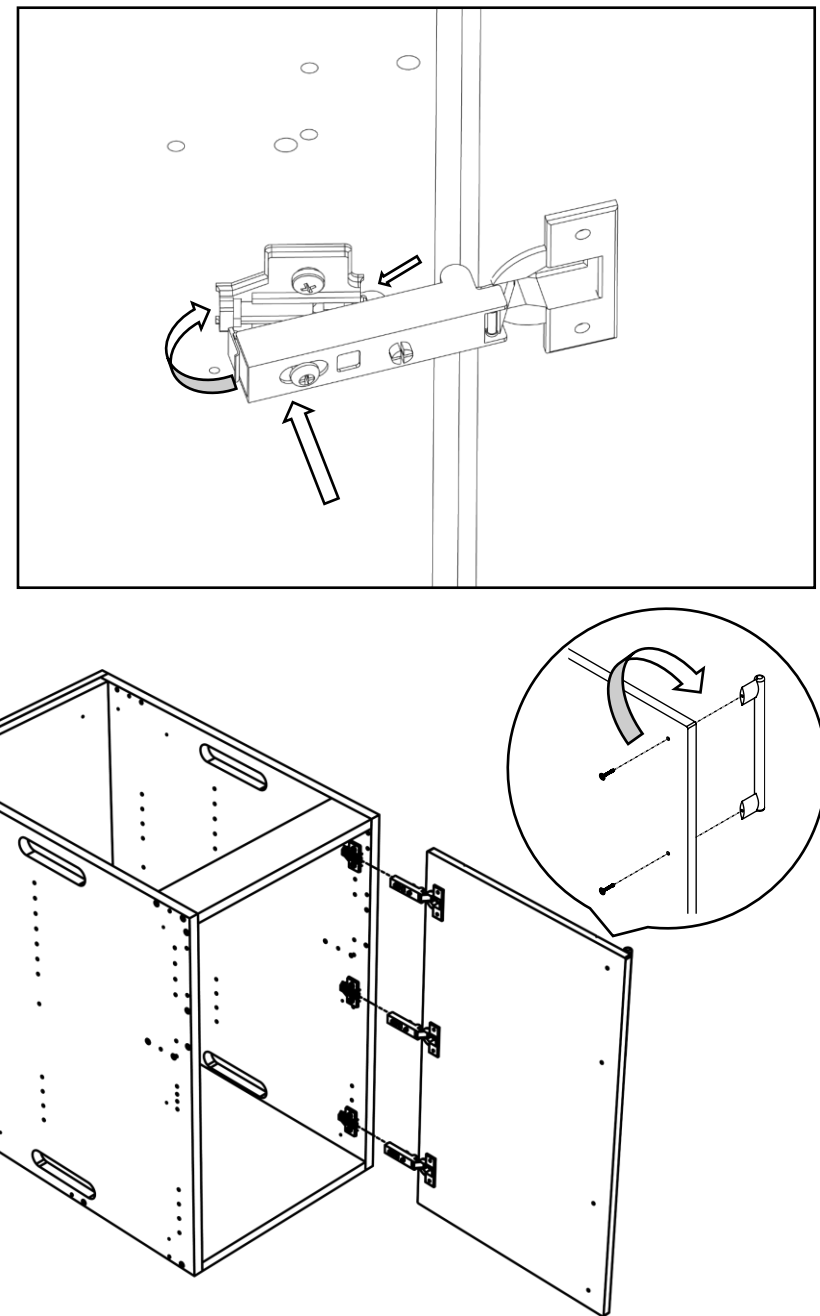

Reattach all doors by locating the small "hooks" on the underside of the Soft-Close Hinge and hook them under the front of the Hinge Plate, then press the back of the hinge towards the plate until it "clicks" into place. Repeat for the remaining hinges.

STEP 9


REQUIRES
Box Level

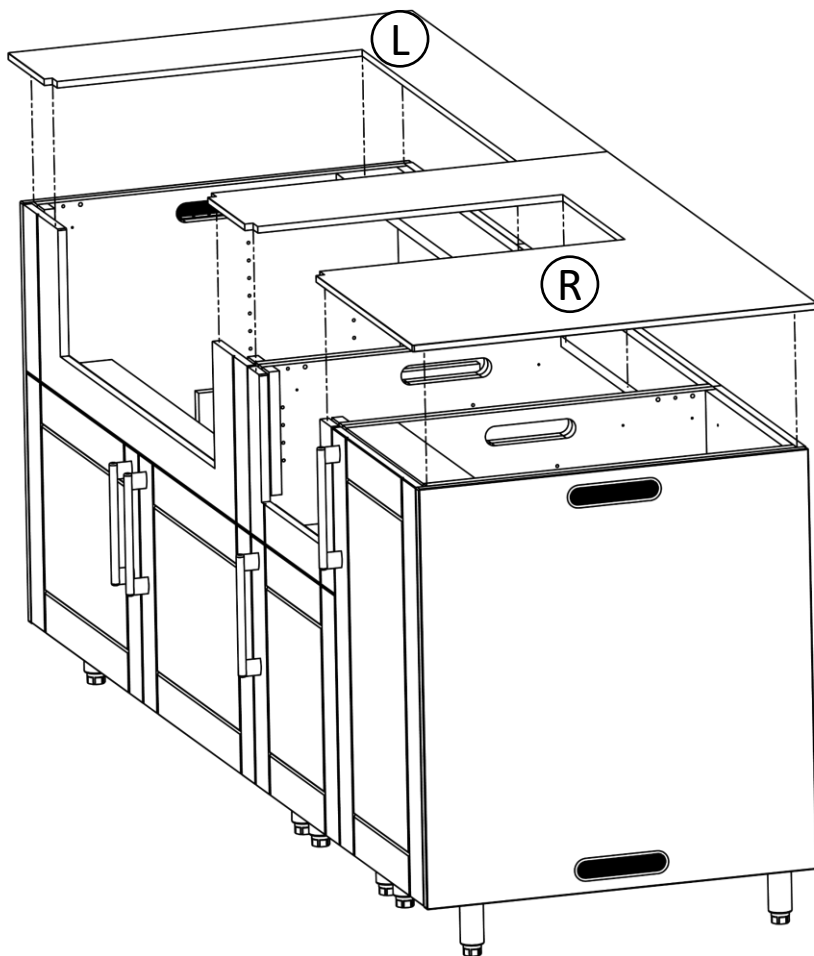

Ensure the top of the island is level before proceeding. Place the countertop components on the island with the letters facing up. Make sure the Grill Liner notches in the countertop are lined up with the apron front cutouts.

STEP 10


REQUIRES
Tape Measure

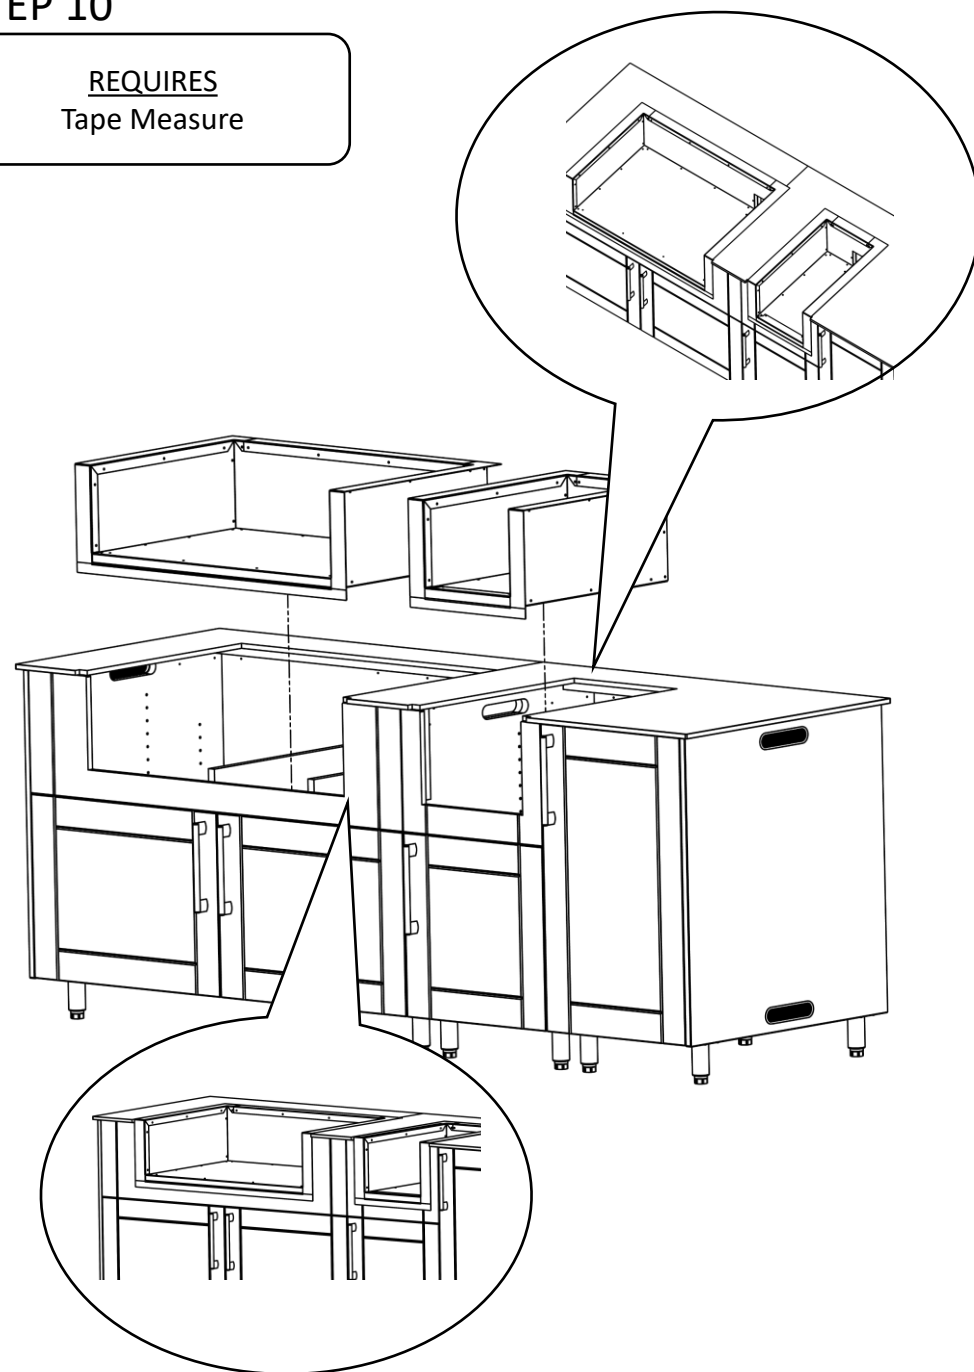

Carefully insert the Grill Liner(s), ensuring the front of the Liner(s) is flush against the cabinet Apron Front. Make sure the countertop components fit tight in the back. Shims may be necessary to properly align the tops. The back edge and both ends should overhang approximately 5/8"

STEP 11


REQUIRES
Pencil

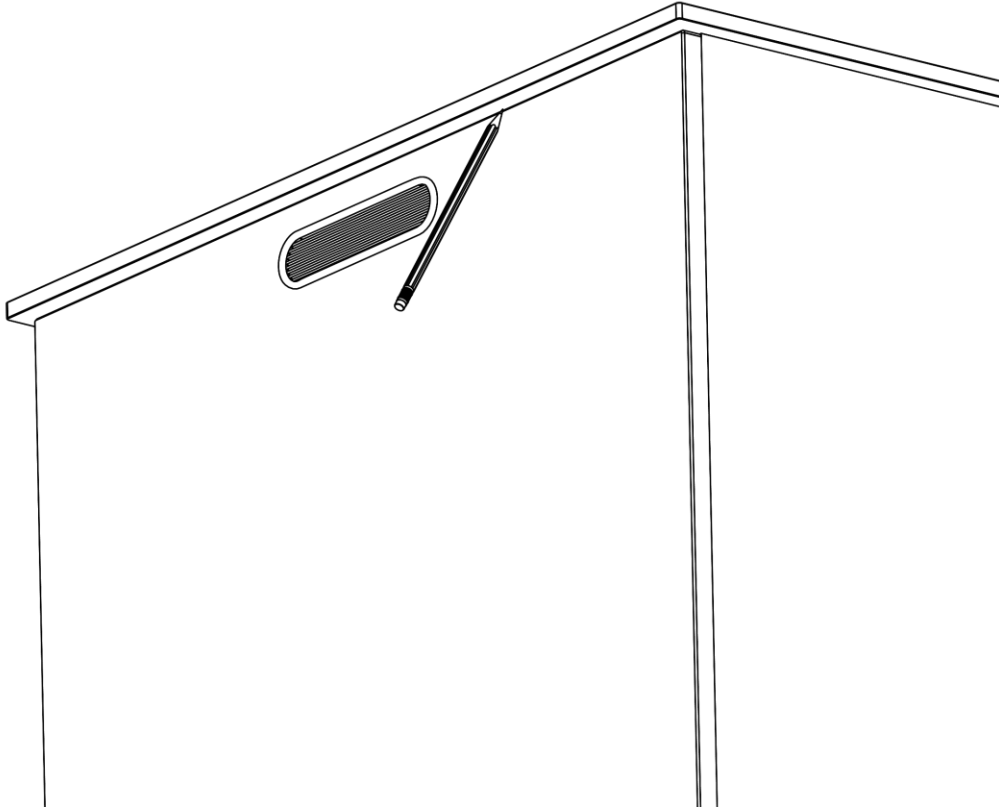

Once the countertop and Grill Liners are positioned correctly, use a pencil to mark the underside of the countertop.

STEP 12


REQUIRES
Adhesive

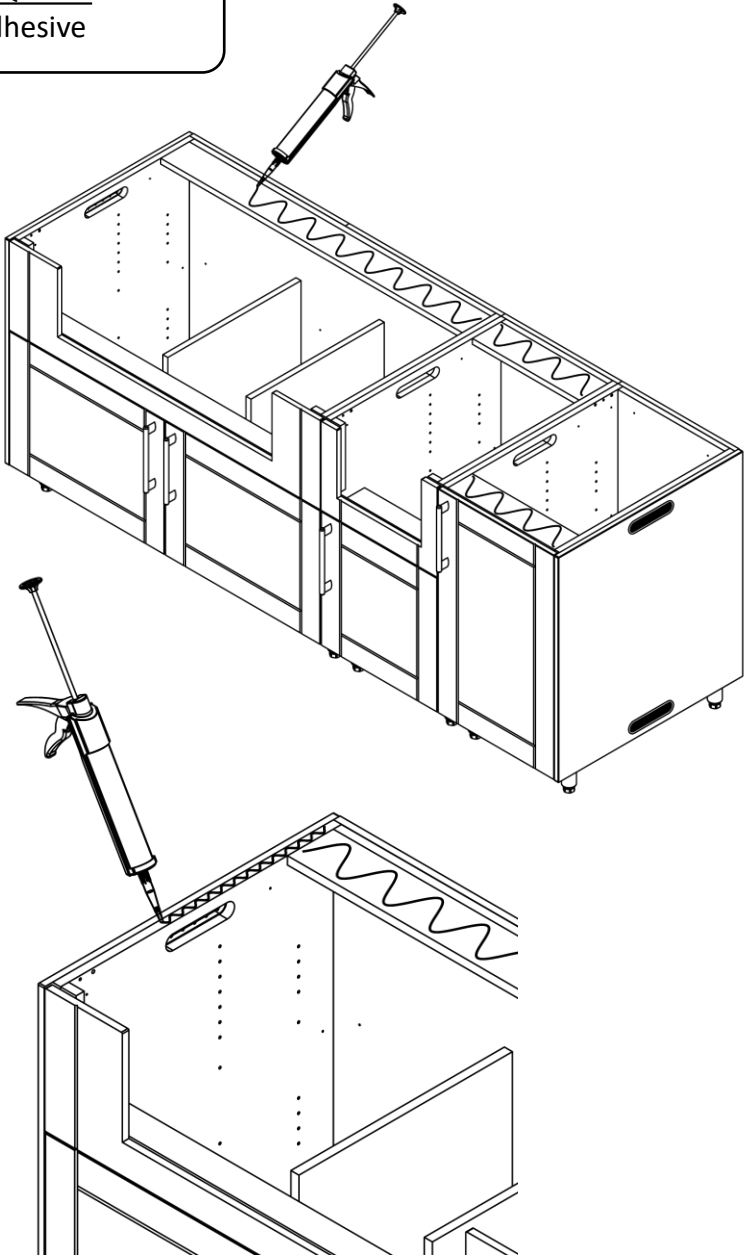

Remove Grill Liner and the countertop components and set them aside. Apply Outdoor Rated Construction Adhesive liberally to the front and back rails and along the top edge of the cabinets, as shown. Ensure all adhesive is applied to the 3/4" All-Weatherboard® not the 5/8" HDPE.

STEP 13


REQUIRES
Box Level

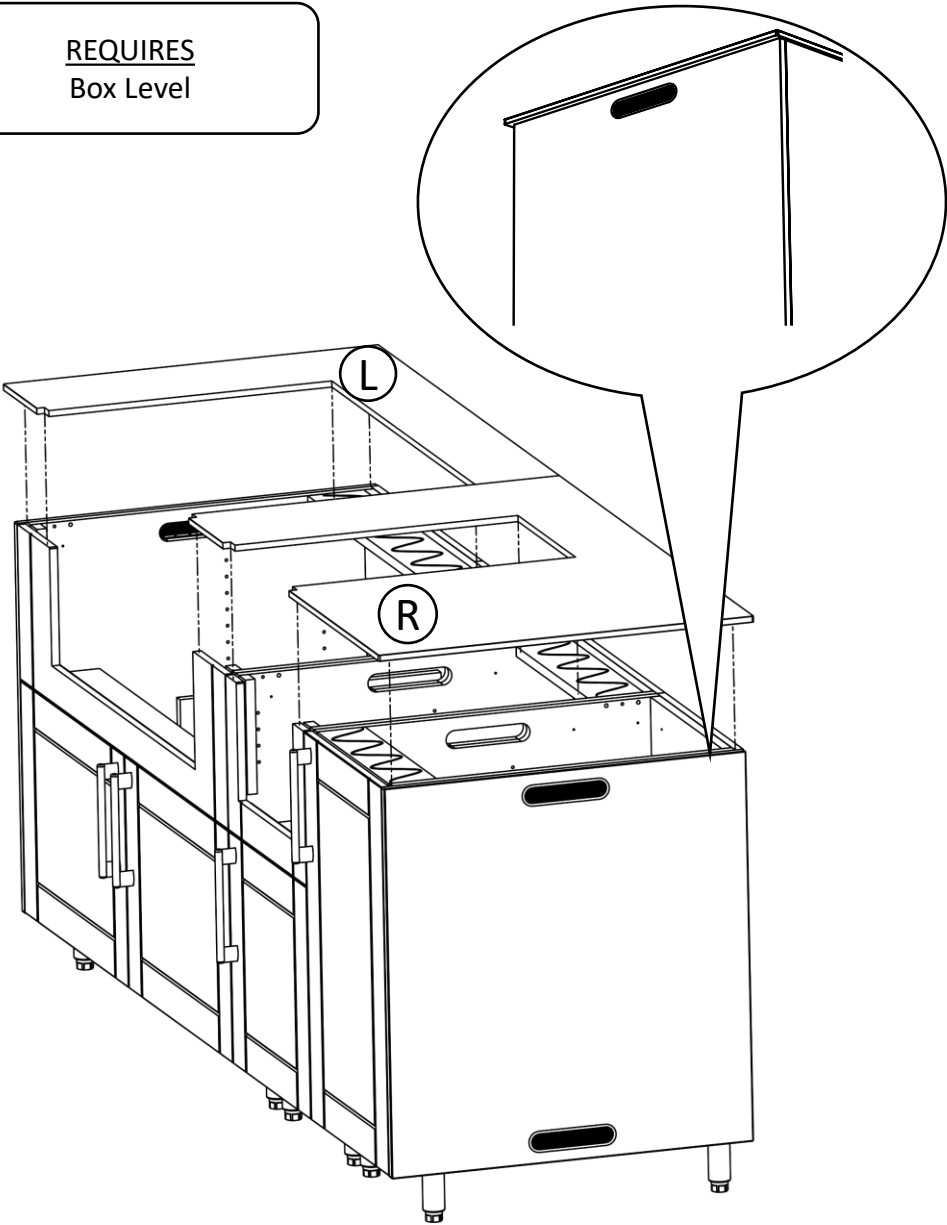

Carefully replace the countertop components using the pencil reference marks made in Step 9. Make sure the countertop pieces fit tightly together and are level; shim if necessary. Use blue painter's tape to hold the pieces together. Allow 24 hours for the adhesive to fully cure before reinstalling the Grill Liner.

STEP 14

IMPORTANT! For the gas and electric hook-up, use a certified professional. If access holes are required for hoses or cables, use standard wood drill bits and hole saws.

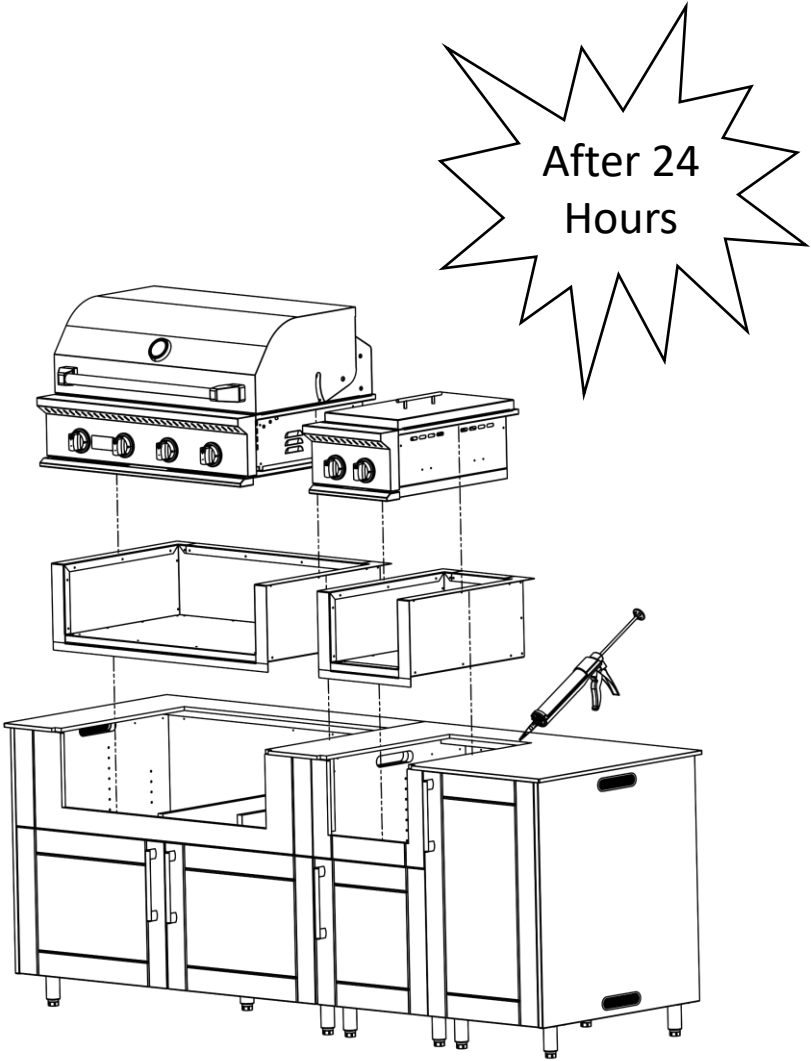

Once the adhesive has fully cured, you can install the Grill Liner. First, run a bead of outdoor rated clear silicone caulk around the countertop cutout and install the Grill Liner. The outdoor rated clear silicon caulk will stop water from entering the cabinet and is flexible enough to cope with the expansion of the Grill Liner when it gets hot. You must also use a bead of outdoor rated clear silicon caulk to seal the grill head into the Grill Liner.

Care and Adjustment Guide

AFTER INSTALLATION CARE

After your cabinets have been installed, wipe down all surfaces with a damp cloth to remove dust. A soft cloth or sponge with mild dishwashing liquid can be used if needed.

EVERYDAY CARE

Salt Water Environments: Oceanfront environments with salt air and sea spray will require regular maintenance and cleaning to prevent rust from forming on the handles, hinges, legs, and drawer runners. Clean stainless steel surfaces several times a month to keep the chemical reaction from the salt from gaining a foothold on the hardware. With regular cleaning, your cabinets will look like new for many years. To achieve maximum corrosion and stain resistance, the surface of the stainless steel must be kept clean.

NEVER use abrasive cleaners, scouring pads, or powdered cleansers.

HARDWARE CARE

Use mild soap and warm water to clean stainless steel legs and door handles. Thoroughly dry hardware surfaces after cleaning. **DO NOT** use silver or brass polish.

GRILL & SIDE BURNER CABINET

Most gas-fed appliances require an insulated jacket when installed near combustible materials. Please refer to your specific island configuration for requirements.

Door Alignment

Cabinets feature a 6-way adjustable hinge that will allow you to adjust and align all the doors after installation

1. The center screw will adjust the door from side to side
2. The top and bottom screws in the hinge plate will allow adjustment up and down
3. The back screw will adjust the door in and out

