

Cardona Fireplace Mantle FA966400TX--Walnut Assembly Instruction




Southern
ENTERPRISES

For assistance with assembly contact:
Southern Enterprises Inc.


Customer Service 1-800-633-5096

service@seidal.com

www.seidal.com

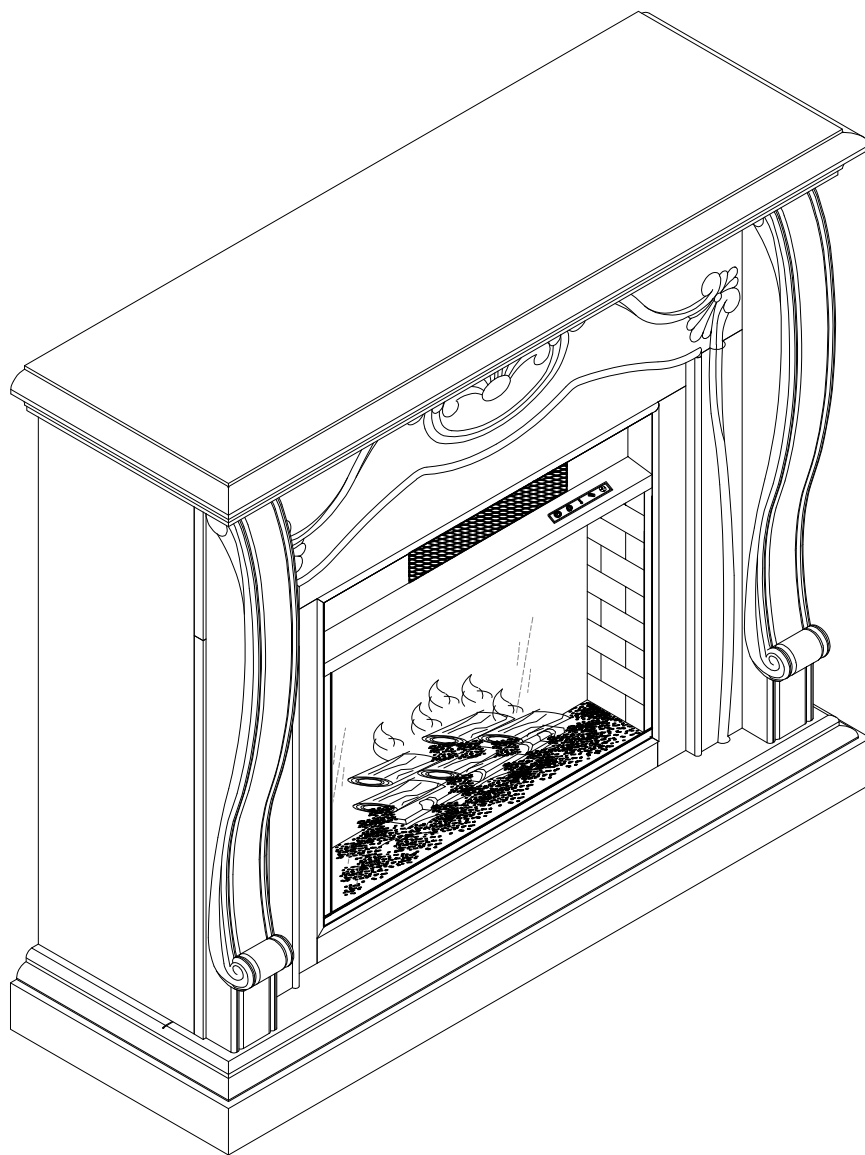

PACKAGE CONTENTS

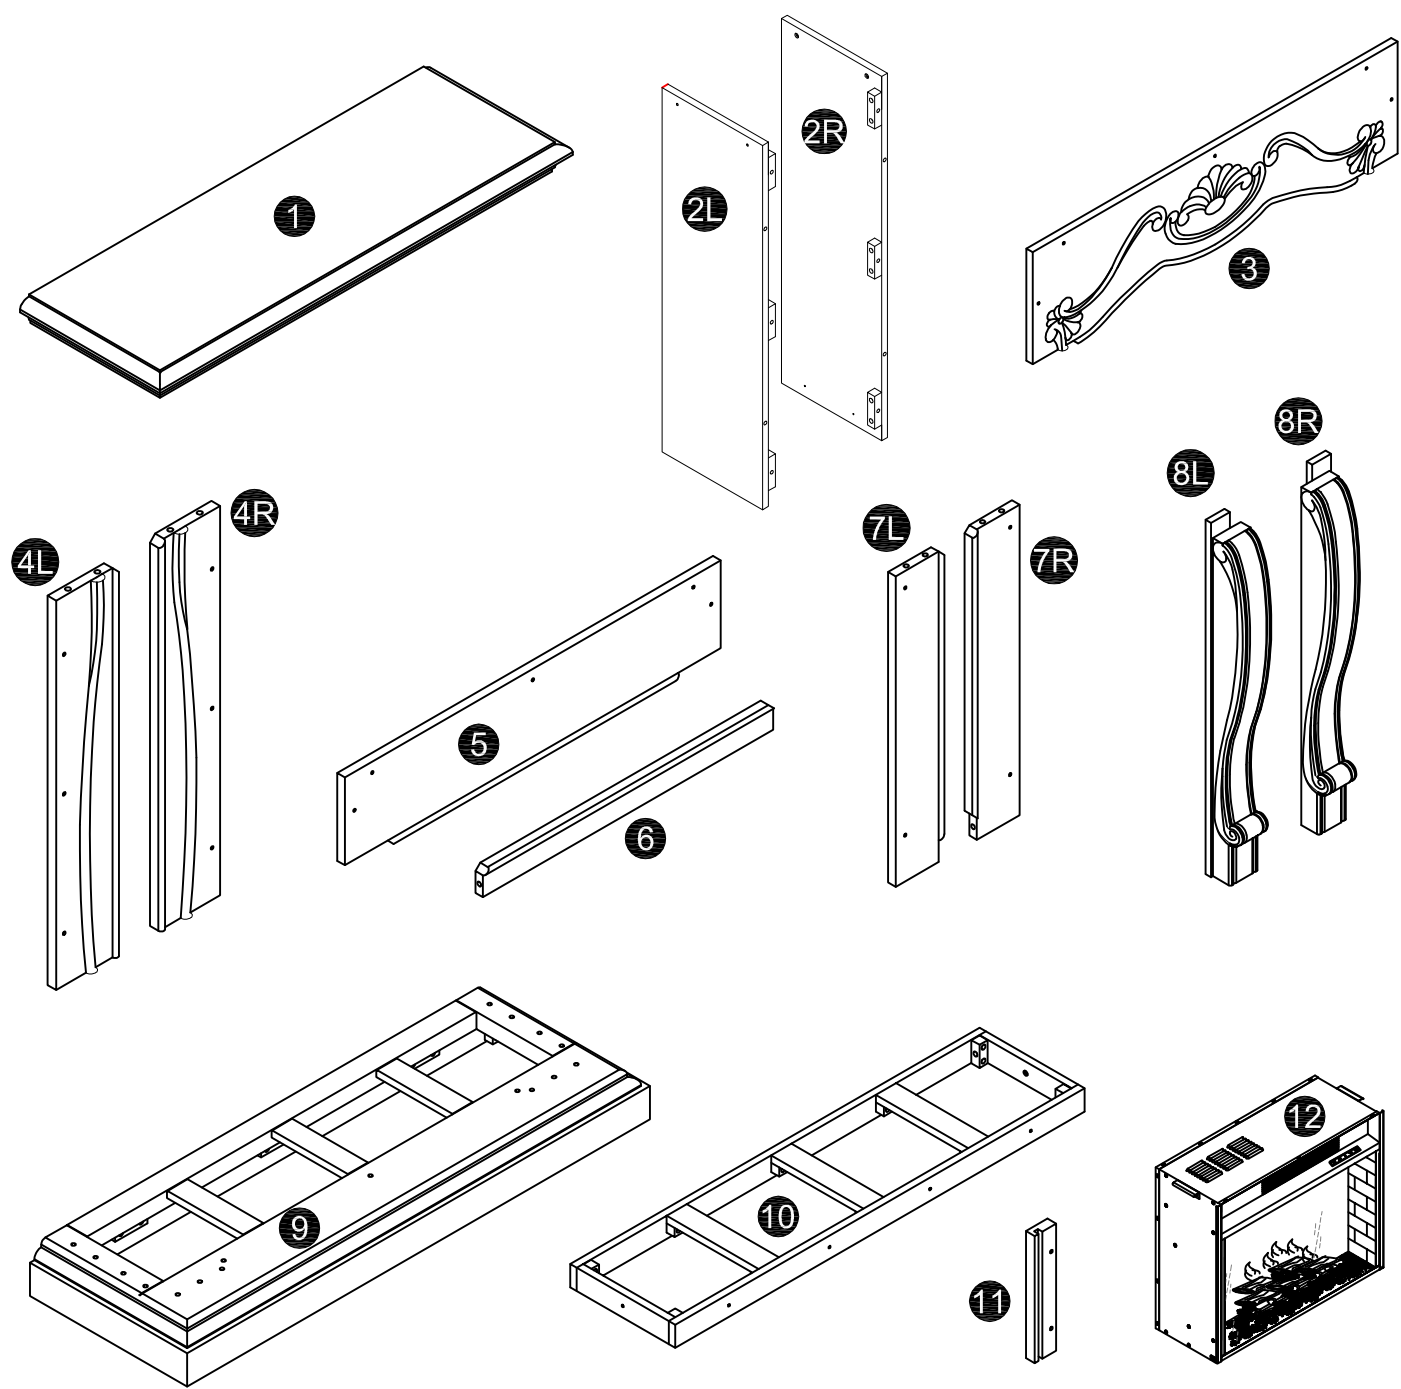


PART	DESCRIPTION	QUANTITY
1	Top Panel	1
2	Side Panel (L/R)	2
3	Upper Front Panel	1
4	Side Front Panel (L/R)	2
5	Upper Block Fire Panel	1
6	Lower Block Fire Panel	1

PART	DESCRIPTION	QUANTITY
7	Side Block Fire Panel (L/R)	2
8	Front Side Upright(L/R)	2
9	Base	1
10	Inside Frame	1
11	Wood Holder	2
12	Firebox (shipped in a separate carton)	1

HARDWARE CONTENTS

A



Cam Bolt
Qty. 6

B




Wood Dowel
Qty. 17

C



Cam Lock
Qty. 6

D



Hexagon Socket Bolt
(Dia.Ø1/4*2"L)
Qty. 8

E




Spring Washer
Qty. 8

F




Flat Washer
Qty. 8

G

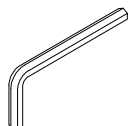


Allen Wrench
Qty. 1

H



Bolt (Dia.Ø1/4*1"L)
Qty. 6

I



Flat Head Screw
Qty. 33

SAFETY INFORMATION

please read this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 800-633-5096 or in Dallas 972-869-0111/ 9am - 4pm Mon-Fri.

WARNIN



- Mantel is heavy and should be assembled near its desired location.
- It is recommended that two people move the finished Mantel to prevent injury.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with the package contents and hardware list above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 60 minutes

Tools Required for Assembly: Allen Wrench (included), Phillips Screwdriver (not included)

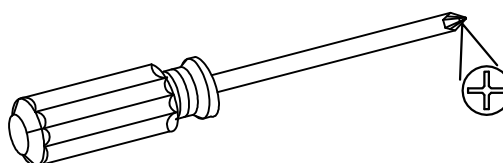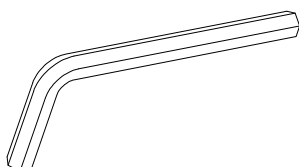



ASSEMBLY INSTRUCTIONS


1. Attach front side upright (8L) to side panel (2L) by inserting wood dowel(B) and bolt (H) into corresponding predrilled holes until front side upright(8L) and side panel(2L) meet.

Tighten bolt(H) with phillips screwdriver

Repeat step with front side uprightl (8R) and side panel(2R) for assembly.

Hardware Used

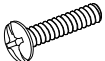

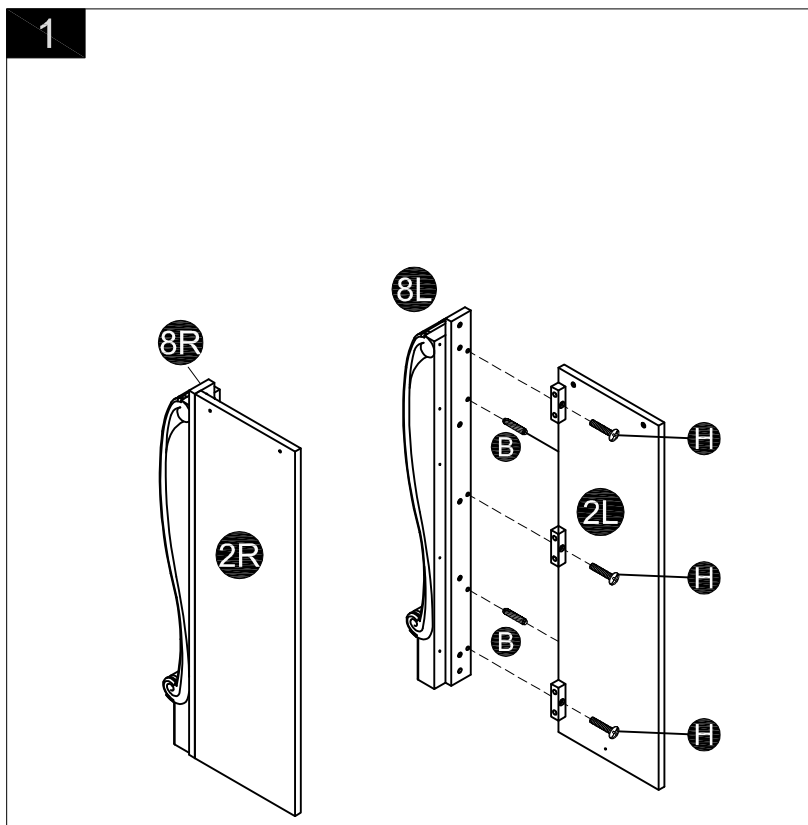


H		Bolt	X 6
B		Wood Dowel	X 4




2. Attach base (9) to preassembled unit from step 1 by inserting wood dowel(B) into corresponding predrilled holes until base (9) and preassembled unit from step 1 meet. insert hexagon socket bolt (D) through spring washer (E) and flat washer (F) to connect base(9) and preassembled unit from step 1.

Tighten(D) with allen wrench(G)

Hardware Used

B		Wood Dowel	X 4
D		Hexagon Socket Bolt	X 6
F		Flat Washer	X 6
E		Spring Washer	X 6
G		Allen Wrench	X 1

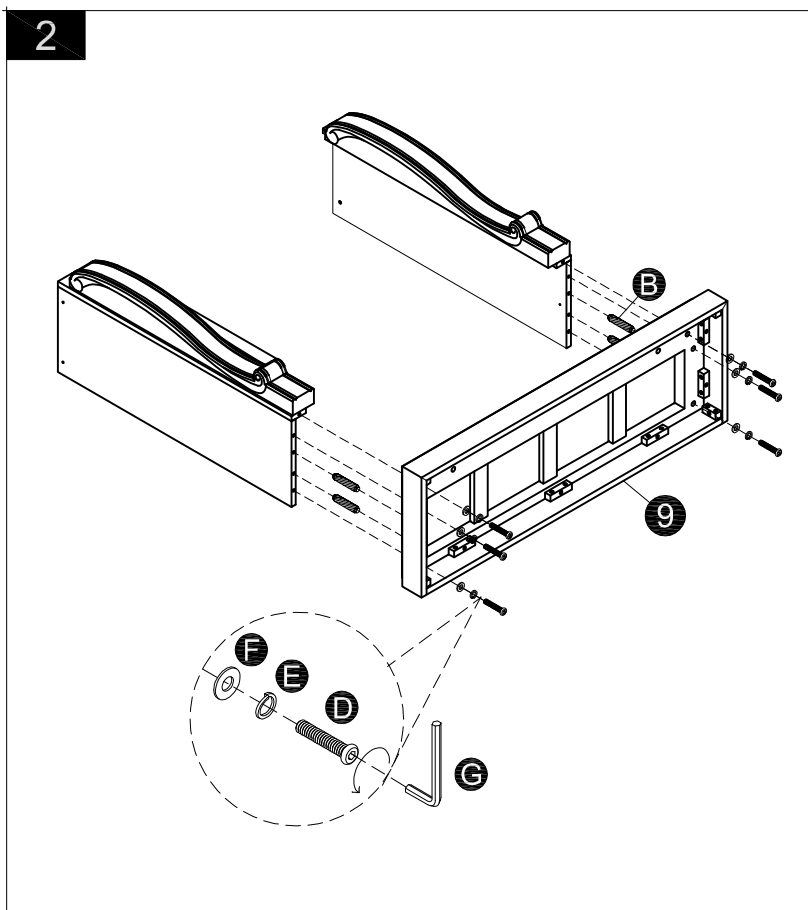





ASSEMBLY INSTRUCTIONS

3. Insert 2pcs cam locks(C) into predrilled holes on side front panels (4L&4R). Screw cam bolt(A) into predrilled holes on upper front panel (3).

Attach upper front panel (3) to side front panels (4L&4R) by inserting wood dowel(B) and cam bolt(A) into corresponding predrilled holes until upper front panel (3) and side front panels(4L&4R) meet. Secure by rotating cam lock (C) clockwise with Phillips screwdriver.

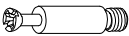Hardware Used


A		Cam Bolt	X 2
B		Wood Dowel	X 2
C		Cam Lock	X 2

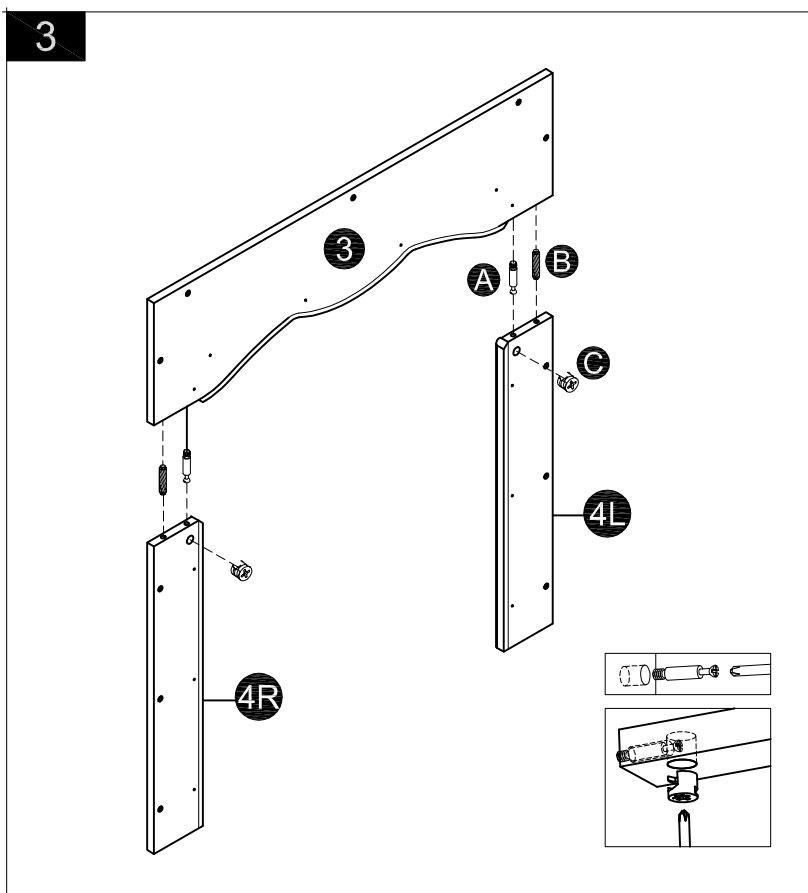

4. Insert wood dowel(B) into predrilled holes on preassembled unit from step 2. Insert preassembled unit from step 3 into grooves on preassembled unit from step 2, as shown in step 4.

Hardware Used


B		Wood Dowel	X 2
----------	---	------------	-----

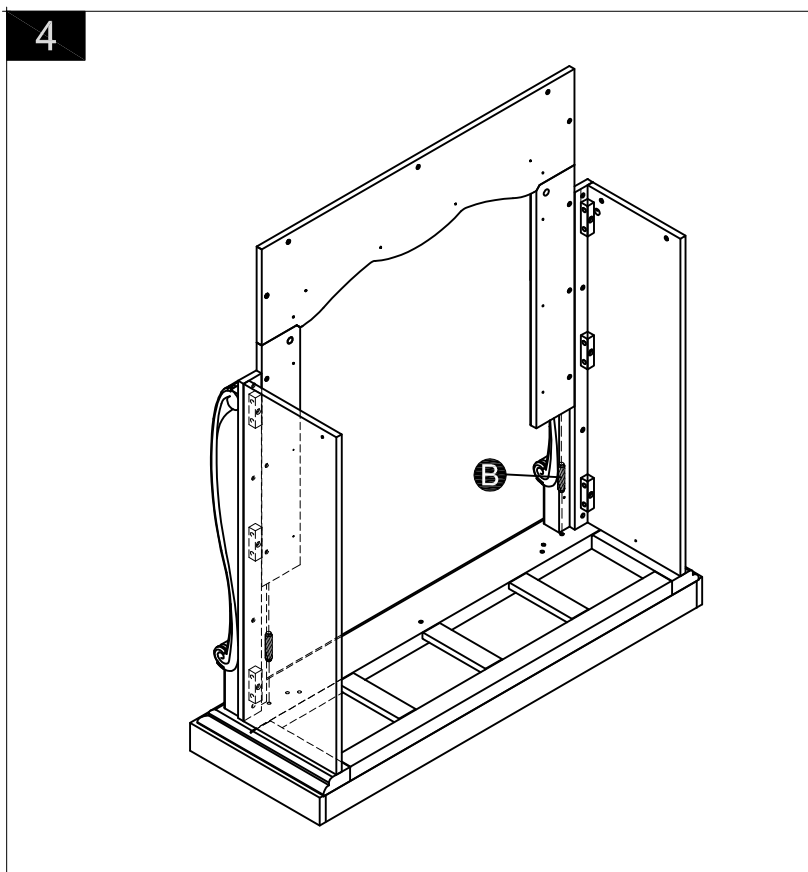

ASSEMBLY INSTRUCTIONS

5. Insert 8pcs flat head screw (I) into predrilled holes and tighten with Phillips screwdriver

5

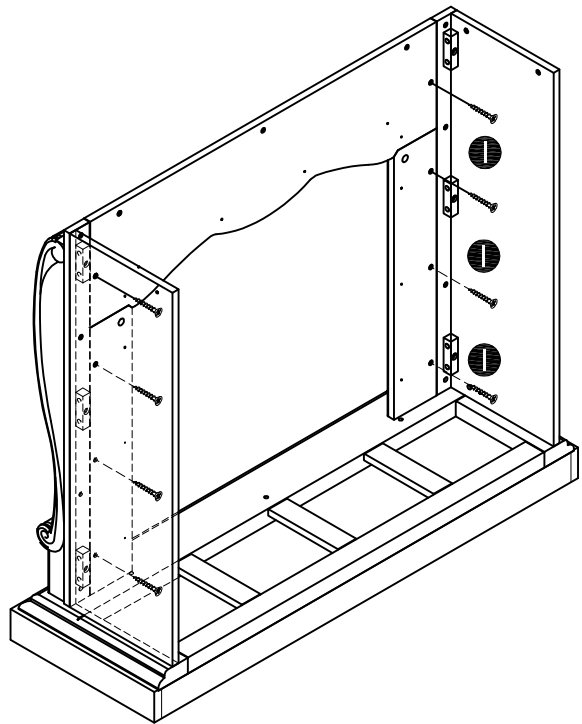


Hardware Used


I  Flat Head Screw X 8

6. Insert 2pcs hexagon socket bolt (D) through spring washer (E) and flat washers (F) to connect base (9) and preassembled unit from step 3. Tighten bolt (D) with allen wrench (G)

6

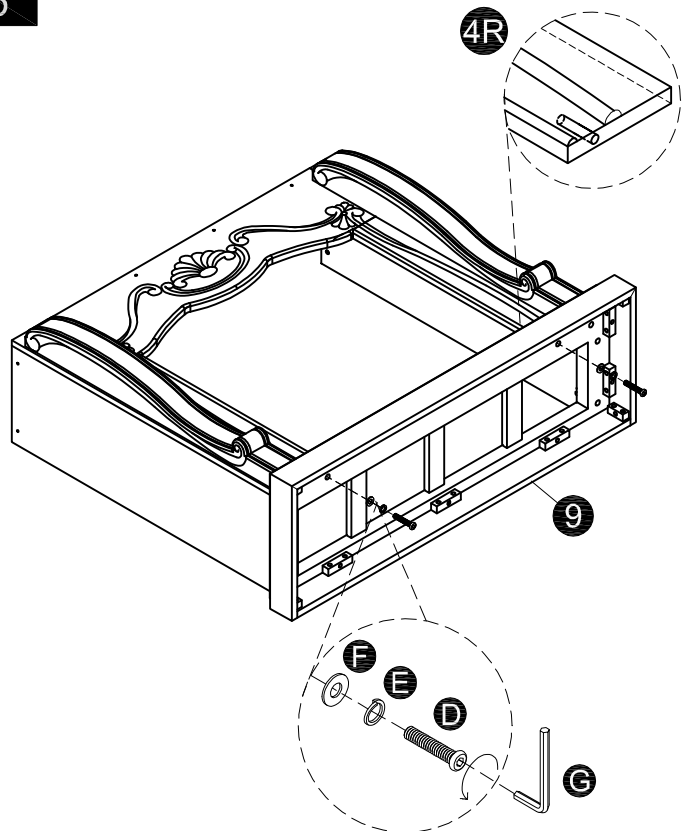

Hardware Used

D  Hexagon Socket Bolt X 2

F  Flat Washer X 2


E  Spring Washer X 2

G  Allen Wrench X 1



ASSEMBLY INSTRUCTIONS

7. Insert cam locks (C) into predrilled holes on lower block fire panel (6). Screw cam bolt (A) into predrilled holes on side block fire panels (7L&7R). Attach side block fire panels (7L&7R) to lower block fire panel (6) by cam bolt (A) into corresponding predrilled holes until side block fire panels (7L&7R) and lower block fire panel (6) meet. Secure by rotating cam lock (C) clockwise with phillips screwdriver.

7

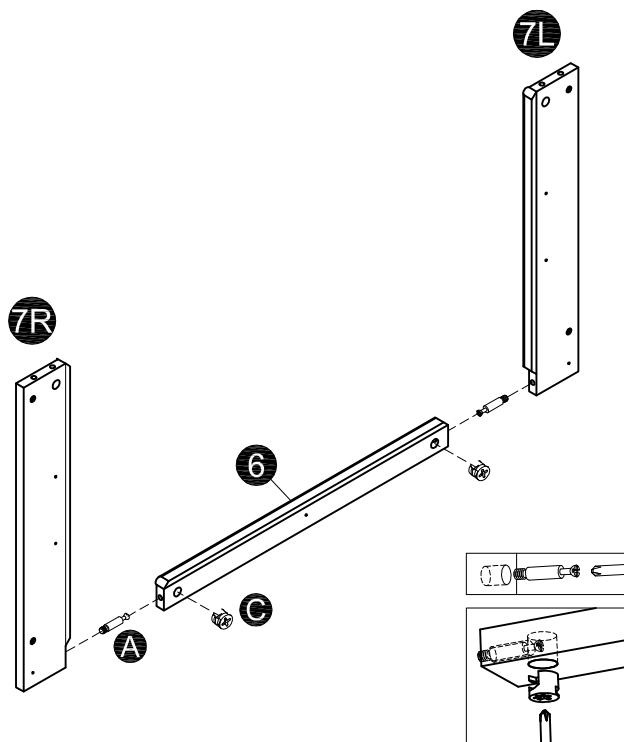


Hardware Used

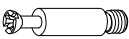


A		Cam Bolt	X 2
C		Cam Lock	X 2

8. Insert cam locks (C) into predrilled holes on side block fire panels (7L&7R). Screw cam bolt (A) into predrilled holes on upper block fire panel (5). Attach upper block fire panel (5) to preassembled unit from step 7 by inserting wood dowel (B) and cam bolt (A) into corresponding predrilled holes until upper block fire panel (5) and preassembled unit from step 7 meet. Secure by rotating cam lock (C) clockwise with Phillips screwdriver.

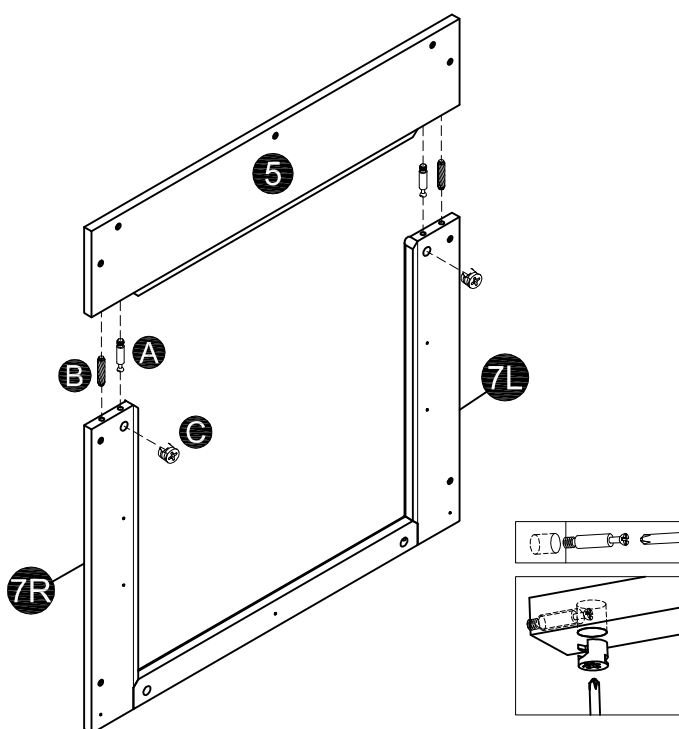8

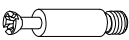


Hardware Used

A		Cam Bolt	X 2
B		Wood Dowel	X 2
C		Cam Lock	X 2

ASSEMBLY INSTRUCTIONS

9. Insert 3pcs wood dowel (B) into predrilled holes on base (9). Insert preassembled unit from step 8 into preassembled unit from step 6.

9

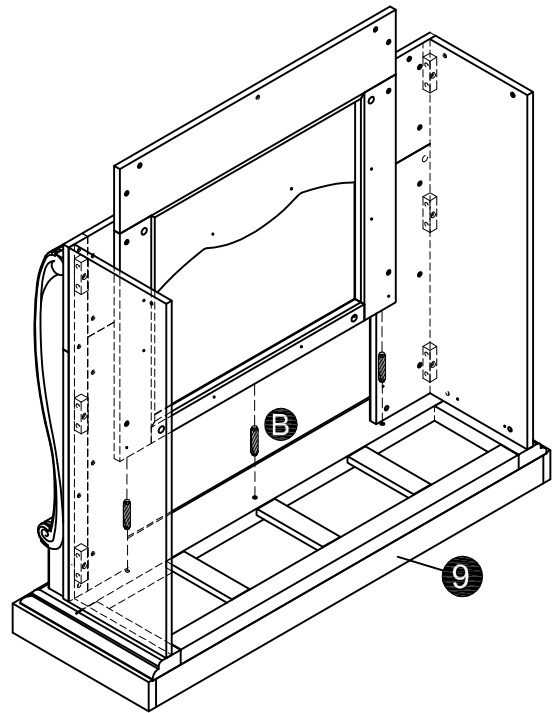

Hardware Used


B



Wood Dowel X 3


10. Insert 9pcs flat head screws (I) into predrilled holes and tighten with phillips screwdriver.

10

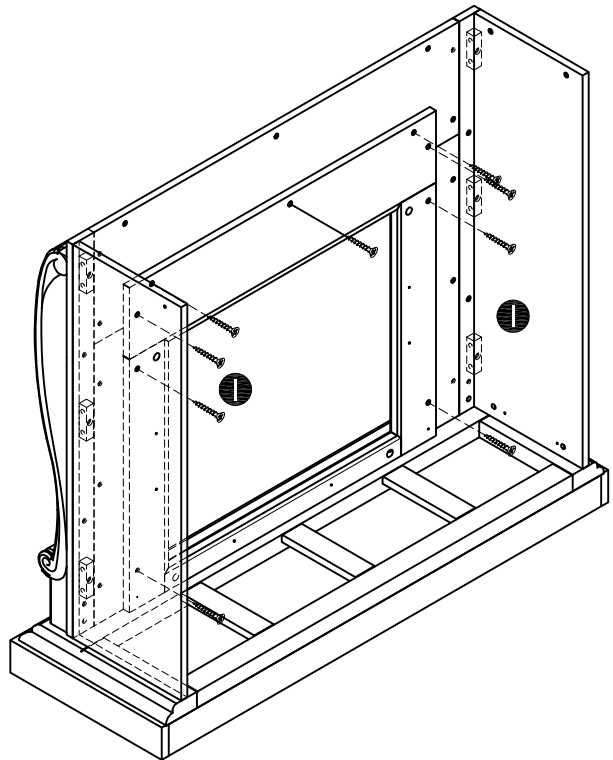

Hardware Used

I




Flat Head Screw X 9

ASSEMBLY INSTRUCTIONS


11. Attach top panel (1) by inserting 7pcs flat head screws (I) into predrilled holes and tighten with Phillips screwdriver.

11

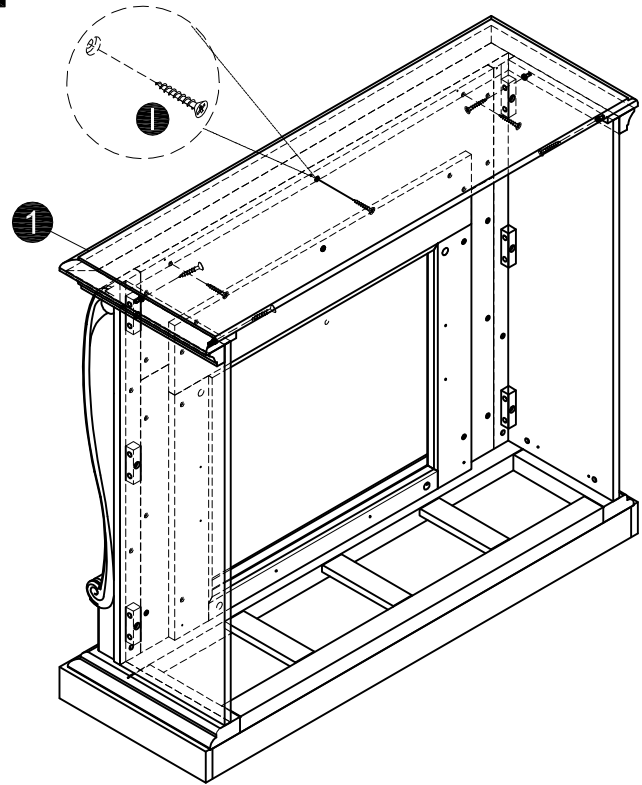

Hardware Used

I




Flat Head Screw

X7


12. Insert inside frame (10) into preassembled unit from step 11. Insert 5pcs flat head screws (I) into predrilled holes and tighten with Phillips screwdriver.

12

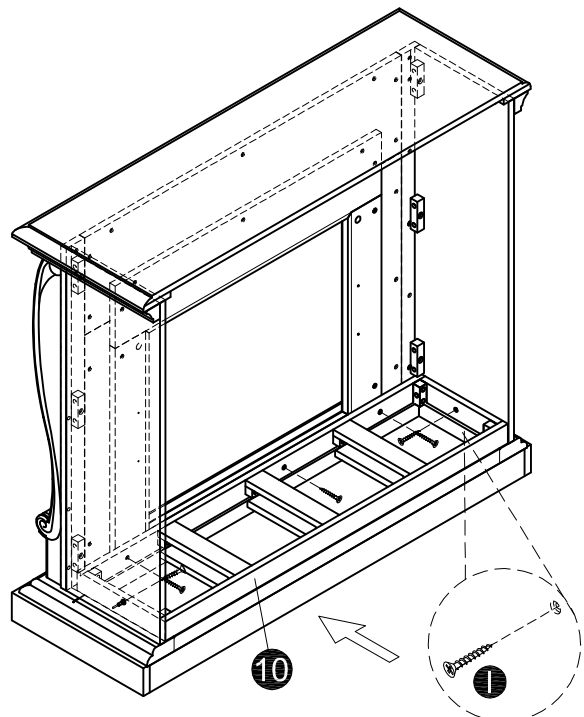

Hardware Used

I



Flat Head Screw


X 5

ASSEMBLY INSTRUCTIONS

13. Insert firebox (12) into the back of the assembled unit.


Use 4pcs screws (I) to connect wood holder (11) to firebox (12), tighten screw (I) with Phillips screwdriver.

13

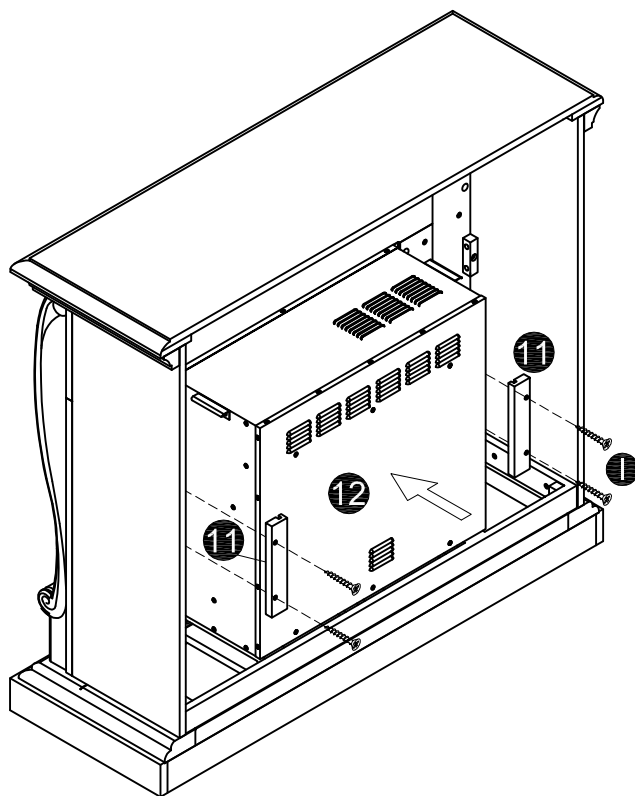

Hardware Used


I



Flat Head Screw X 4

14. Now your new fireplace is ready to use.

14

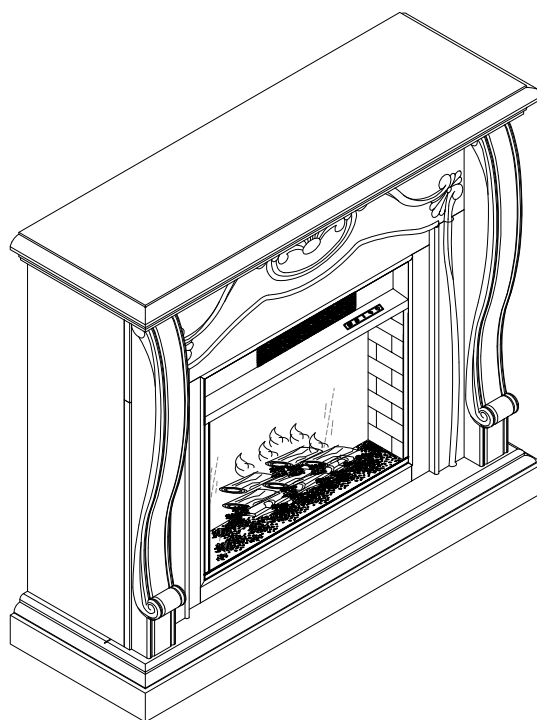

Parts Replacement Form

Customer Information

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Please examine this product carefully upon immediately receipt. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product . Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am - 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES

Customer Service 1-800-633-5096
service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019