





Item # : OCSTDT
Assembly Instructions

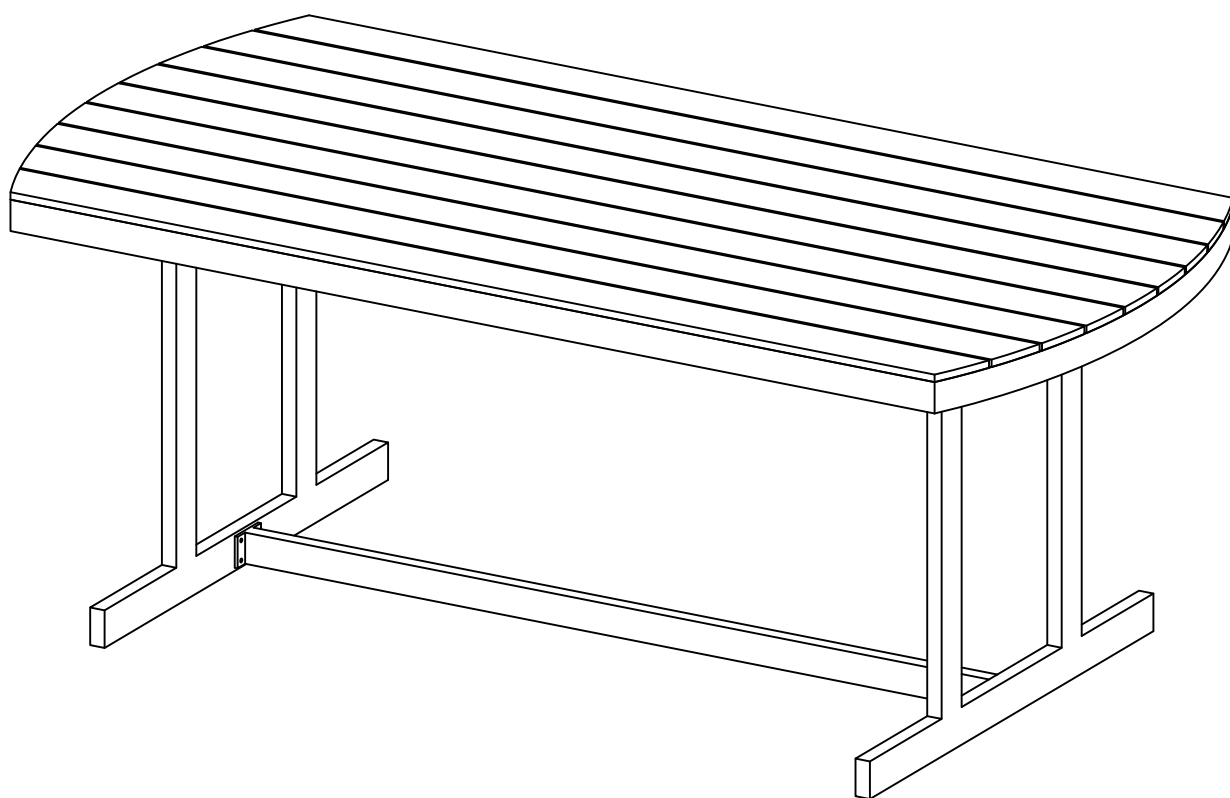

*To request missing, lost or broken parts , or for any other customer service issues,
please visit our website at **www.walkeredison.com** or call us at 877-207-5906.*


Revised 01/2017

Parts List

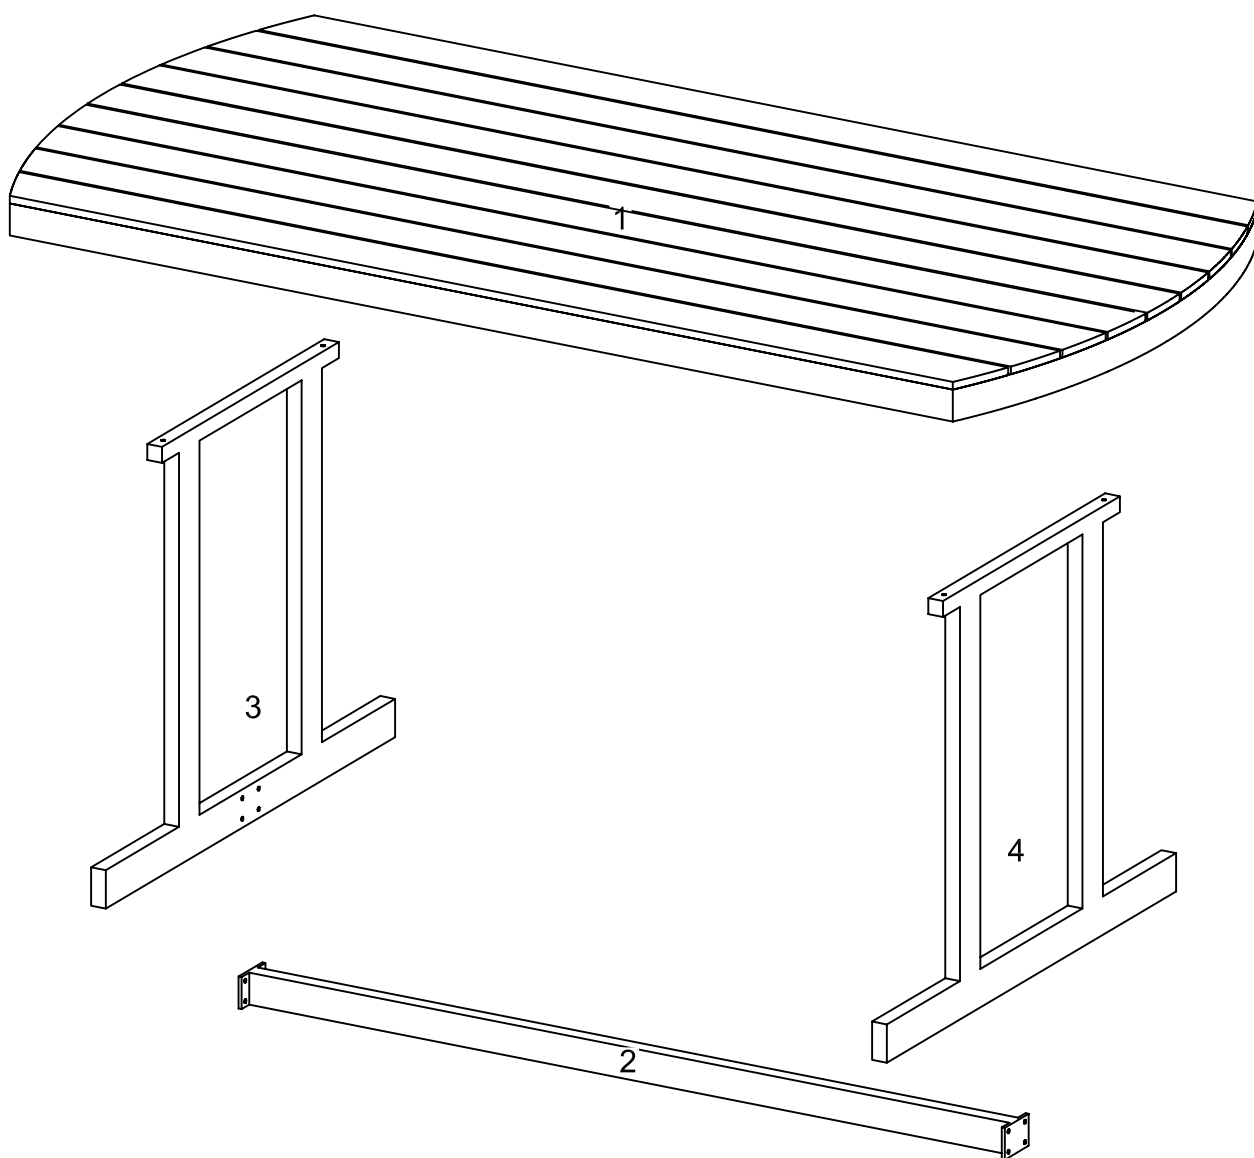

Hardware List


A		Ø6x25mm	Bolt	12 pcs
B		Ø6x40mm	Bolt	4 pcs
C		M6x16mm	Washer	16 pcs
D		M4	Wrench	1 pc

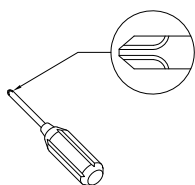

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

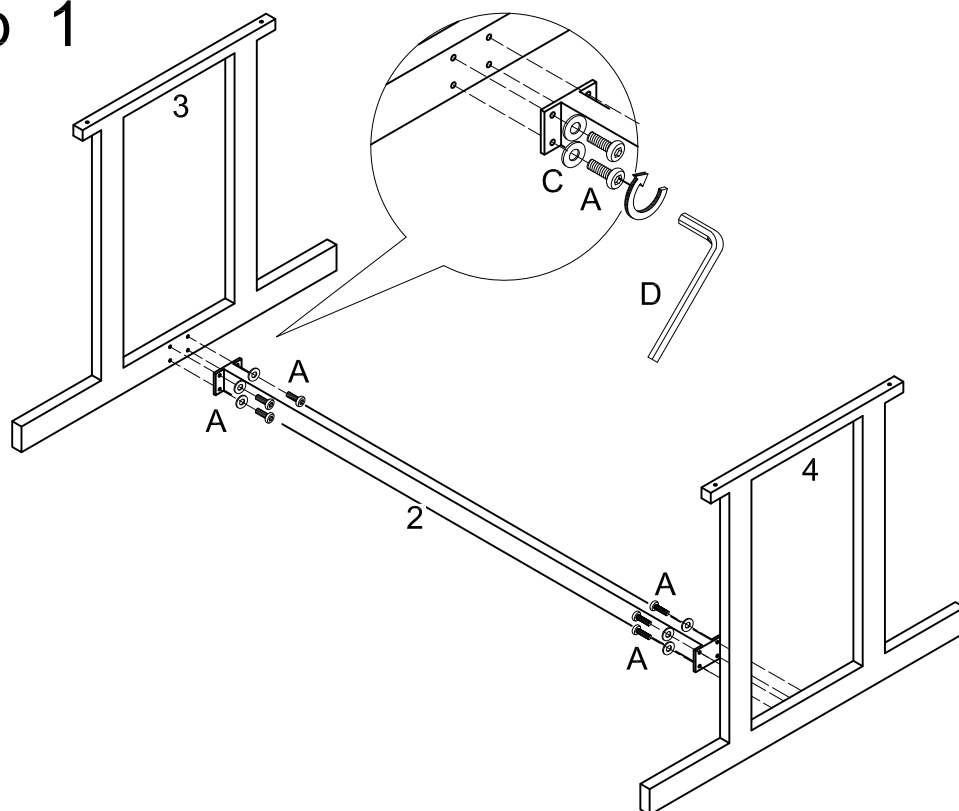


Use wrench (D), bolt (A), washer (C) to secure the cross bar (2) to the side frame (3,4).

Step 2

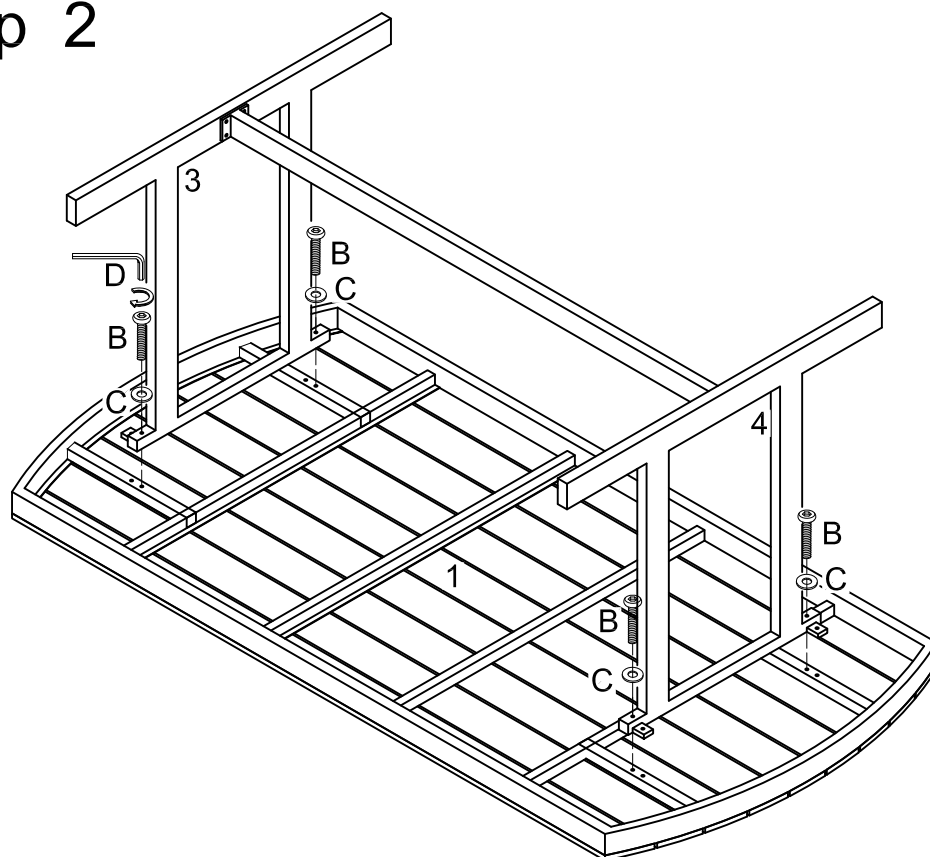


Use wrench (D), bolt (B), washer (C) to secure the side frame (3,4) to the top panel (1).

Step 3

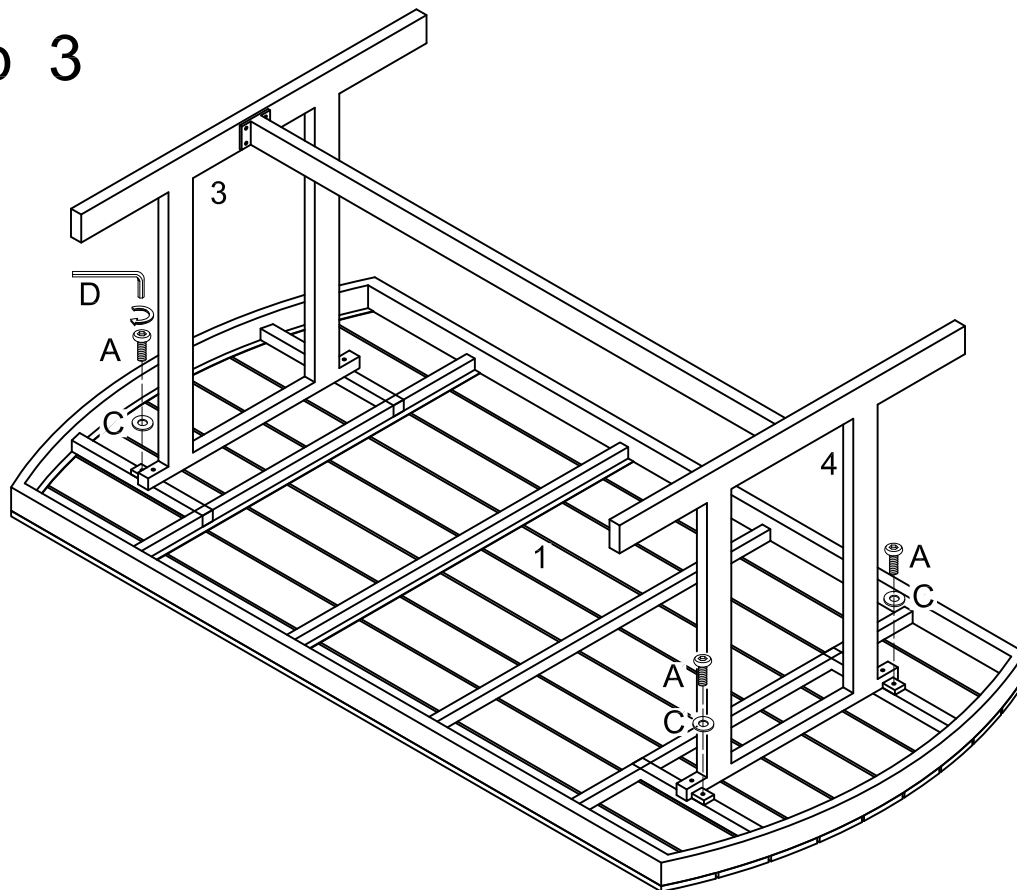

Use wrench (D), bolt (A), washer (C) to secure the side frame (3,4) to the top panel (1).

Step 4

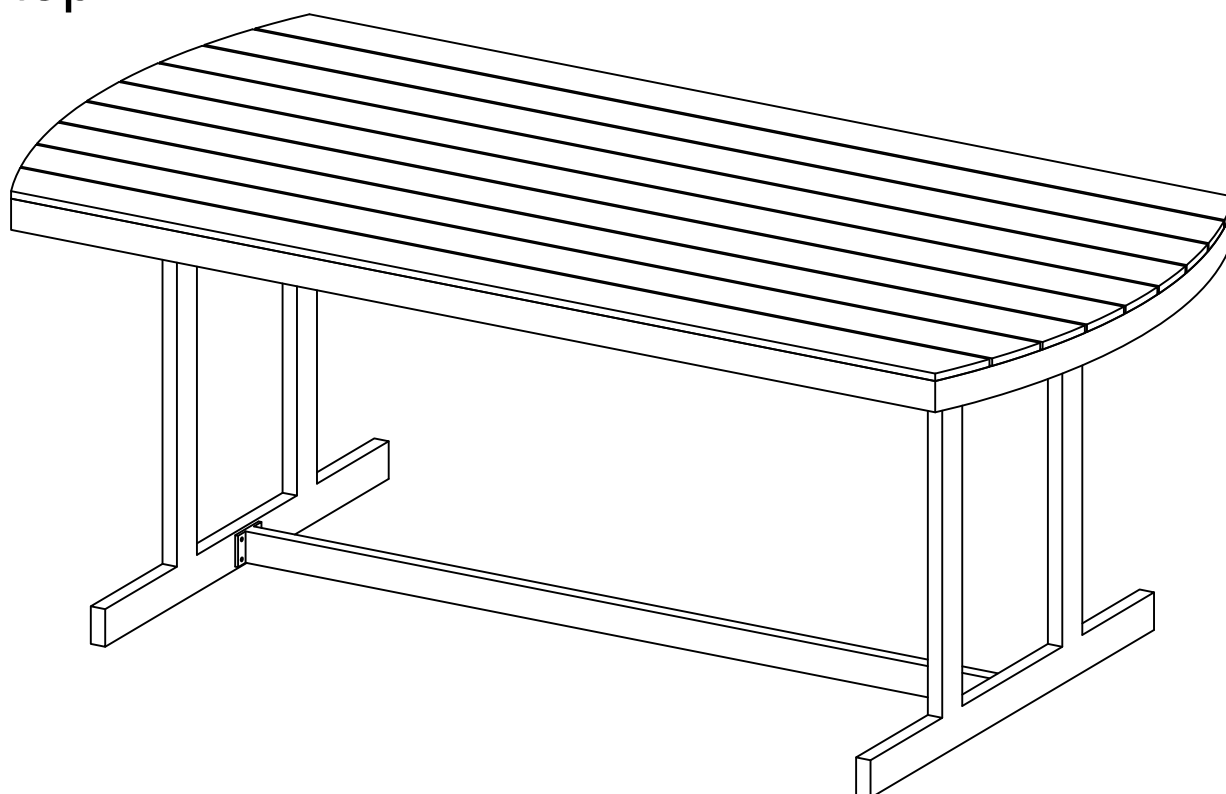

Final Assembly