

# Haven Chair Teak Arm

Assembly Guide

*neighbor*

#### Frame Boxes

✓ Chair - Teak Arm Frame (1)

#### Cushion Boxes

✓ Cushions - Armless/Teak Arm (1)

# Parts




**1X Module Base**

Chair - Teak Arm Frame Box




**1X Module Back Support**

Chair - Teak Arm Frame Box

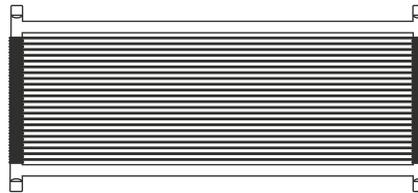


**1X Module Roped Back**

Chair - Teak Arm Frame Box

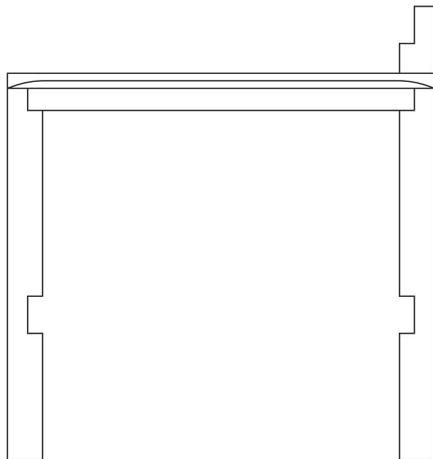

**1X Right Teak Arm**


Chair - Teak Arm Frame Box

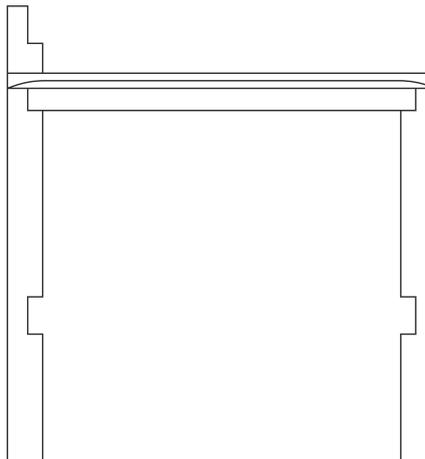


**1X Left Teak Arm**

Chair - Teak Arm Frame Box

# Cushions

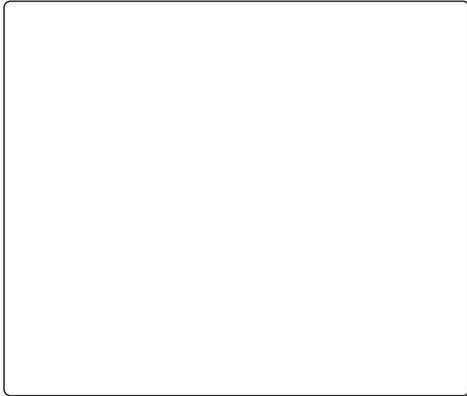

**1X Module Base Cushion**  
Armless/Teak Arm Cushions Box

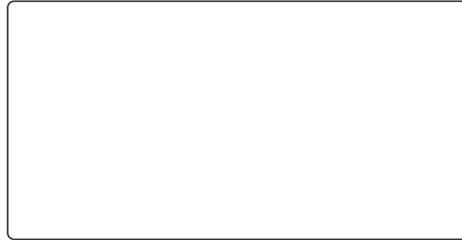

**1X Module Back Cushion**  
Armless/Teak Arm Cushions Box

# Hardware



**8X 30mm Hex Bolt**  
Chair - Teak Arm Frame Box



**4X 40mm Hex Bolt**  
Chair - Teak Arm Frame Box

# Tools



**1X Allen Wrench**  
Chair - Teak Arm Frame Box

## Assembly Tips

### Use caution when lifting

Two-person lift is recommended. The boxes and product are both large and heavy.

### Lay everything out before you begin

Getting familiar with all the components before assembly will make for a faster and easier assembly process.

### Assemble on a soft surface

We recommend assembling your furniture on a soft surface such as a rug or a towel. The wood frame can scratch against harsh textures like brick or concrete.

### Loose first, then tight

Partly tighten the hex bolts while assembly. After the modules are fully assembled, tighten the bolts firmly. Keep in mind humidity levels can slightly affect how the pieces fit together.

## Product Care

### Caring for teak

Unfinished teak will gradually change color from honey gold to a silver-gray patina. We encourage allowing the teak to turn color naturally and cleaning it annually or bi-annually. As for cleaning, we recommend Golden Teak Cleaner, which is specifically designed to kill mold and mildew spores inside teak.

Avoid prolonging mildew growth. If left in the shade for extended periods, this can be common. If you live in a particularly humid or rainy climate, keep a closer eye on mildew growth and clean as needed.

Covering your furniture when not in use will greatly prolong the lifespan of the wood.

### Caring for Sunbrella


Brush off dirt before it becomes embedded in the fabric and wipe up spills as soon as they happen. Rinse thoroughly and air dry. Avoid scrubbing, stiff bristle brushes, or any other abrasive cleaning method.

Protect the area around your furniture when using bleach or other chemical solvents that may discolor non-Sunbrella fabrics.


If fabric is wrinkled, use an iron on the synthetic setting. As iron temperatures may vary, test a small area first before ironing the entire piece. Do not use a steamer or an iron set to the steam setting.

### Fabric stain removal

- Blot (don't rub) liquid spills with a clean, dry cloth. For oil-based spills, apply an absorbent such as corn starch then remove with a straight edge.
- Spray on a mild cleaning solution of soap (such as Woolite® or Dawn®) and water and lightly agitate with a sponge or gentle brush.
- Rinse the fabric thoroughly to remove all soap residue.
- Air dry.
- As needed, unzip and machine-wash covers.

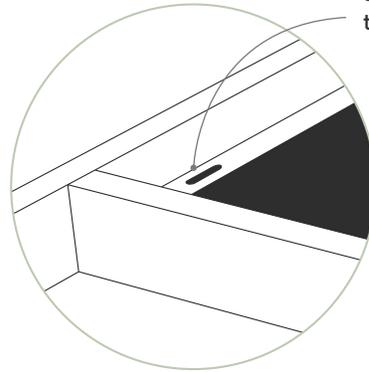

Backrest slots should align with the back of the armrest, as shown

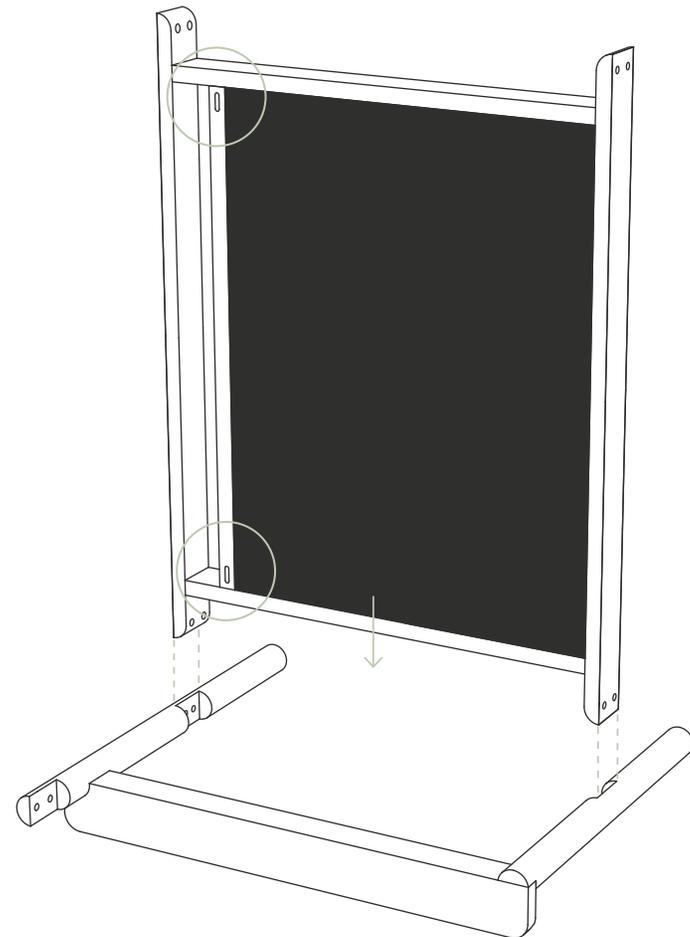


# 1

## Connect base to left arm


Place the Left Teak Arm on a soft surface with the armrest facing down. Gently insert the Module Base into the arm's inner slots.

## 2 Connect right arm to base

Gently insert the Right Teak Arm by sliding it into the Module Base until its holes are aligned with the base's corresponding threaded holes.

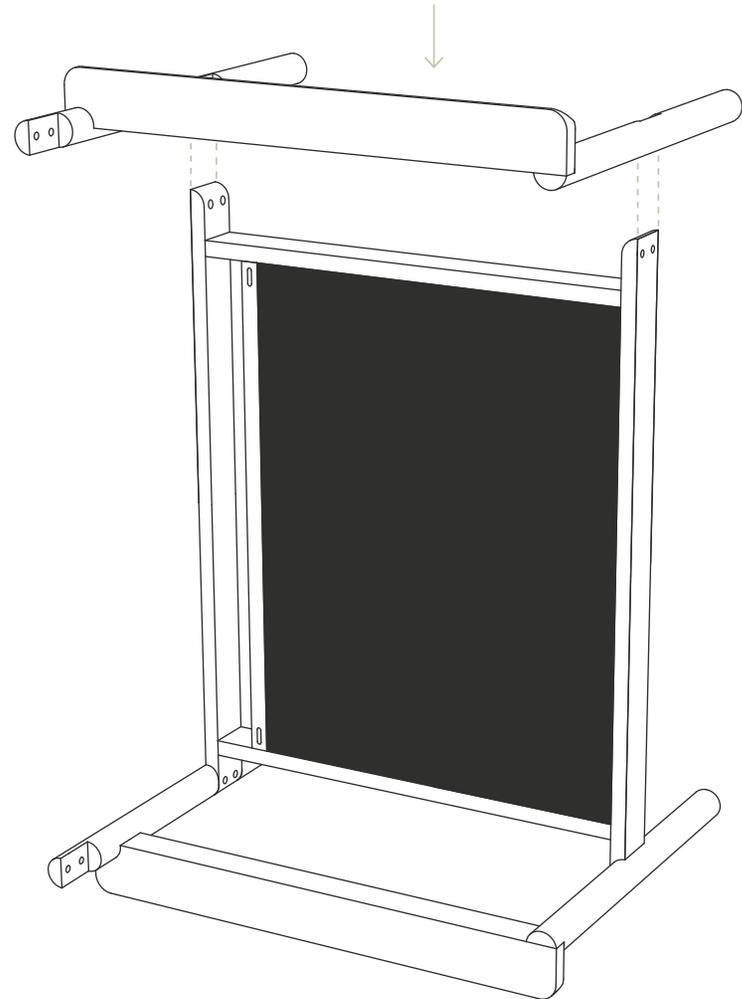


8X 30mm Hex Bolt

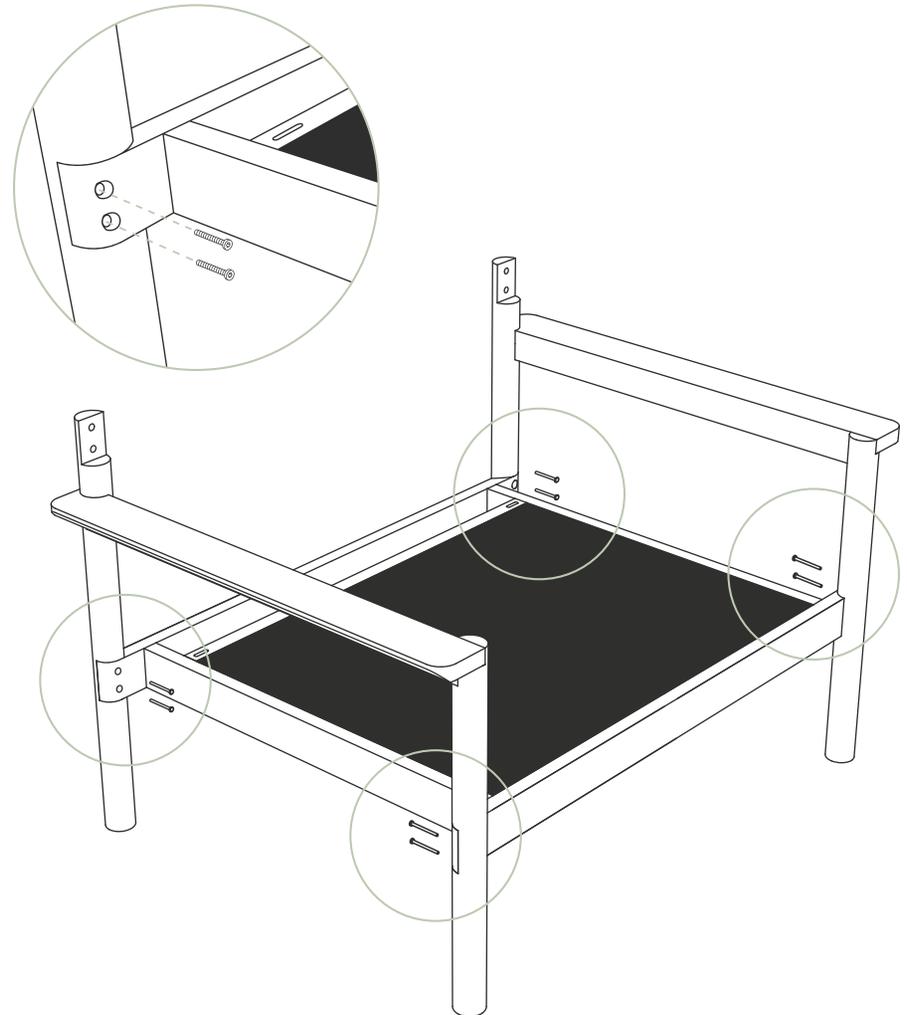


# 3

## Fasten arms to base

Using the Allen Wrench provided, fasten the Module Base to the Left and Right Teak Arms with four 30mm Hex Bolts per side.

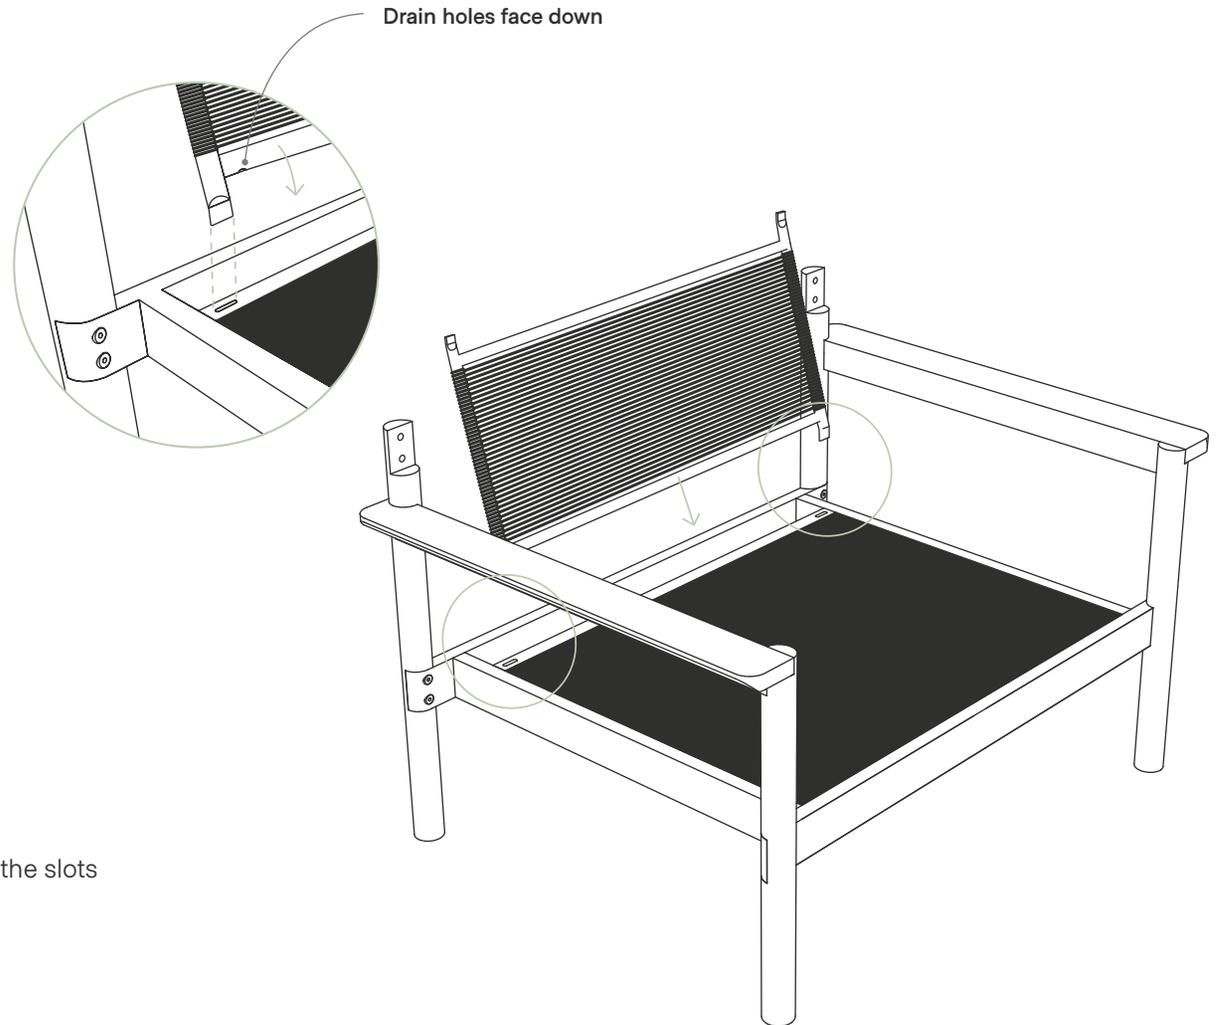

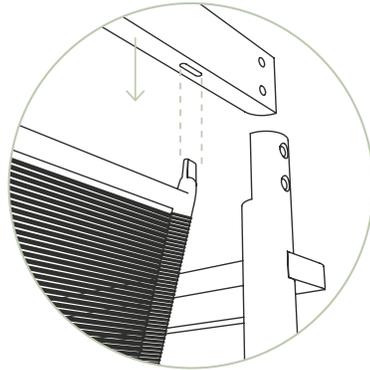


# 5

## Attach back support to roped back

Lower the Module Back Support onto the Module Roped Back by fitting the tabs into their corresponding slots, then insert.

4X 40mm Hex Bolt

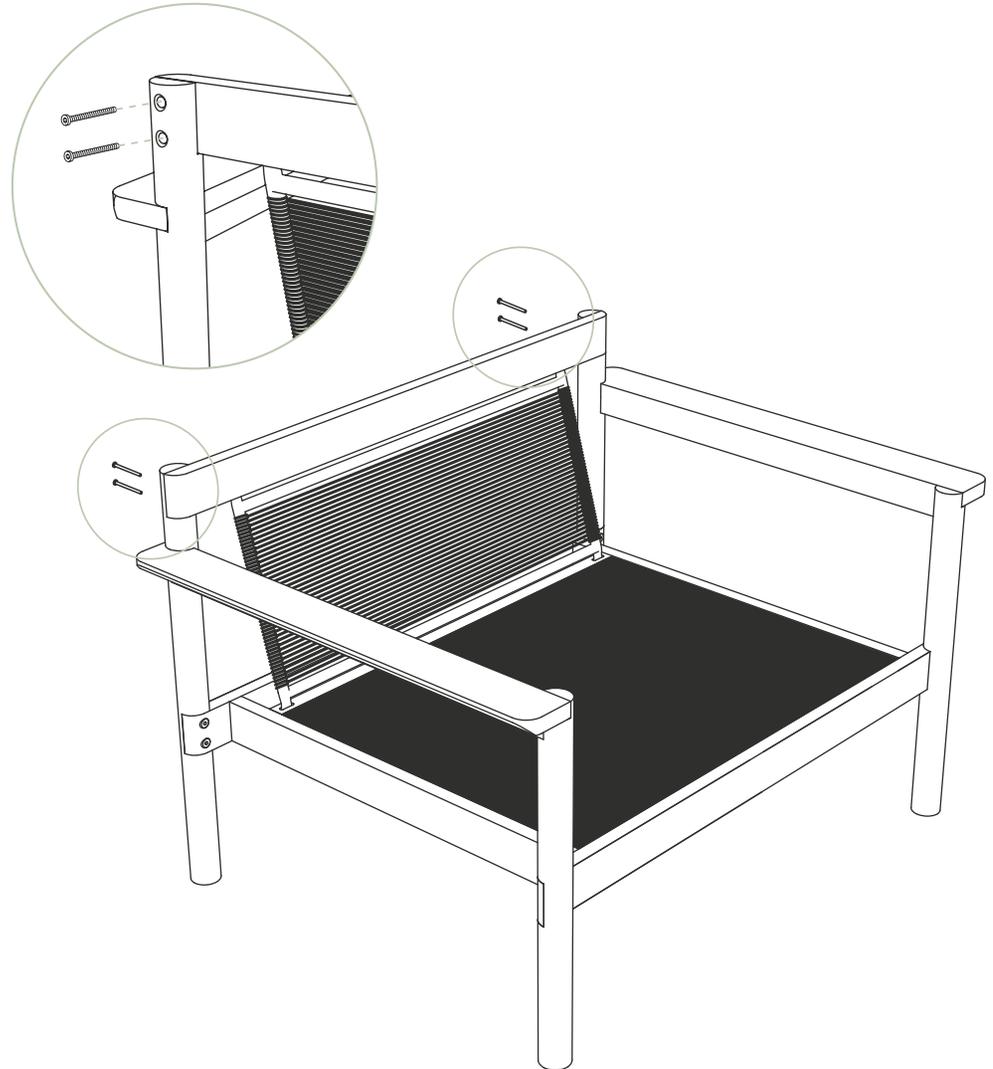

6


## Fasten back support to arms

Fasten the Module Back Support to the Teak Arms with two 40mm Hex Bolts per side.

## 7

## Add cushions

With the zipper seam facing backward, add the base cushion. Finally, add the back cushion. Relax! You're ready to enjoy your chair.

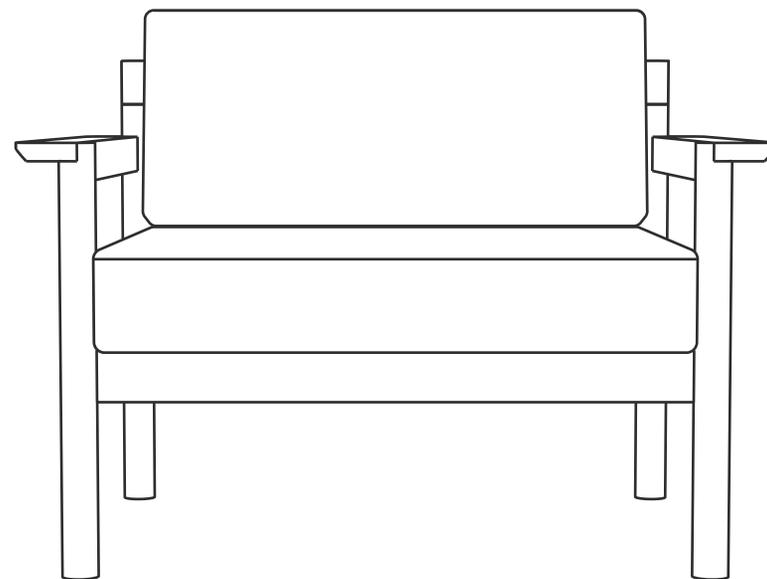

# Contact

Have a question, comment, feedback?  
We love hearing from customers.

[support@hineighbor.com](mailto:support@hineighbor.com)  
[hineighbor.com](http://hineighbor.com)

*neighbor*