

LOWERY FIREPLACE

FA966800TX--ESPRESSO

Assembly Instructions




For assistance with assembly contact:

Southern Enterprises, Inc.












Customer Service 1-800-633-5096

service@seidal.com

www.seidal.com

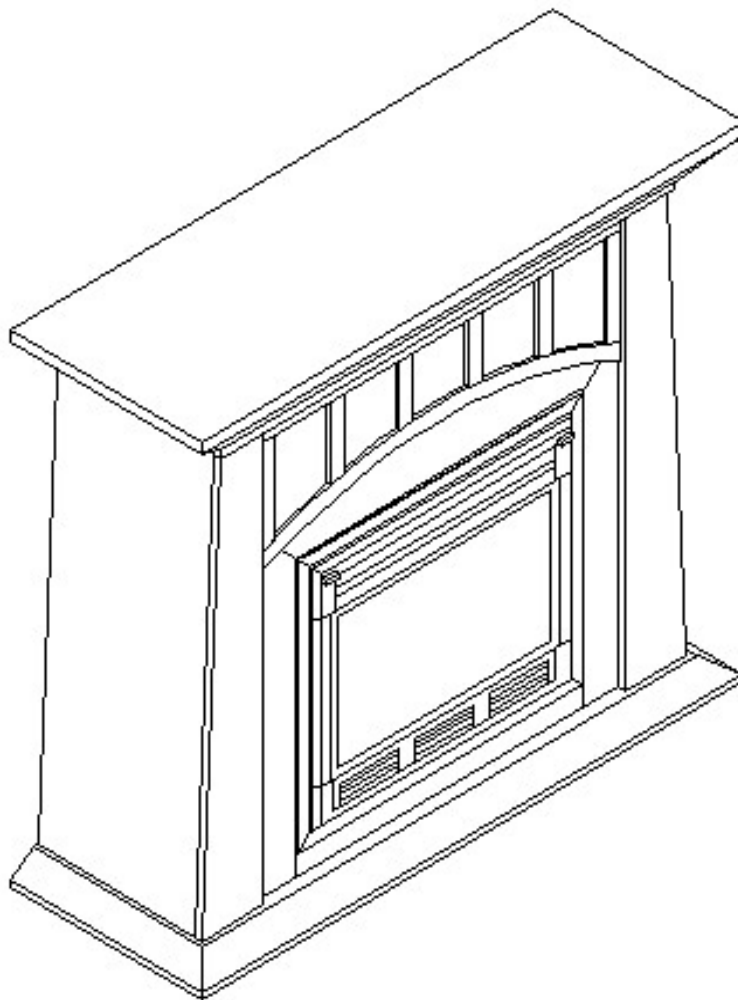


PACKAGE CONTENTS

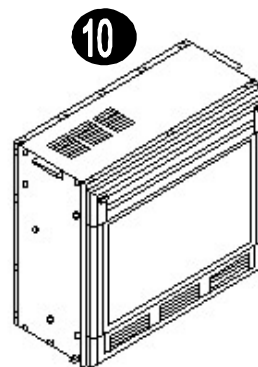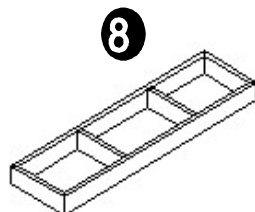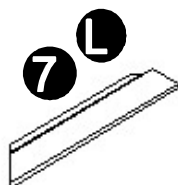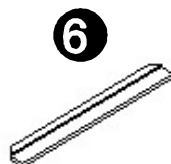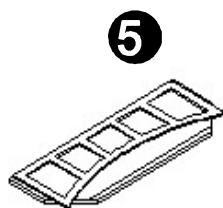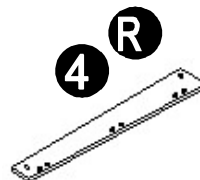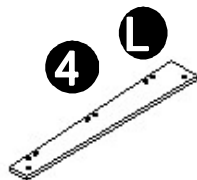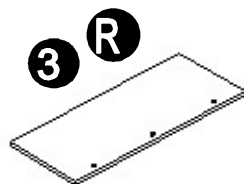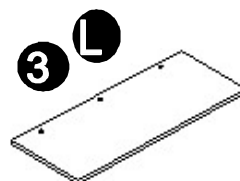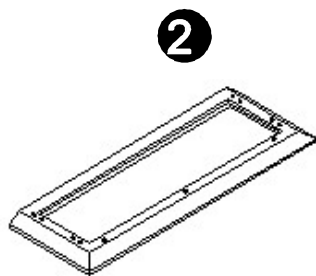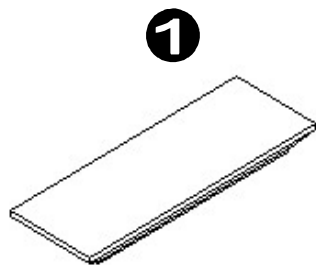

PART	DESCRIPTION	QUANTITY	PART	DESCRIPTION	QUANTITY
1	Top Panel	1	6	Front Lower Panel	1
2	Bottom Panel	1	7	Small Central Pilaster(L/R)	2
3	Side Panel(L/R)	2	8	Shelf Frame	1
4	Big Outside Pilaster(L/R)	2	9	Wood Holder	2
5	Front Upper Panel	1	10	Firebox(sold in separate box)	1

HARDWARE CONTENTS(shown actual size)

A



Wood Dowel
Qty.22

B




Cam Bolt
Qty.22

C



Cam Lock
Qty.22

D

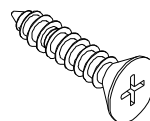

Flat Head Screw
Qty.14



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 800-633-5096 or in Dallas 972-869-0111/ 9am - 4pm Mon-Fri.

WARNING


- Product is heavy and should be assembled near its desired location.
- It is recommended that two people move the finished product to prevent injury.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 60 minutes

Tools Required for Assembly: Phillips Screwdriver (not included)


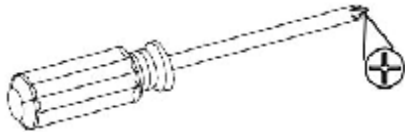



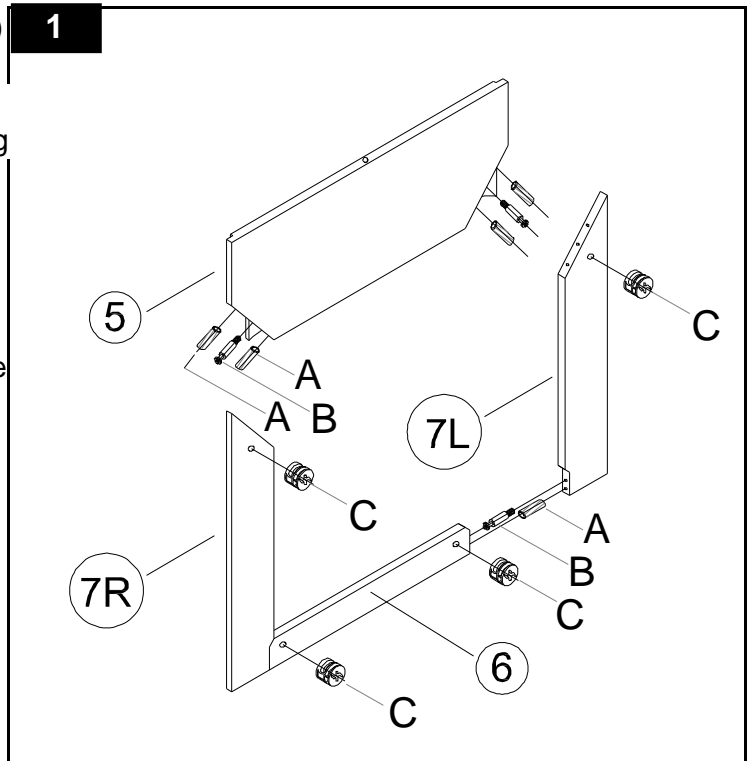
ASSEMBLY INSTRUCTIONS

Insert cam lock (C) into corresponding holes on small central pilasters (7L&7R). Make sure the arrow points towards the hole of the edge. Screw cam bolt (B) and insert wood dowel (A) into corresponding holes on front upper panel (5) & front lower panel (6).

Attach the front upper panel and lower panel to the small central pilasters and then tighten them with Phillips head screwdriver (not included) by turning the cam lock clockwise until engaged with the cam bolt as the figure shown.

Hardware Used

A		Wood Dowel	X6
B		Cam Bolt	X4
C		Cam Lock	X4






ASSEMBLY INSTRUCTIONS

Insert cam lock (C) into corresponding holes on side panels (3L&3R) .
Make sure the arrow points towards the hole of the edge.

Screw cam bolt (B) and insert wood dowel (A) into corresponding holes on big outside pilasters (4L&4R).

Attach the pilasters to the side panels correspondingly and tighten them with phillips head screwdriver (not included) by turning the cam lock clockwise until engaged with the cam bolt as shown.

Hardware Used




- | | | | |
|----------|---|------------|----|
| A |  | Wood Dowel | X6 |
| B |  | Cam Bolt | X6 |
| C |  | Cam Lock | X6 |

Insert cam lock (C) into corresponding holes on big pilasters(4L&4R) and side panels(3L&3R) .Make sure the arrow points towards the hole of the edge.


Screw cam bolt (B) and insert wood dowel (A) into corresponding holes on bottom panel (2).

Attach the assembled side panels to the bottom panel correspondingly and then tighten them with phillips head screwdriver (not included) by turning the cam lock clockwise until engaged with the cam bolt as the figure shown.


Hardware Used

- | | | | |
|----------|---|------------|----|
| A |  | Wood Dowel | X4 |
| B |  | Cam Bolt | X6 |
| C |  | Cam Lock | X6 |

2

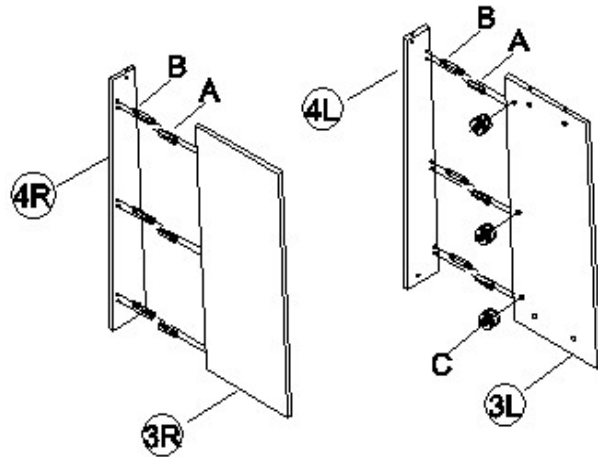

3

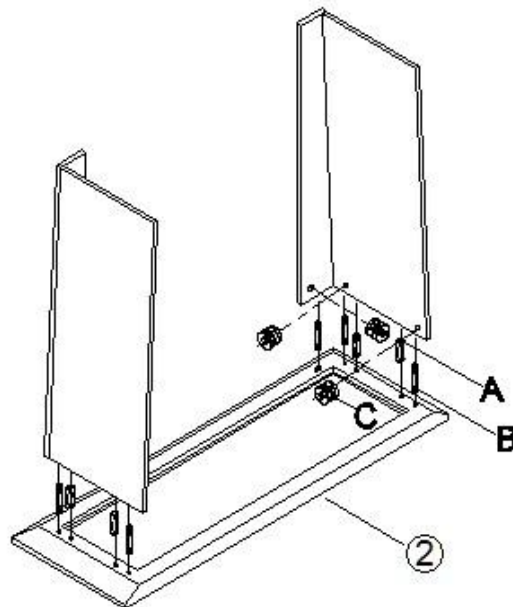


ASSEMBLY INSTRUCTIONS

Insert one wood dowel (A) into the hole on the bottom panel as shown.

Attach the front frame assembled in step 1 to the small central pilasters from the back with the flat head screw (D) as shown. Tighten them with phillips head screwdriver (not included).


Hardware Used

A




Wood Dowel X1

D



Flat Head Screw X10

4

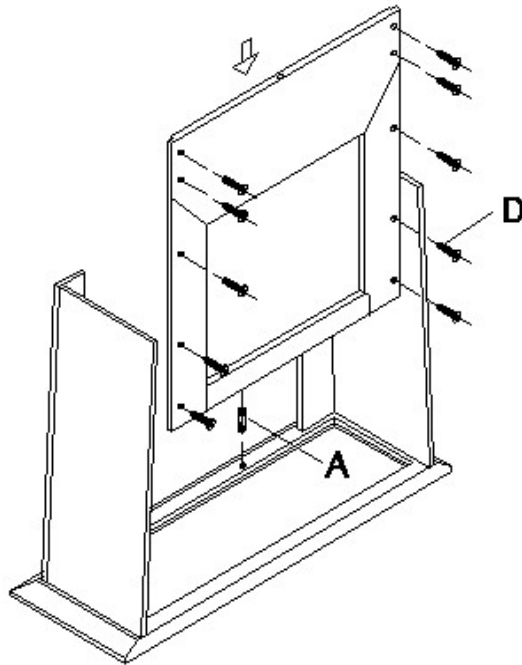

Insert cam lock (C) into corresponding holes on big pilasters (4L&4R) and side panels (3L&3R). Make sure the arrow points towards the hole of the edge. Screw cam bolt (B) and insert wood dowel (A) into corresponding holes on top panel (1).

Attach the top panel to the assembled unit in step 4 and then tighten them with phillipshead screwdriver by turning the cam lock clockwise until engaged with the cam bolt as shown. Place the shelf frame (8) into the bottom panel as the figure shown.


Hardware Used

A



Wood Dowel X5

B




Cam Bolt X6

C



Cam Lock X6

5

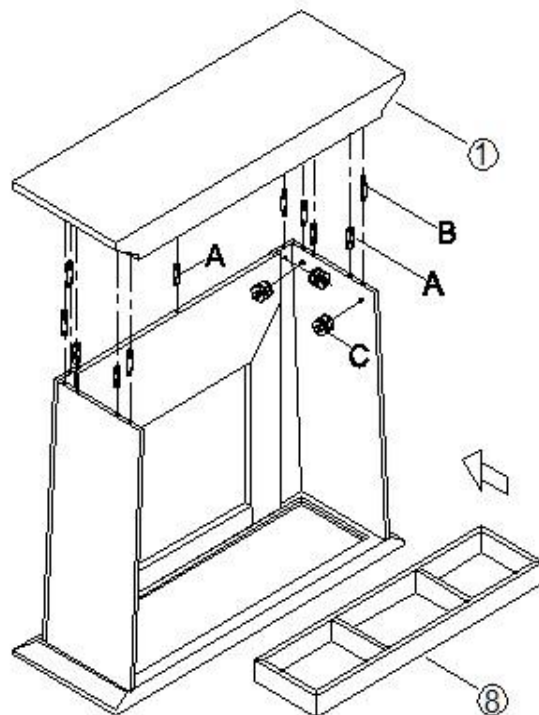

6

ASSEMBLY INSTRUCTIONS


Place the fireplace instrument on the right positions onto the shelf frame. Hold the instrument from the back with wood holder (9) and flat head screw (D). Make sure the flange of the instrument traps into the groove of the wood holder. Tighten the holders with phillips head screwdriver (not included) as shown.

Hardware Used


D



Flat Head Screw X4

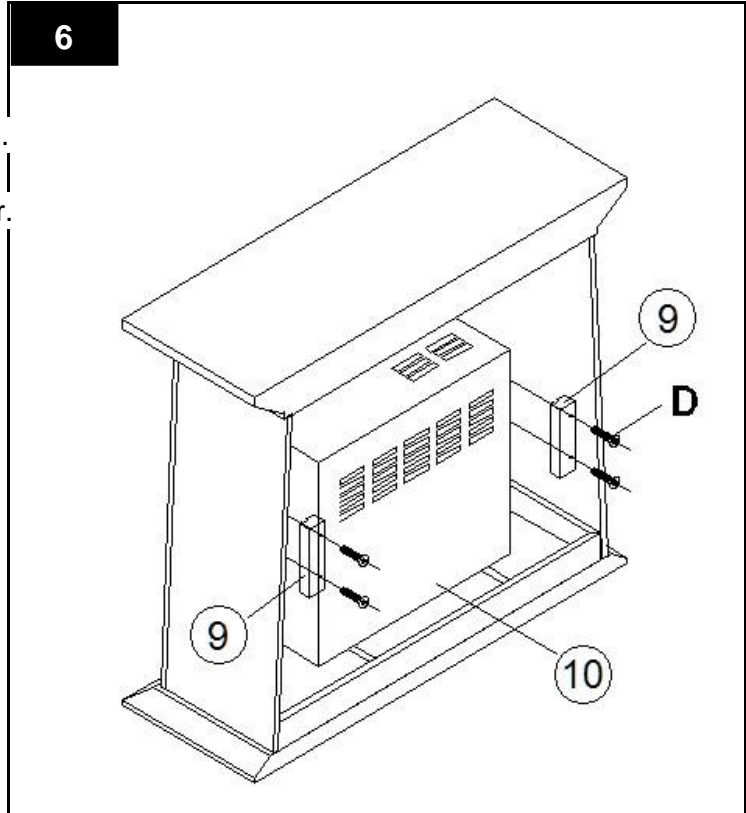

Now your fireplace is ready to use.

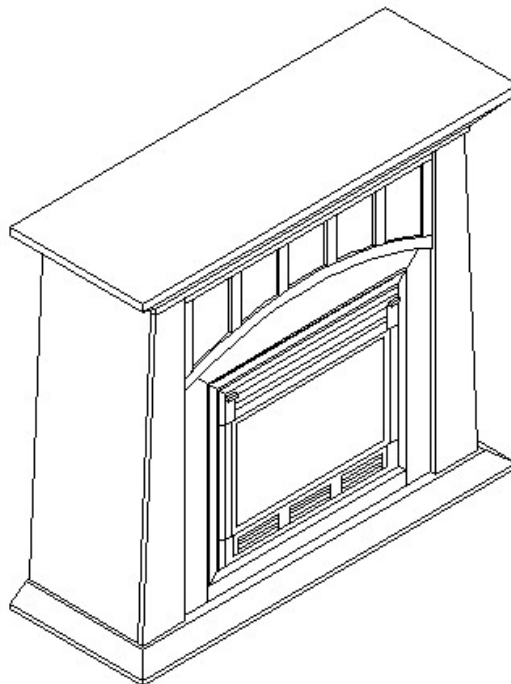

Parts Replacement Form

Customer Information

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item:Store/Website/Catalog _____

Please indicate color/size/style number: _____

Style No	Parts Letter	Parts Description	Quantity
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096
service@seidal.com
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019