# P@LYWOOD\*

### Step 1

Leg<sup>.</sup>

Foot \

Attach feet to legs using (4) 21/4" Chair bolts.

All Weather Furnishings

## Model:

NCT37, NCCT37, NCRT37, NCBT37


- \_\_(1) Table top
- \_\_(4) Leg
- \_\_(2) Foot (2) Brace
- (1) Umbrella support
  - \_(1) Hardware pack

## **TOOLS NEEDED**

Qty.

8

6

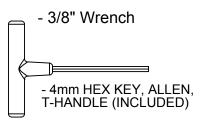

Description

A - 1/4-20 X 1-1/2 WAFER SHCS


1/4-20 X 2-1/4 WAFER SHCS

D - .273 X 3 SOCKET WAFER A



Attach the leg braces to the leg assemblies using (4) .27x3" screws


Attach the umbrella support using

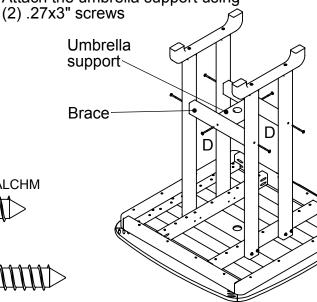

## Step 2

Lay table top on flat surface.


Attach the leg assemblies to the table frame using (8) 14x2½" hex screws \*Do not tighten until last step

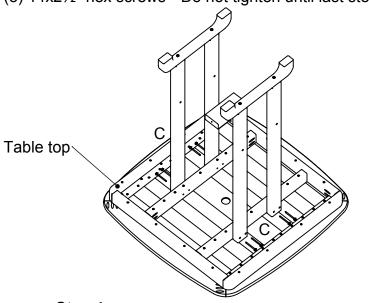

### Step 4

Set table upright and tighten all bolts.

The 1½" Chair bolt secures the umbrella pole.

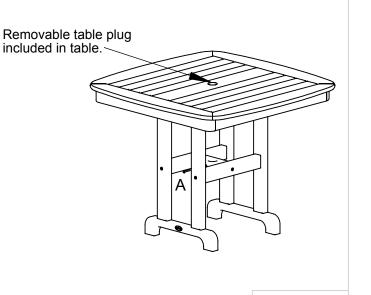





To view our full warranty, please visit the warranty page on our website at polywoodinc.com/resources