

Duct Cover

AK0736BS

AK0742BS

AK0748BS

AK0754BS

Hood Compatibility


AK7836BS

AK7842BS


AK7848BS

AK7854BS

1. Line up screw holes and attach the left and right side panels to the center panel with screws provided.

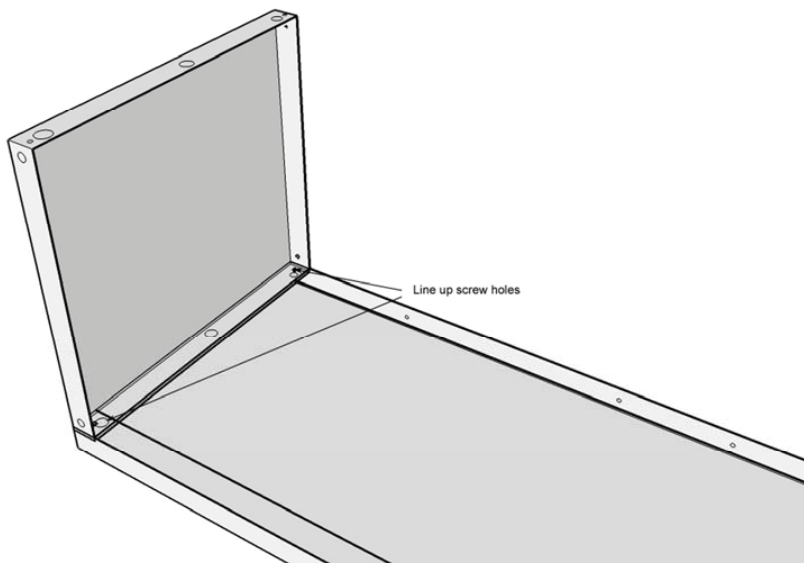

2. Place assembled duct cover on top of hood. Make sure the screw holes of the center panel are facing down and line up with the holes on top of hood.
3. Attach the duct cover to the top of hood by securing the rest of the screws to it from within the inside of the hood.

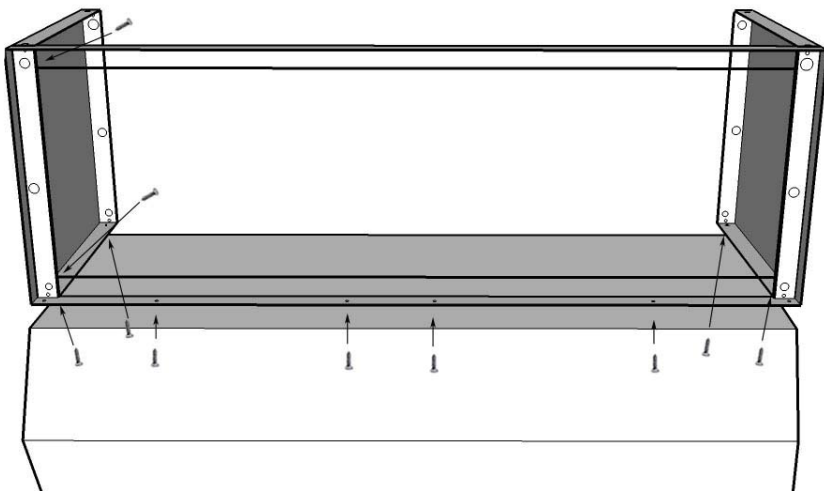

Zephyr Corporation

2277 Harbor Bay Pkwy, Alameda, CA 94502

Tel: 1.888.880.8368 Fax: 1.888.990.8368

e-mail: productsupport@zephyronline.com