



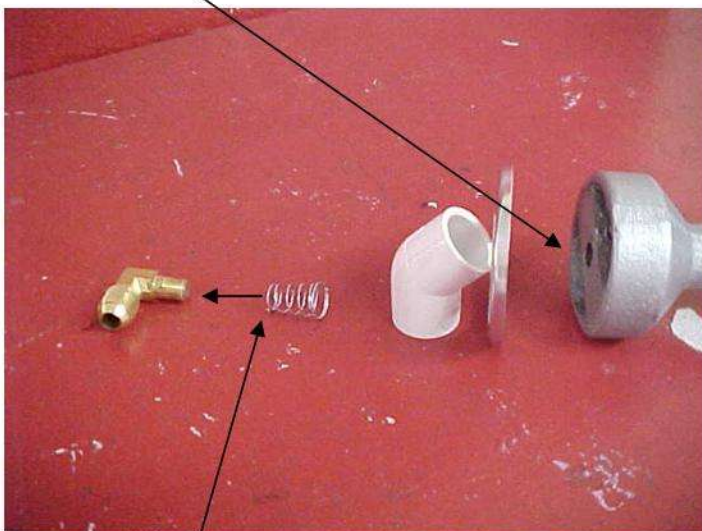

PUT SMALL JET END OF VALVE INTO SPRING. PUT
 PLATE ON BURNER AND SCREW JET END OF VALVE
 INTO FEMALE THREADS ON MAIN BURNER



SMALL END OF SPRING

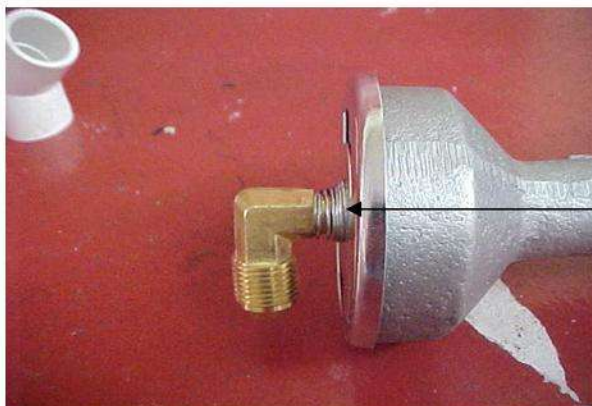

ALLOW SPRING TO KEEP ENOUGH
 PRESSURE ON THE PLATE SO
 THAT IT DOES NOT TURN FREELY
 BUT DO NOT OVER TIGHTEN.