
C3CO50 INSTALL GUIDE

DIMENSIONAL RENDERINGS

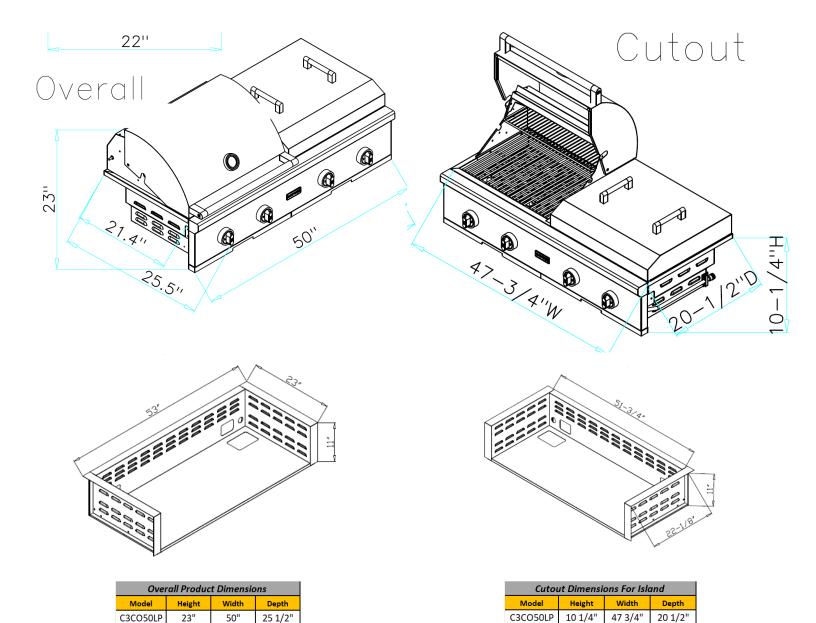

Model No.	Gas Supply	BTU's	Regulator	WC Pressure	Max PSI	Electrical Requirements
C3CO50LP	Propane	40,000	20 lb Tank Regulator	11"	.5 PSI	N/A
C3CO50NG	Natural Gas	40,000	1/2" Female Pipe	4"	.5 PSI	N/A

C3CO50NG

CJAKTC3CO

23"

11"

50"

53"

25 1/2"

23"

Important Note to Installer: This file is not intended to replace your Owners' Manual which contains specific safety requirements and consumer guidelines. Please refer to your Owners' Manual prior to installing or operating your built-in grill.





C3CO50NG

CJAKTC3CO

10 1/4"

11"

47 3/4"

51 3/4"


20 1/2"


22 1/8"

C3CO50 INSTALL GUIDE

NON-COMBUSTIBLE CONSTRUCTION

Insulated Jacket NOT Required

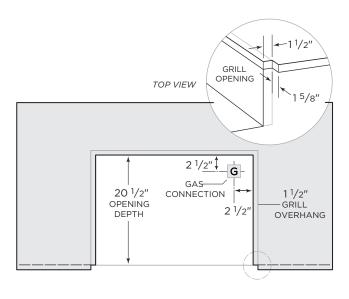

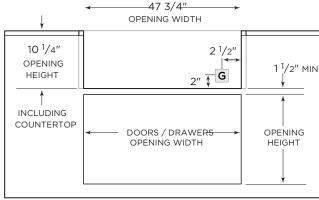


FRONT VIEW

- ✓ Combustible material can not be within 24" of the grills frame
- ✓ This applies to all directions horizontal & vertical
- Shaded area above on "TOP VIEW" illustrates the 24" minimum requirement (not to scale for rendering purposes)
- The grill is designed to hang from the counter top with no support underneath
- ✓ Minimum rear clearance for the hood to open is 2"
- If you have a wall/partition behind the grill, the minimum rear clearance to that wall should be at least 7" to allow for ventilation of the exhaust

COMBUSTIBLE CONSTRUCTION

Insulated Jacket Required - Model # CJAKTC3CO

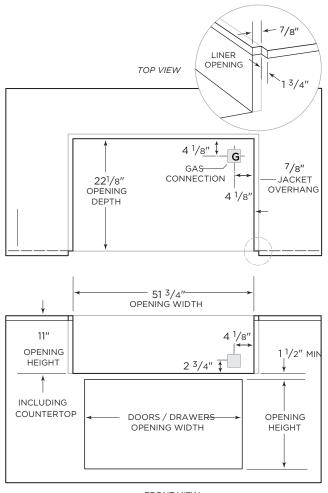

FRONT VIEW

- ✓ If using combustible material within 24" of the grill frame, you MUST use the corresponding Coyote Insulated Jacket
- Using a insulated jacket, does not waive any other standard installation procedure (ventilation, connections, etc)
- √ The jacket is designed to hang from the counter top with no support underneath
- ✓ Minimum clearance for hood to open is 2"
- If you have a wall/partition behind the grill, the minimum rear clearance to that wall should be at least 7" to allow for ventilation of the exhaust

Ventilation Requirements:

- ✓ Regardless if you are using a combustible or non-combustible building material, you must include at least two vents within the island
- ✓ These vents must be at least 20 sq. in. each and allow fresh air to move from the grill cabinet to the exterior environment.
- ✓ For a propane setup, the vents should be installed lower as propane is heavier than air.
- \checkmark For a natural gas setup, the vents should be located higher in the island, as natural gas is lighter than air.
- ✓ Do not locate the two vents on the same wall of the island. Cross ventilation is key to allow any excess heat or trapped gas to dissipate.

Important Note to Installer: This file is not intended to replace your Owners' Manual which contains specific safety requirements and consumer guidelines. Please refer to your Owners' Manual prior to installing or operating your built-in grill.

